

FLYLINKTECH V7 SV11

FLYLINKTECH Dyson V7 SV11 4000mAh Replacement Battery User Manual

Model: V7 SV11

1. PRODUCT OVERVIEW

This manual provides instructions for the FLYLINKTECH 4000mAh replacement battery designed for Dyson V7 SV11 series vacuum cleaners. It covers installation, operation, maintenance, and troubleshooting.

1.1 Compatible Models

- Dyson V7 Fluffy
- Dyson V7 Fluffy+
- Dyson V7 Absolute
- Dyson V7 Absolute Extra
- Dyson V7 Animalpro
- Dyson V7 Motorhead
- Dyson V7 Trigger
- Dyson V7 Car+Boat SV11

Note: This battery is not compatible with SV07 models, as SV07 is not a V7 series vacuum cleaner.

1.2 Package Contents

- V7 Replacement Battery x 1
- Pre-motor Filter x 1
- Post-motor Filter x 1
- Cleaning Brush x 1
- Screwdriver x 1
- User Manual (Japanese version included) x 1

充電に関する注意事項






<ul style="list-style-type: none">● 充電中: ブルーライト点灯、完全充電時にオフ● 使用時: ブルーライト点灯	 ブルーライト
<ul style="list-style-type: none">● 黄色い/赤いライトは、一時にエラーであることを示します (メッセージ: support@flylinktech.hk)	  赤いライト 黄色いライト

Image: Contents of the product package.

1.3 Key Features

- **High Capacity:** 4000mAh for extended runtime.
- **Multiple Protection Functions:** Built-in safeguards against overcurrent, overcharge, overdischarge, overheating, short circuit, and overvoltage.
- **PSE Registered:** Ensures product safety and compliance.



Image: Battery protection features.

2. INSTALLATION INSTRUCTIONS

Follow these steps to replace the battery in your Dyson V7 series vacuum cleaner:

1. Remove the dust bin from the vacuum cleaner by pulling up the top part to open it.
2. Using the provided screwdriver, remove the two screws located on the bottom of the main vacuum unit.
3. Remove the single screw from the handle section of the vacuum cleaner using the screwdriver.
4. Carefully detach the old battery.
5. Install the new FLYLINKTECH replacement battery by reversing the removal steps. Ensure all screws are securely fastened.

パッケージ付属品

V7



3 * ネジ



1*プレモーターフィルター
1*ポストモーターフィルター



1 * ブラシ
1*ドライバー



1 * ダストカバー



1 * 取扱説明書



1 * 包装箱

Image: Step-by-step battery replacement guide.

3. OPERATING INSTRUCTIONS

3.1 Initial Use and Charging

- Before first use, fully charge the new battery.
- After the battery is depleted during use, do not charge it immediately. Allow approximately 10-20 minutes for the battery to cool down before initiating charging, especially if used in Max mode.


3.2 Charging Indicator

- During charging: The blue indicator light will be on.
- When fully charged: The blue indicator light will turn off.
- Error indication: A yellow or red light indicates a temporary error. If this occurs, please contact support@flylinktech.hk.


バッテリーの取り替え方法




① 1、掃除機をゴミを取り出すモード（上部を引っ張って下が空いた状態）にします。

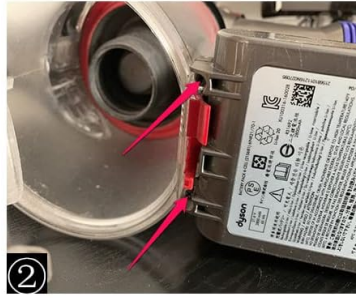

② 2、プラスドライバーで本体下部に2本のネジを外します。

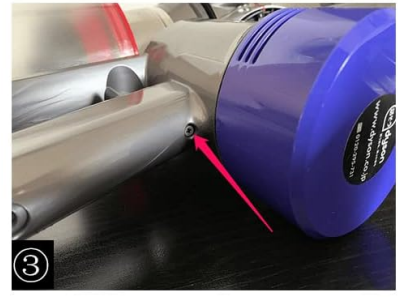

③ 3、プラスドライバーで取っ手の部分に1本のネジを外します。

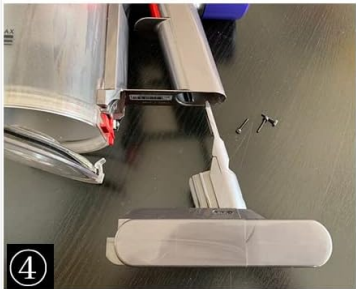

④ 4、バッテリーを外します。逆の手順で新品バッテリーをつけていけば完了です、



バッテリー寿命を保つために、バッテリーが切れた直後ではなく、本体を少し冷ましてから充電を行なってください。

Image: Charging precautions and indicator light guide.

4. MAINTENANCE

4.1 Filter Cleaning

- Wash the filters with cold water at least once a month.
- Ensure the filters are completely dry before reattaching them to the vacuum cleaner.



Image: Filter and brush cleaning.

4.2 Battery Storage

- Store the product in a cool, dry environment.
- Keep away from heat sources, fire, flammable/explosive gases, and liquids to prevent leakage, heat generation, smoke, fire, or explosion.
- Avoid storing in direct sunlight during summer, in extremely low temperatures during winter, or in places with drastic day-night temperature differences.
- When storing the battery for an extended period, ensure it is fully charged. Recharge it before reuse.
- Avoid leaving the battery completely drained or in a low-charge state for prolonged periods. For long-term storage, it is recommended to remove the battery from the vacuum cleaner and store it with a partial charge (not full) in a cool, dry place, away from extreme temperatures.
- Prevent metal objects from entering the battery box during storage, as this can cause leakage, heat, smoke, fire, or explosion.

4.3 General Precautions

- Do not disassemble, modify, or subject the battery to impact.
- Avoid over-discharging the battery (leaving it at 0% charge).

5. TROUBLESHOOTING

5.1 Indicator Light Errors

- If the battery indicator light shows yellow or red, it indicates a temporary error.
- In such cases, please contact our support team at support@flylinktech.hk for assistance.

5.2 Reduced Operating Time

- If the vacuum cleaner's operating time significantly decreases, it may indicate battery degradation.
- Ensure you are following the proper charging and storage guidelines outlined in Section 3 and 4 to maximize battery lifespan.

6. SPECIFICATIONS

Battery Type	Lithium-ion
Battery Capacity	4000 mAh
Voltage	21.6 V
Recommended Use	Vacuum Cleaner
Reusability	Rechargeable
Number of Units	1
Battery Weight	500 g
Product Dimensions	12.2 x 8.1 x 13.1 cm

7. WARRANTY AND SUPPORT

7.1 Manufacturer Warranty

This product comes with a reliable 12-month warranty period from the date of purchase.

7.2 Customer Support

- We offer 24-hour after-sales service support.
- A 30-day free return and exchange policy is available.
- For any inquiries or issues during use, please do not hesitate to contact us at support@flylinktech.hk.
- Contact information is also provided in the included user manual. If the manual is misplaced, contact details can often be found on the product's online page.