

[Manuals.plus](#) /

› [MGLSDeet](#) /

› MGLSDeet Electric Spin Scrubber User Manual

MGLSDeet ANS-8038

MGLSDeet Electric Spin Scrubber User Manual

Model: ANS-8038

Brand: MGLSDeet

INTRODUCTION

The MGLSDeet Electric Spin Scrubber is a versatile and efficient cleaning tool designed to simplify your household chores. This cordless power scrubber features a rechargeable battery, adjustable length, and multiple interchangeable brush heads, making it ideal for cleaning various surfaces in your bathroom, kitchen, and more. Its ergonomic design helps reduce strain, allowing you to clean high and low areas without excessive bending.

INCLUDED COMPONENTS

Your MGLSDeet Electric Spin Scrubber package includes the following items:

- 1 x Electric Spin Scrubber Unit
- 1 x Type-C Charging Cable
- 1 x User Manual (this document)
- 1 x Magic Stick Brush Head (main large brush)
- 8 x Replacement Brush Heads (various types for different cleaning needs)
- 1 x Hook and Storage Net Bag



Image: All components of the MGLSDeet Electric Spin Scrubber, including the main unit, extension poles, charging cable, and various brush heads.

Powerful Torque and Power

2 Speed Gears - 420RPM/360RPM



**90 mins
working time**



**3~4
hours to charge**



**45W power
2500mah battery**



Image: A selection of the eight replaceable brush heads, including flat brushes, corner brushes, and pads for different surfaces like tile, oven, and car.

SETUP AND ASSEMBLY

Charging the Scrubber:

Before first use, fully charge the electric spin scrubber. Connect the Type-C charging cable to the charging port on the scrubber and plug the other end into a compatible USB power adapter. The battery indicator lights will show charging progress. A full charge takes approximately 3 hours and provides about 90 minutes of continuous use.

Adjustable Angle

Easy to clean different heights,
toggle the adjustment switch,
can adjust 6 angles

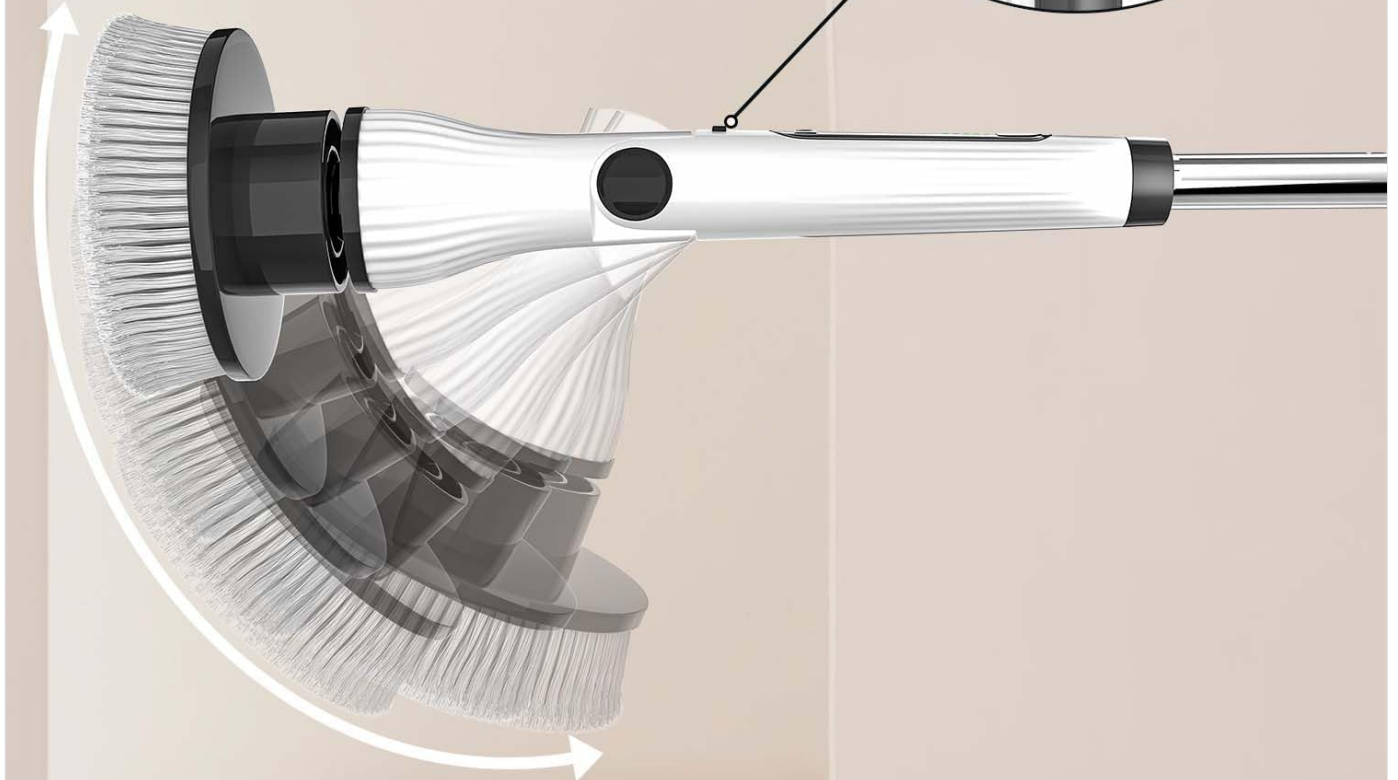


Image: The scrubber unit displaying its battery level indicators and the Type-C charging port.

Attaching Brush Heads:

To attach a brush head, align the head with the main unit's rotating base and press firmly until it clicks into place. To remove, simply pull the brush head off.

Assembling the Extension Pole:

For extended reach, attach the stainless steel extension poles. The scrubber can be used handheld (approx. 14.6 inches), with one pole (approx. 44.5 inches), or with both poles for maximum length (approx. 55.2 inches). To assemble, align the connection points and twist to secure. Ensure all connections are tight before use.



Image: The scrubber demonstrating its adjustable length feature, from compact handheld to full extension with two poles.

Your browser does not support the video tag.

Video: This video demonstrates the assembly of the extension poles and the attachment of various brush heads to the MGLSDeet Electric Spin Scrubber, followed by examples of its use in different cleaning scenarios.

OPERATING INSTRUCTIONS

Powering On/Off and Speed Adjustment:

Press the power button to turn the scrubber on. It features two speed options: a first speed of 420 revolutions per minute (r/min) for tougher stains and a second speed of 360 r/min for general cleaning or delicate surfaces. Press the power button again to switch between speeds. Press and hold the power button to turn the unit off.

Adjusting the Angle:

The scrubber head can be adjusted to 6 different angles, ranging from 100° to 180°. This flexibility allows you to reach awkward spots and clean effectively without straining. Locate the angle adjustment switch on the unit and toggle it to set the desired angle.



Image: The scrubber head demonstrating its ability to adjust to various angles for improved reach and cleaning efficiency.

Recommended Brush Head Usage:

- **Toilet Brush (with long rod):** Ideal for deep cleaning toilets.
- **Mop:** Suitable for floor and car cleaning.
- **Large Flat Brush:** Excellent for cleaning tiles, ovens, and stove tops.
- **Small Flat Brush:** Perfect for tables, chairs, and cabinets.
- **Cone Brush:** Great for cleaning window sills and tight, hard-to-reach places.
- **Sponge Brush:** For gentle scrubbing on delicate surfaces.
- **Fibre Sponge:** For more abrasive cleaning on tough grime.
- **Car Brush:** Specifically designed for vehicle exteriors.
- **Cloth Brush & Wool Cloth Brush:** For polishing and gentle cleaning.

CLEANING AND MAINTENANCE

Waterproof Design:

The MGLSDeet Electric Spin Scrubber features a highly sealed waterproof design (IPX6 level), making it safe for use in wet conditions like showers and sinks. However, it is crucial **not to totally immerse the scrubber in water**. Avoid opening the waterproof rubber plug of the charging port when the unit is wet or in use.

IPX6 Waterproof level

Electric spin scrubber can clean the sink,
and the scrubber can be washed with running water.

Be careful not to open the waterproof rubber
plug of the charging port.



Image: The scrubber demonstrating its water resistance, suitable for wet cleaning environments.

Cleaning the Scrubber:

After use, remove the brush head and rinse it thoroughly under running water. For the main scrubber unit, use a damp rag to wipe it clean. Do not use abrasive cleaners or immerse the main unit in water.

Storage:

Store the scrubber and its accessories in a dry place, away from direct sunlight and extreme temperatures. Use the provided hook and storage net bag for organized storage of brush heads.

TROUBLESHOOTING

If you encounter any issues with your MGLSDeet Electric Spin Scrubber, please refer to the following common solutions:

- **Scrubber not turning on or low power:** Ensure the unit is fully charged. Connect it to the charger and check if the battery indicator lights illuminate. If the unit does not charge, ensure the charging cable and adapter are functioning correctly.
- **Brush head not spinning or spinning slowly:** Check if the brush head is securely attached to the main unit. Ensure there is no debris or hair tangled around the rotating mechanism. If the battery is low, the motor's performance may be reduced; recharge the unit.
- **Reduced cleaning effectiveness:** Ensure you are using the appropriate brush head for the surface and type of stain. For stubborn stains, use the higher speed setting. Consider using a suitable cleaning solution in conjunction with the scrubber.
- **Unit stops unexpectedly:** This may indicate a low battery. Recharge the unit. If the issue persists after a full charge, contact customer support.

For persistent issues not covered here, please refer to the official user manual PDF or contact MGLSDeet customer support.

SPECIFICATIONS

Feature	Detail
Brand	MGLSDeet
Model Number	ANS-8038
Color	White Lz52
Product Dimensions	55"L x 4"W x 7.8"H (fully extended)
Item Weight	1.2 Pounds
Handle Material	Stainless steel + ABS
Battery	2500mAh Lithium Ion (included)
Charging Time	Approx. 3 hours
Working Time	Approx. 90 minutes (fully charged)
Speed Options	2 speeds: 420 r/min and 360 r/min

Adjustable Angle	6 angles (100° to 180°)
Waterproof Level	IPX6
Included Brush Heads	Magic stick brush head, 8 replacement brush heads (various types)
UPC	793869626244

WARRANTY AND SUPPORT

Warranty Information:

Specific warranty details for the MGLSDeet Electric Spin Scrubber are typically provided with your purchase documentation. Please refer to the warranty card or product packaging for terms and conditions. Generally, products are covered against manufacturing defects for a specified period from the date of purchase.

Customer Support:

For any questions, technical assistance, or warranty claims, please contact MGLSDeet customer support through the retailer where you purchased the product or visit the official MGLSDeet store page on Amazon: [MGLSDeet Store](#).

An official Installation Manual (PDF) is also available for download:[Download PDF Manual](#).

© 2025 MGLSDeet. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question