

[Manuals.plus](#) /

> [MUKIKIM](#) /

> MUKIKIM Rock and Roll It Micro Piano Keychain Instruction Manual

MUKIKIM MUK-PNBW-MINI

MUKIKIM Rock and Roll It Micro Piano Keychain

MODEL: MUK-PNBW-MINI

Introduction

The MUKIKIM Rock and Roll It Micro Piano Keychain is a portable, flexible silicone electronic keyboard designed for musical enjoyment on the go. This miniature piano features 12 keys and a built-in speaker, making it suitable for both children and musicians. Its compact design allows it to be easily attached to a backpack or carried in a pocket.

Product Features

- **Portable Design:** Miniature piano pad with a clip keychain for easy transport.
- **Flexible Silicone:** Constructed from flexible silicone for durability and portability.
- **12 Keys:** Features 12 playable keys for creating melodies.
- **Built-in Speaker:** Includes an integrated speaker for audio output.
- **Battery Included:** Comes with a pre-installed battery for immediate use.
- **Educational Value:** Promotes fine motor skills, dexterity, and hand-eye coordination.
- **Versatile Use:** Can be used by children for play or by musicians as a portable tool for composing or tuning.

Setup

1. **Activate Battery:** Locate the battery compartment. Gently pull out the plastic tab to activate the included battery.
2. **Power On:** Slide the power switch to the "ON" position. The device is now ready for use.



Image: Pulling the plastic tab from the battery compartment to activate the device.

Operating Instructions

1. **Playing Notes:** Press the individual keys on the silicone piano pad to produce musical notes through the built-in speaker.
2. **Portability:** Utilize the attached keychain clip to secure the Micro Piano to a backpack, lanyard, or other personal items for convenient access and play anywhere.
3. **Power Off:** When not in use, slide the power switch to the "OFF" position to conserve battery life.



Image: Demonstrating how to play notes on the Micro Piano Keychain.



Keychain Clip

Image: The Micro Piano Keychain attached to a backpack for portability.

Video: An official demonstration of the Rock And Roll It Micro Pianos & Drums, showcasing their features and playability. This video highlights the compact size and sound of the instruments.

Battery Information

The MUKIKIM Rock and Roll It Micro Piano Keychain requires one (1) CR2032 Lithium-Ion battery, which is included with the product. Ensure the plastic tab is removed from the battery compartment before first use. When replacing the battery, use a CR2032 type and dispose of the old battery responsibly according to local regulations.

Care and Maintenance

- **Cleaning:** Wipe the silicone surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the Micro Piano in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Damage:** Do not bend or twist the silicone excessively. Keep away from sharp objects to prevent punctures.

Troubleshooting

- **No Sound:** Ensure the power switch is in the "ON" position. Check if the battery tab has been removed. If the issue persists, the battery may need replacement.
- **Keys Not Responding:** Ensure the silicone surface is clean and free from debris. Press keys firmly.

Specifications

Brand:	MUKIKIM
Model Number:	MUK-PNBW-MINI
Material Type:	Silicone
Number of Keys:	12
Battery Type:	1 CR2032 Lithium-Ion (included)
Item Dimensions:	2.4 x 6.8 x 0.5 inches
Item Weight:	0.09 Kilograms
Age Range:	Big Kid (Manufacturer Minimum Age: 72 months)
Operation Mode:	Manual

Warranty and Support

For warranty information or product support, please refer to the packaging or contact MUKIKIM customer service directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question