

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chefman](#) /

› [CHEFMAN 4.5-Quart Digital Air Fryer Instruction Manual](#)

Chefman RJ38-SQ-45T-BLACK

CHEFMAN 4.5-Quart Digital Air Fryer Instruction Manual

Model: RJ38-SQ-45T-BLACK | Brand: Chefman

1. INTRODUCTION

Welcome to the world of healthier cooking with your new Chefman 4.5-Quart Digital Air Fryer. This appliance allows you to enjoy fried foods with significantly less oil, providing crispy and delicious results. Its compact design and user-friendly features make it a valuable addition to any kitchen.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances. This section provides general safety guidelines. For detailed safety information, please refer to the full safety manual included with your product.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.

3. PARTS AND FEATURES

Your Chefman 4.5-Quart Digital Air Fryer is designed for ease of use and efficient cooking. Key components include:

- **Digital Touch Screen:** For easy control of temperature and time.
- **4 Cooking Functions:** Pre-set options for common dishes.

- **60-Minute Timer:** With automatic shut-off for convenience and safety.
- **4.5-Quart Nonstick Basket:** Removable and dishwasher safe for easy cleaning.
- **LED Shake Reminder:** Ensures even cooking results.
- **Stainless Steel Exterior:** Durable and sleek design.

Product Dimensions



The air fryer measures approximately 10.5 inches (D) x 12 inches (W) x 12.75 inches (H). This compact size is ideal for

various kitchen countertops.

4. INITIAL SETUP

Before using your air fryer for the first time, please follow these steps:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Wipe the exterior with a damp cloth.
3. Wash the removable basket and crisping tray with hot, soapy water. Rinse and dry thoroughly.
4. Ensure the appliance is placed on a stable, heat-resistant surface away from walls or other appliances to allow for proper airflow.

5. OPERATING INSTRUCTIONS

Operating your Chefman Air Fryer is straightforward. Follow these steps for optimal results:

1. Place food in the air fryer basket. Do not overfill.
2. Slide the basket back into the air fryer until it clicks into place.
3. Plug the air fryer into a power outlet. The digital display will illuminate.
4. Use the **TEMP** and **TIME** buttons to adjust the cooking temperature (200-400°F) and time (up to 60 minutes) using the plus (+) and minus (-) controls.
5. Alternatively, select one of the pre-set cooking functions for common items like fries, chicken, meat, or fish.
6. Press the **START** button to begin cooking.
7. During cooking, an LED shake reminder will prompt you to shake the basket for even crisping.
8. The air fryer will automatically shut off when the timer expires.

Product Overview Video

Your browser does not support the video tag. Please update your browser to view this content.

This video provides a brief overview of the Chefman 4.5-Quart Digital Air Fryer, demonstrating its key features and ease of use.

6. COOKING GUIDE

The Chefman Air Fryer is versatile for various dishes. Here are some general tips:

- For best results, ensure food is in a single layer in the basket. If cooking larger quantities, cook in batches.
- Shake the basket periodically, especially when cooking items like fries or nuggets, to ensure even browning and crisping. The LED shake reminder will assist you.
- The air fryer is excellent for reheating leftovers, restoring their original crispy texture.
- Experiment with different recipes. Many air fryer recipes are available online and in cookbooks.



The image shows the Chefman Air Fryer in use, with cooked salmon in the basket and on plates, demonstrating its capability for preparing healthy meals.

7. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your air fryer:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. The nonstick air fryer basket is dishwasher safe for convenient cleaning.
3. For stubborn food residue, soak the basket in warm, soapy water before washing.
4. Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
5. Ensure all parts are completely dry before storing or next use.

8. TROUBLESHOOTING

If you encounter any issues with your Chefman Air Fryer, refer to this section for common solutions. For problems not

listed here, please contact customer support.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in or power outage.	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker.
Food is not crispy.	Basket is overcrowded or insufficient shaking.	Cook in smaller batches. Shake the basket more frequently when prompted by the LED reminder.
White smoke coming from appliance.	Grease residue from previous use or high-fat food.	Clean the basket and interior thoroughly. For high-fat foods, drain excess fat during cooking.

9. SPECIFICATIONS

Feature	Detail
Model Name	Air Fryer 4.6 Qt
Capacity	4.6 Quarts
Product Dimensions	10.5"D x 12"W x 12.75"H
Material	Stainless Steel
Output Wattage	1500 Watts
Voltage	120 Volts
Control Method	Touch
Max Temperature Setting	400 Degrees Fahrenheit
Nonstick Coating	Yes
Dishwasher Safe Parts	Basket
Item Weight	8.82 Pounds
UPC	816458024655

10. WARRANTY AND SUPPORT

Your Chefman 4.5-Quart Digital Air Fryer comes with a **1-year hassle-free warranty** provided by Chefman. For warranty claims, product support, or additional information, please visit the official Chefman website or contact their customer service department.

For further assistance, you may also refer to the PDF User Guide, QuickStart Guide, and Recipe Book available on the product's support page.