

[Manuals.plus](#) /

› [BIUBLE](#) /

› BIUBLE 5000A Peak Car Jump Starter User Manual

BIUBLE JS001

BIUBLE 5000A Peak Car Jump Starter User Manual

Model: JS001

PRODUCT OVERVIEW

The BIUBLE 5000A Peak Car Jump Starter is a compact and powerful device designed to start 12-volt automotive vehicles, including cars, trucks, motorcycles, boats, RVs, ATVs, UTVs, lawnmowers, and snowmobiles. With a 5000A peak current, it can provide up to 40 jump starts on a single charge, supporting gasoline engines up to 7.0 liters and diesel engines up to 5.5 liters. It functions reliably even in extreme temperatures ranging from -4°F to 140°F.



Figure 1: BIUBLE 5000A Peak Car Jump Starter with included smart jumper cables.

Included Components

- 1 x BIUBLE Portable Car Jump Starter
- 1 x Smart Jumper Cable
- 1 x USB Type-C Charging Cable
- 1 x User Manual



Figure 2: Detailed view of the jump starter's components, including power button, battery indicator, USB outputs, Type-C input, and LED flashlight.

SETUP AND INITIAL USE

Initial Charging

Before first use, fully charge the jump starter. Although it may show a full charge upon receipt, a complete initial charge is recommended for optimal performance and battery longevity. Use a 5V/2A adapter or higher for efficient charging via the USB Type-C input.

12800mAh Fast Charger



Figure 3: The jump starter can also function as a portable power bank, charging various mobile devices.

OPERATING INSTRUCTIONS

Jump Starting a Vehicle

1. Ensure the jump starter has at least 25% charge.
2. Insert the plug of the smart jumper cable into the jump start port on the booster.
3. Connect the red (+) clamp to the positive terminal of the vehicle's battery.
4. Connect the black (-) clamp to the negative terminal of the vehicle's battery.
5. Once connected, the smart jumper cable's indicator light will show readiness.
6. Start the vehicle's engine.

7. After the engine starts, immediately remove the smart jumper cable from the jump starter, then disconnect the clamps from the vehicle battery.



Figure 4: Visual guide for the jump-starting process, from connecting the cable to starting the vehicle.

Safety Features

The BIUBLE jump starter is equipped with 8 types of protection to ensure safe operation and prevent misuse, including spark-proof, reverse polarity protection, over-current protection, high-temperature protection, and over-load protection. An audible buzz and flashing lights will notify you of incorrect usage. The hardened plastic and rubber corners enhance the device's durability and safety.

Spark Proof

Reverse Polarity Protection



Figure 5: The smart clamp provides multiple safety protections, including spark-proof and reverse polarity protection.

Using as a Portable Power Bank

The jump starter features two USB outputs (5V/3A and 5V/2.4A) for charging mobile devices such as cellphones and tablets at high speeds.

LED Flashlight Functions

The built-in LED flashlight offers three modes for various situations:

- **Lighting:** Standard illumination.
- **Strobe:** Flashing light for signaling or attracting attention.
- **SOS:** Morse code signal for emergency situations.

3 Models LED Light Function



Lighting



Strobe



SOS



Figure 6: The LED flashlight offers Lighting, Strobe, and SOS modes for versatile use.

MAINTENANCE

To maintain the battery's health and prolong the lifespan of your portable jump starter, it is recommended to recharge the unit every 2-3 months, even if it has not been used. This activates the battery and prevents deep discharge.

TROUBLESHOOTING

If the jump starter does not operate as expected, consider the following:

- **No Power/Low Charge:** Ensure the unit is fully charged. The jump starter should have at least 25% power to effectively start a vehicle.
- **Incorrect Connection:** Check that the smart jumper cable is correctly inserted into the jump starter and that the red (+) and black (-) clamps are connected to the correct battery terminals. The smart cable's indicator will signal errors.
- **Vehicle Battery Issues:** If the vehicle battery is completely dead or severely damaged, the jump starter may not be able to provide sufficient power. Consult a professional mechanic.
- **Extreme Temperatures:** While designed for a wide temperature range, extreme cold can affect battery performance. Ensure the unit is within its operating temperature range (-4°F to 140°F).
- **Unit Malfunction:** If issues persist despite following instructions, contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	BIUBLE
Model	JS001
Peak Output Current	5000 Amps
Engine Compatibility (Gas)	Up to 7.0 Liters
Engine Compatibility (Diesel)	Up to 5.5 Liters
USB Output 1	5V/3A
USB Output 2	5V/2.4A
USB Type-C Input	5V/2A (or higher recommended)
Operating Temperature	-4°F to 140°F (-20°C to 60°C)
Item Weight	1.76 pounds (800 Grams)
Product Dimensions	10"D x 12"W x 5"H
Batteries	4 Lithium Polymer batteries (included)

WARRANTY AND SUPPORT

BIUBLE provides 2-Year Technical Support and Warranty for this product. For any problems or inquiries, please contact our customer service team. Refer to the contact information provided in the included user manual or on the official BIUBLE website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08GYFP5JK>

More documents and user manuals: <https://manuals.plus/>