

Sona SOF 6053

Sona SOF 6053 14-inch Power Desk Fan

INSTRUCTION MANUAL

1. Important Safety Instructions

Please read all instructions carefully before using this appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious personal injury.

- Ensure the power supply voltage matches the rating label on the fan.
- Do not operate the fan with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Unplug the fan from the power outlet when not in use, before cleaning, or before moving it.
- Do not insert fingers or any objects through the grille when the fan is operating.
- Keep the fan away from water or other liquids. Do not use it in wet or damp environments.
- Place the fan on a stable, flat surface to prevent it from tipping over.
- Do not cover the fan or obstruct its airflow during operation.
- This appliance is for indoor use only.

2. Product Overview

The Sona SOF 6053 is a 14-inch power desk fan designed for efficient cooling in home or office environments. It features a durable construction and user-friendly controls.

- **Motor:** 100% Full copper ball bearing motor for longevity and performance.
- **Blades:** 4-bladed lightweight alloy fan blade for strong airflow.
- **Coating:** Anti-rust coating for enhanced durability.
- **Speed Settings:** 3-speed selection for customized cooling.
- **Oscillation:** Left-right oscillating function to cover a wider area.



Figure 1: Front view of the Sona SOF 6053 14-inch Power Desk Fan. This image shows the fan's protective grille, four blades, and the central Sona logo.



Figure 2: Rear view of the Sona SOF 6053 14-inch Power Desk Fan. This image displays the motor housing, the rear grille, and the attached power cord with a 3-pin plug.

3. Setup

The Sona SOF 6053 desk fan requires no assembly. It is ready for use directly out of the box.

1. **Placement:** Place the fan on a firm, level surface such as a desk, table, or floor. Ensure there is adequate space around the fan for proper air circulation and to prevent obstruction of the grilles.

2. **Power Connection:** Insert the power plug securely into a standard electrical outlet. Ensure the outlet voltage matches the fan's specifications.

4. Operating Instructions

The fan is operated using the control knob located on the motor housing at the rear of the unit.



Figure 3: Close-up of the control knob and oscillation pin. The knob allows selection of fan speeds, and the pin controls oscillation.

1. **Power On/Off and Speed Selection:** Rotate the control knob to select the desired fan speed:
 - **'0' (Off):** Turns the fan off.
 - **'1' (Low):** Activates the fan at low speed.
 - **'2' (Medium):** Activates the fan at medium speed.
 - **'3' (High):** Activates the fan at high speed.
2. **Oscillation Function:** To activate the left-right oscillation, push down the oscillation pin located on top of the motor housing. To stop oscillation and fix the fan in one direction, pull the oscillation pin up.

5. Maintenance

Regular cleaning and proper storage will help maintain the performance and lifespan of your fan.

- **Cleaning:**
 - Always unplug the fan before cleaning.
 - Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
 - For dust accumulation on the grilles, use a vacuum cleaner with a brush attachment or compressed air.
 - Ensure the fan is completely dry before plugging it back in and operating.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

6. Troubleshooting

If you encounter issues with your Sona SOF 6053 fan, refer to the following common problems and solutions:

- **Fan does not turn on:**
 - Check if the power cord is securely plugged into a working electrical outlet.
 - Ensure the control knob is set to a speed setting (1, 2, or 3) and not '0' (Off).
 - Verify that the power outlet is functional by plugging in another appliance.
- **Weak airflow:**
 - Ensure the fan grilles are not obstructed by dust or other objects. Clean the grilles if necessary.
 - Increase the fan speed setting using the control knob.
- **Fan is making unusual noise:**
 - Ensure the fan is placed on a stable, flat surface.
 - Check for any loose parts or foreign objects caught in the fan blades or grilles.
 - If the noise persists and is significant, discontinue use and contact customer support.

For problems not listed here, or if troubleshooting steps do not resolve the issue, please contact Sona customer support.

7. Specifications

Detailed technical specifications for the Sona SOF 6053 14-inch Power Desk Fan.

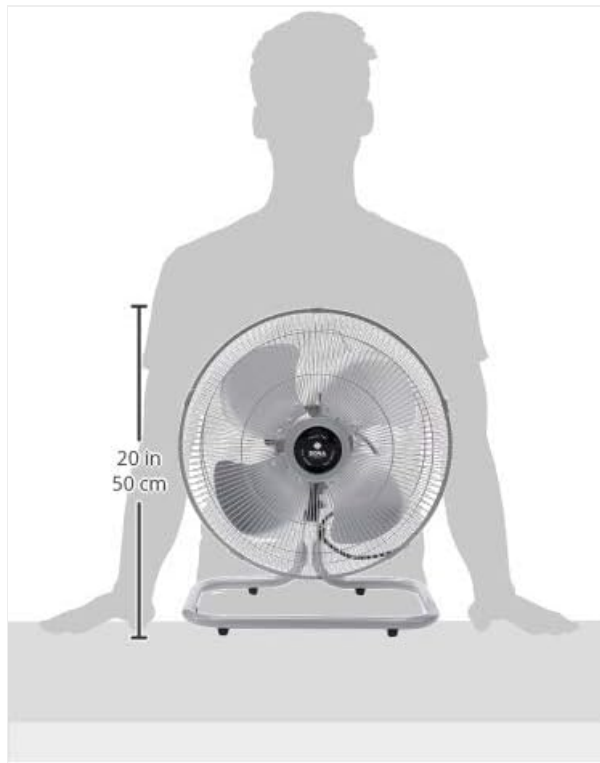


Figure 4: Diagram illustrating the approximate dimensions of the Sona SOF 6053 fan, showing a height of 20 inches (50 cm).

Feature	Specification
Brand	Sona
Model Number	SOF 6053
Electric Fan Design	Table Fan
Colour	Grey
Power Source	Corded Electric
Wattage	45 watts
Number of Speeds	3
Number of Blades	4
Material	Copper (Motor)
Product Dimensions (D x W x H)	16.3D x 18.6W x 10H centimetres
Special Features	Oscillating, Anti-rust coating
Indoor/Outdoor Usage	Indoor

8. Warranty and Support

Your Sona SOF 6053 14-inch Power Desk Fan comes with a manufacturer's warranty.

- **Warranty:** This product is covered by a **5 Years Warranty** from the date of purchase. Please retain

your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

- **Customer Support:** For technical assistance, warranty claims, or any other inquiries, please contact Sona customer service through their official website or the contact information provided with your purchase documentation.