

[Manuals.plus](#) /

› [Bosch Home Appliances](#) /

› Bosch SPV2HKX41E Series 2 Smart Fully Integrated Dishwasher User Manual

Bosch Home Appliances SPV2HKX41E

Bosch SPV2HKX41E Series 2 Smart Fully Integrated Dishwasher User Manual

Model: SPV2HKX41E | Brand: Bosch Home Appliances

1. INTRODUCTION

This user manual provides comprehensive instructions for the installation, operation, and maintenance of your Bosch SPV2HKX41E Series 2 Smart Fully Integrated Dishwasher. To ensure safe and efficient use, please read this manual thoroughly before operating the appliance and keep it for future reference.



BOSCH



Program

Eco

Auto



50°

45°-65°

70°

65°



Favourite



h.



Speed+

Perfect



Start

Silence

Reset 4 sec.

Setup 3 sec. Machine Care

Figure 1: Bosch SPV2HKX41E Dishwasher with door open, revealing the upper and lower baskets and cutlery tray.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance:

- Read all instructions before use.
- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating or the door is open.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Sharp items should be loaded with handles up to reduce the risk of injury.
- Do not touch the heating element during or immediately after use.
- The AquaStop system provides protection against water damage. However, it is recommended to turn off the water supply if the appliance will be unused for an extended period.

3. PRODUCT FEATURES

The Bosch SPV2HKX41E dishwasher is equipped with advanced features designed for optimal cleaning and user convenience:

- **Extra Dry:** An optional function for thorough drying, especially for difficult-to-dry loads.
- **InfoLight:** A red light spot projected onto the floor indicates whether the appliance is operating.
- **AquaStop:** Bosch's guarantee against water damage for the lifetime of the appliance.
- **Home Connect:** Networked Bosch home appliances for easier daily life, allowing remote control and monitoring via an app.
- **Silence on demand:** Noise reduction for up to 30 minutes, available anytime via the Home Connect app.
- **Favorite Program:** Personalize and save your preferred settings for quick access with a single button press.
- **Automatic Programs:** Achieve optimal washing results automatically by sensing the load's soil level.
- **VarioBaskets:** Flexible basket design for versatile loading options, including a cutlery basket.



Figure 2: The InfoLight feature, a red light spot on the floor, indicating the dishwasher's operational status.



Figure 3: Close-up view of the dishwasher's intuitive control panel, featuring program selection and function buttons.

4. SETUP AND INSTALLATION

The Bosch SPV2HKX41E is a fully integrated dishwasher designed to blend seamlessly with your kitchen cabinetry. Professional installation is highly recommended to ensure proper fit and function.

4.1 Dimensions and Niche Requirements

Before installation, ensure your kitchen niche meets the required dimensions:

- Appliance Dimensions (H x W x D): 81.5 x 44.8 x 55 cm
- Niche Dimensions (H x W x D): 81.5-87.5 x 45 x 55 cm

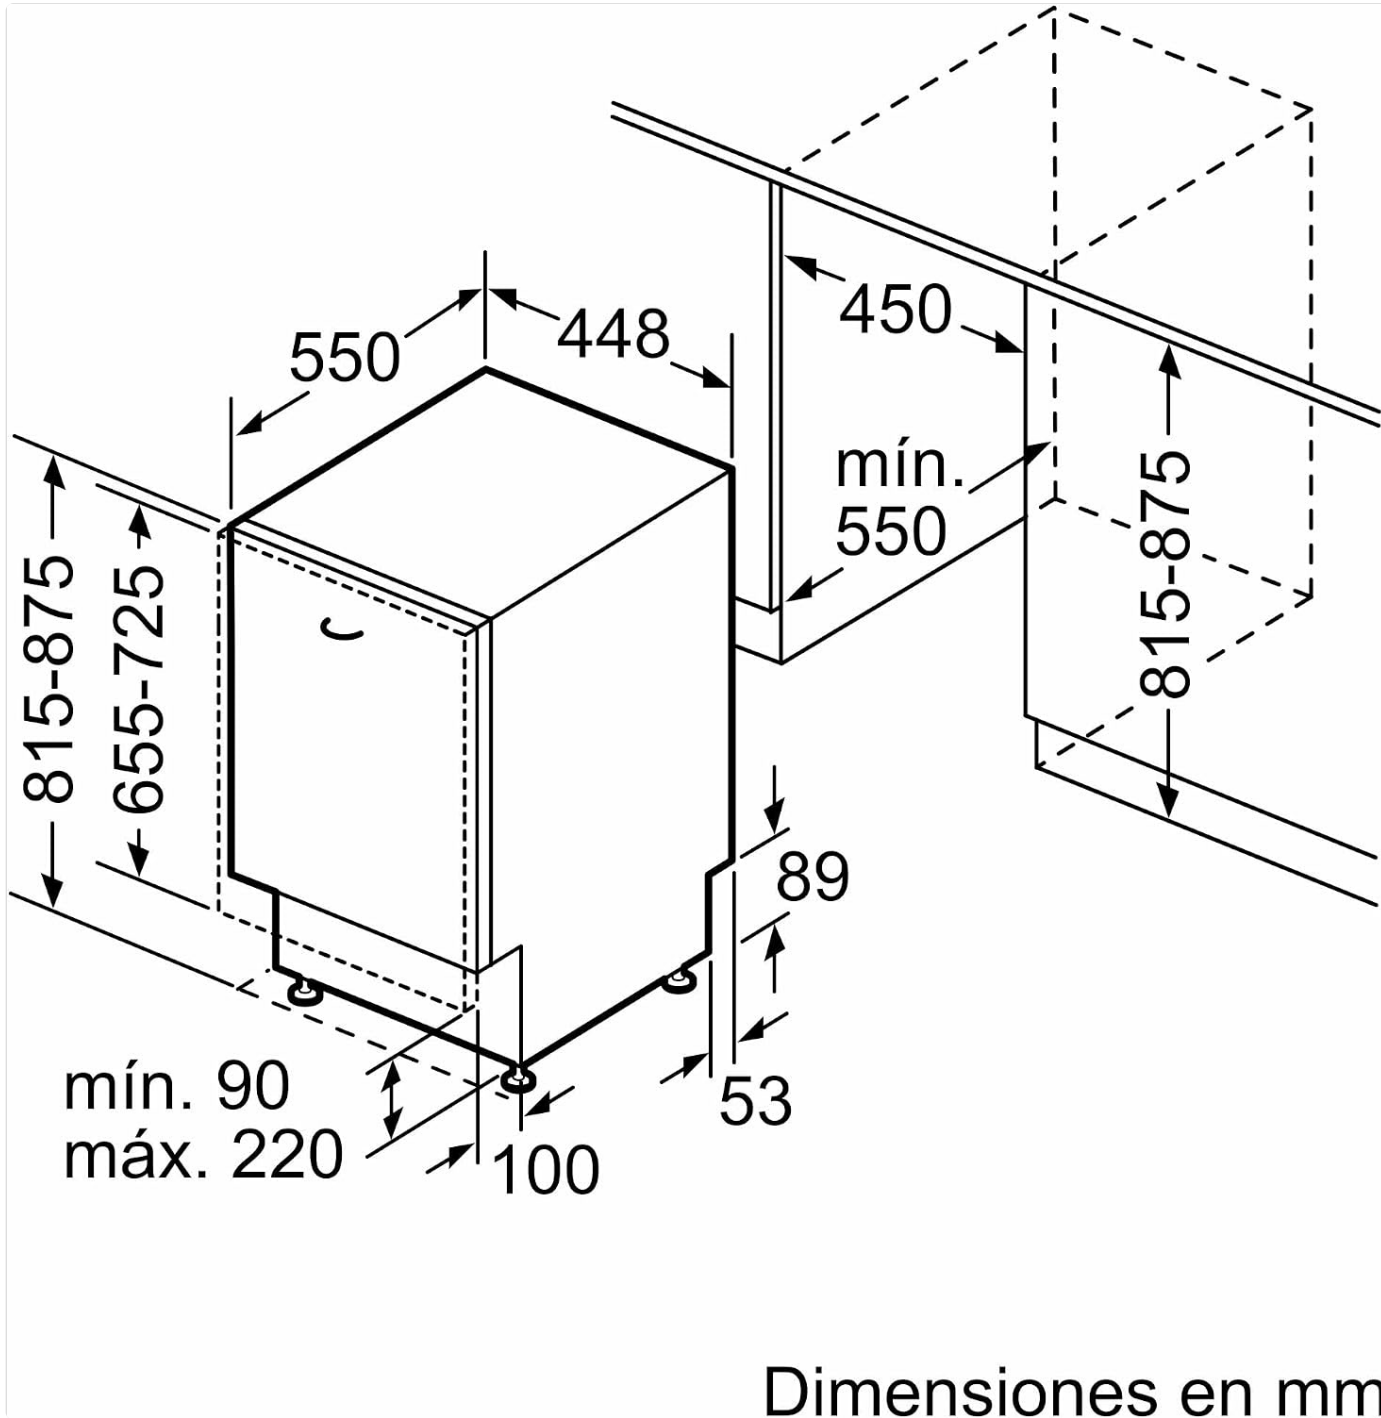



Figure 4: Detailed dimensional drawing for installation, showing appliance and niche measurements.

4.2 Electrical and Water Connections

Ensure that electrical and water connections are made according to local regulations and the appliance's specifications. The dishwasher operates on 240V and has a power consumption of 2400 Watts. The AquaStop hose provides integrated

water safety.

dimensiones en mm

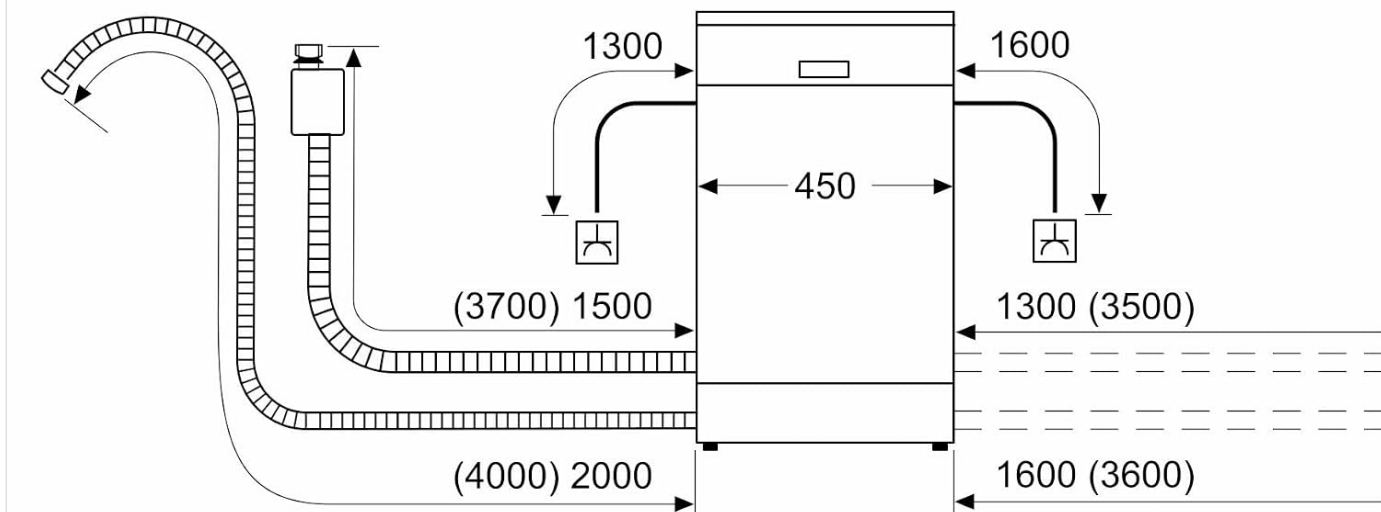

enchufe

() valores con juego de prolongación

Figure 5: Connection diagram showing recommended distances for water inlet, drain, and electrical outlet.

4.3 Cabinet Door Installation

As a fully integrated model, a custom cabinet door (not included) must be attached to the front of the dishwasher. Follow the provided installation template and instructions carefully for precise alignment and secure mounting.



Figure 6: The dishwasher seamlessly integrated into kitchen furniture, demonstrating its fully concealed design.

5. OPERATING INSTRUCTIONS

5.1 Loading the Dishwasher

Proper loading ensures optimal cleaning and drying results. Utilize the flexible basket system for various items.

- **Lower Basket:** Ideal for plates, large bowls, pots, and pans. Ensure items do not block the spray arms.
- **Upper Basket:** Suitable for glasses, cups, smaller bowls, and delicate items. The height can often be adjusted.
- **Cutlery Basket:** Place cutlery with handles down for better cleaning, except for knives and other sharp items which should be placed handles up for safety.



Figure 7: Example of a properly loaded lower basket with plates and a pot, ensuring efficient water circulation.

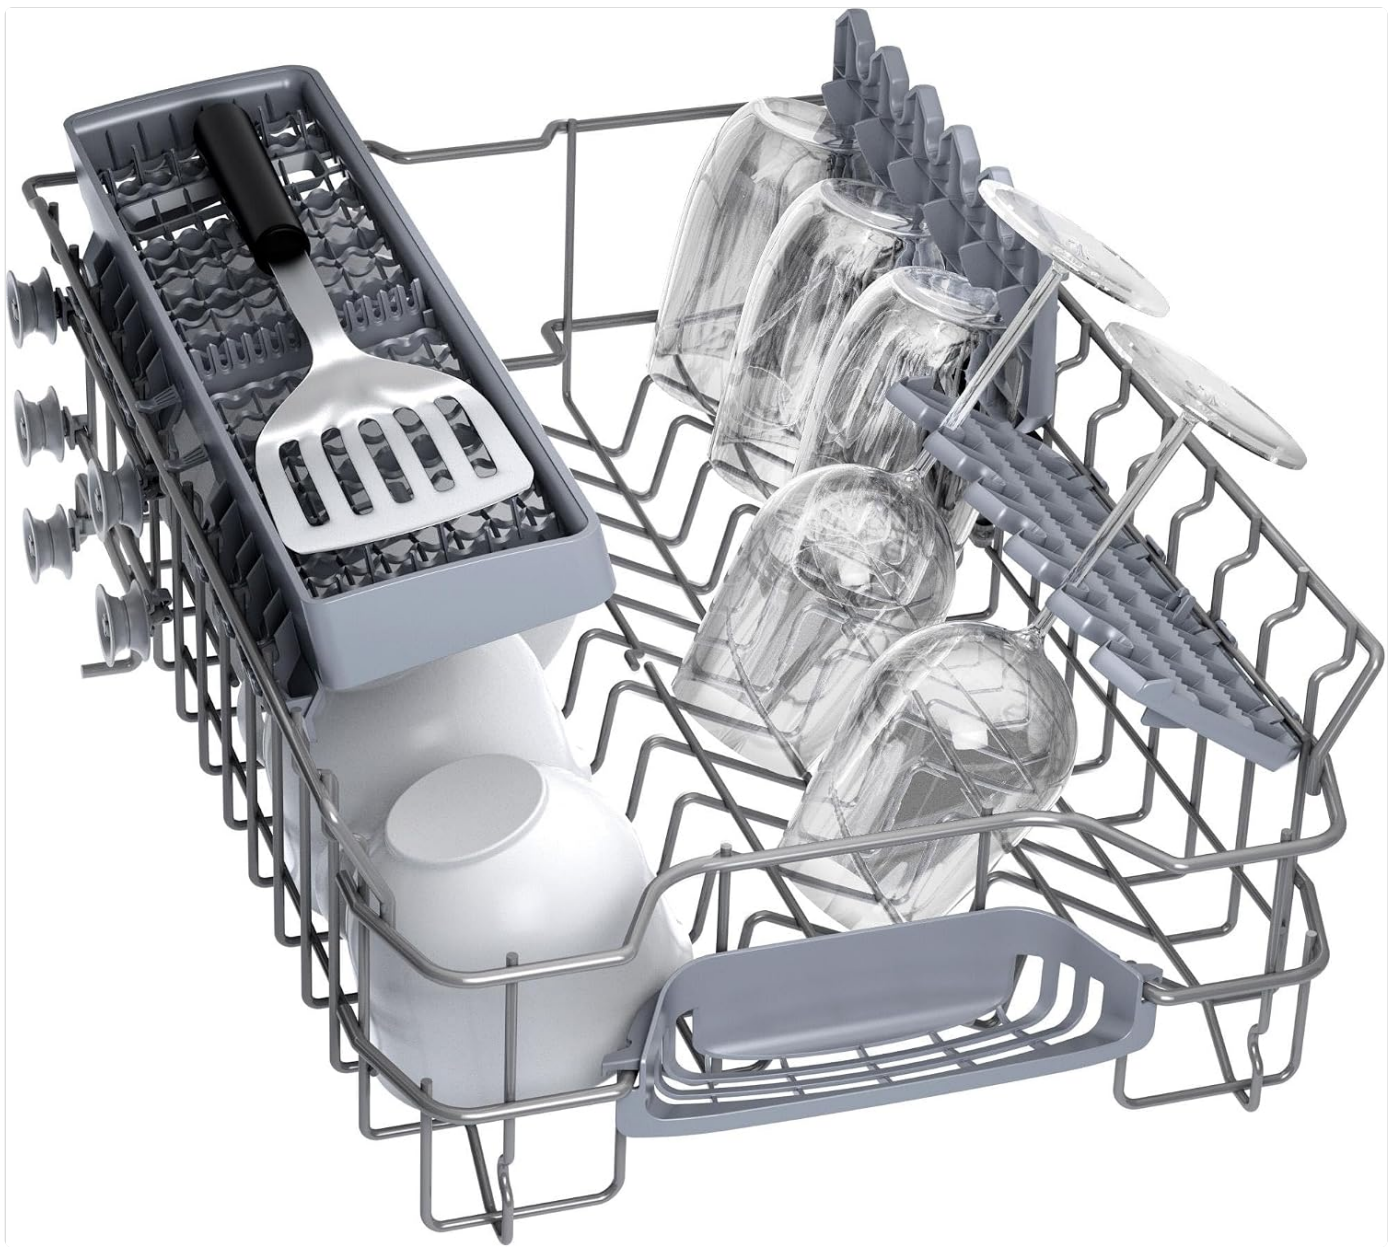


Figure 8: Example of a loaded upper basket, demonstrating space for glasses and smaller items, including a spatula.



Figure 9: Full interior view of the dishwasher with both baskets pulled out, highlighting the flexible loading options.

5.2 Adding Detergent and Rinse Aid

Use only automatic dishwasher detergent. Fill the detergent dispenser before each wash cycle. Check the rinse aid dispenser regularly and refill as needed for streak-free drying.

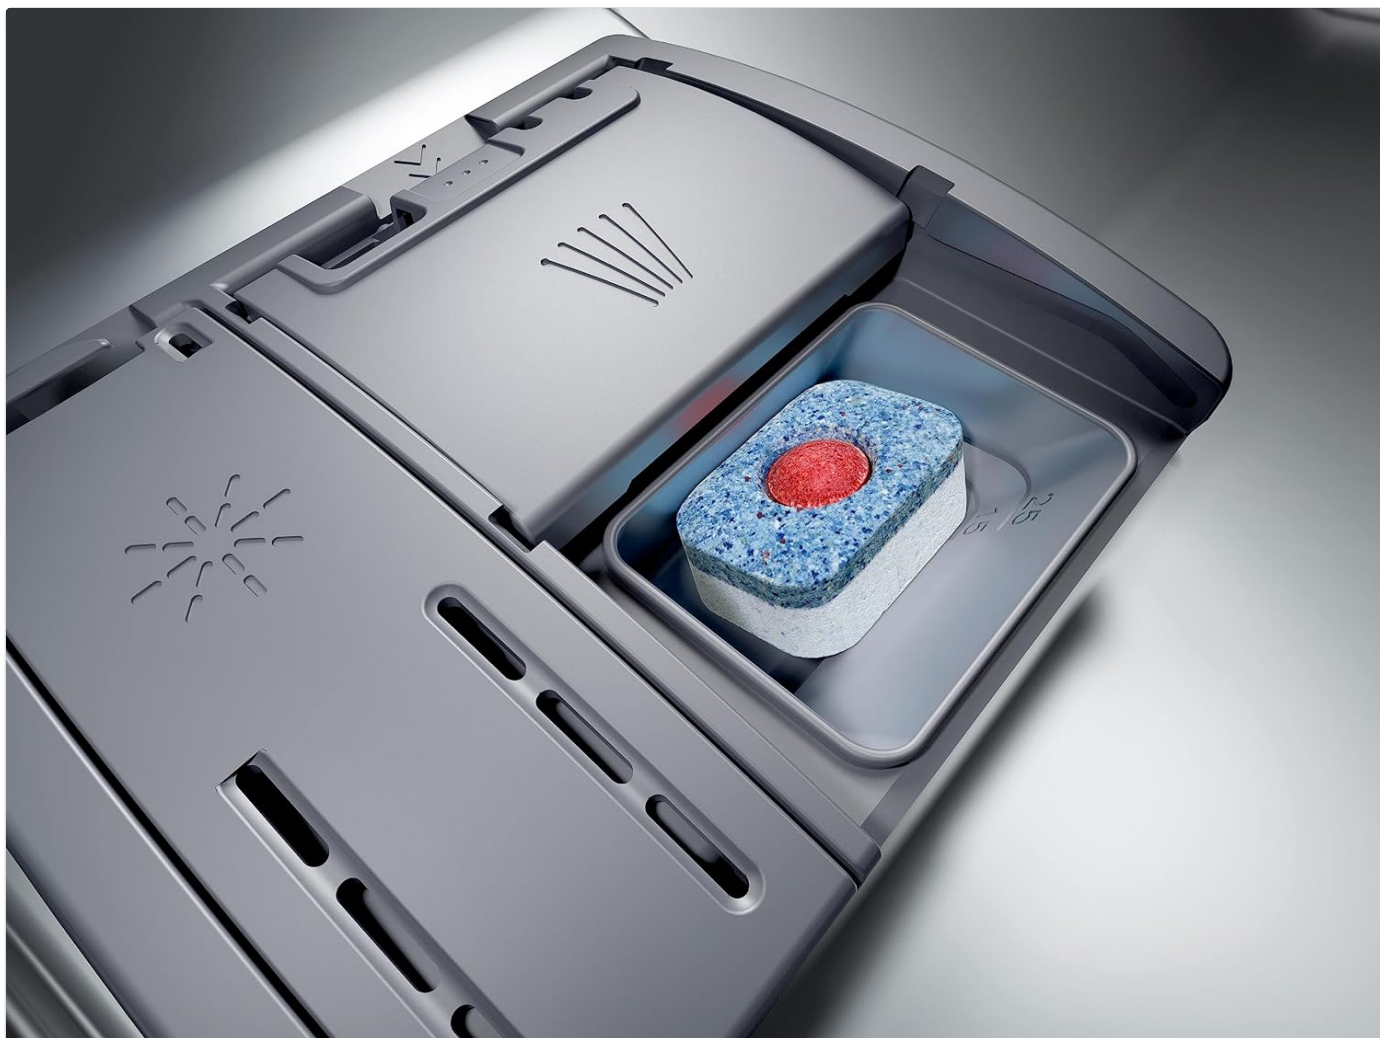


Figure 10: The detergent dispenser with a multi-tab placed inside, ready for a wash cycle.

5.3 Program Selection and Start

Select the appropriate program based on the type and soil level of your dishes. Common programs include:

- **Intensive Program:** For heavily soiled pots, pans, and dishes.
- **Automatic Program:** The dishwasher automatically adjusts temperature and cycle time based on soil level.
- **Pre-rinse:** For rinsing dishes that will be washed later.
- **Favorite Program:** Your customized program settings.

Press the Start button to begin the selected program. The InfoLight will illuminate on the floor to indicate operation.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and performance of your dishwasher.

- **Filter System:** Regularly check and clean the filter system at the bottom of the dishwasher to remove food particles.
- **Spray Arms:** Ensure the spray arm nozzles are not clogged. Remove and clean if necessary.
- **Interior Cleaning:** Wipe down the interior with a damp cloth. For stubborn stains or odors, use a dishwasher cleaner.
- **Exterior Cleaning:** Clean the exterior panel with a soft, damp cloth. Avoid abrasive cleaners.
- **Salt Reservoir:** If using dishwasher salt (depending on water hardness settings), ensure the reservoir is filled.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect program.	Reload dishes correctly, clean spray arms and filters, add more detergent, select a more intensive program.
Dishes not dry	Insufficient rinse aid, "Extra Dry" option not selected, plastic items.	Refill rinse aid, activate "Extra Dry" function, allow more cooling time after cycle.
Dishwasher not starting	Door not closed properly, power supply issue, water supply off.	Ensure door is latched, check power connection, open water tap.
Unusual noise	Items hitting spray arms, foreign objects in pump, improper installation.	Rearrange dishes, check filter area for objects, ensure dishwasher is level.

If the problem persists after attempting these solutions, please contact Bosch customer service.

8. SPECIFICATIONS

Key technical specifications for the Bosch SPV2HKX41E Dishwasher:

Feature	Specification
Model Number	SPV2HKX41E
Installation Type	Fully Integrated
Product Dimensions (D x W x H)	55 x 44.8 x 81.5 cm
Weight	27.9 Kilograms
Noise Level	46 dB
Capacity	9 Place Settings
Annual Energy Consumption	220 kWh per year
Voltage	240V
Wattage	2400 Watts
Interior Material	Stainless Steel
Control Type	Fully Integrated
Special Features	Sound Reduction System, InfoLight, AquaStop

9. WARRANTY AND SUPPORT

Bosch provides a comprehensive warranty for its appliances. The AquaStop feature comes with a lifetime guarantee against water damage, provided the appliance is installed and used according to the instructions. For technical assistance, spare parts, or warranty claims, please contact Bosch Home Appliances customer service. You can find contact information on the official Bosch website or your purchase documentation. For more information, visit the official Bosch Home Appliances store:[Bosch Store on Amazon.de](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question