

ARCADE1UP 8267

Arcade1Up Ms. Pac-Man Home Arcade Machine Instruction Manual

Brand: ARCADE1UP | Model: 8267

INTRODUCTION

The Arcade1Up Ms. Pac-Man 80s Retro Home Arcade Machine brings authentic arcade experiences directly to your home. This cabinet is designed to be a centerpiece for your game room, game cave, or office, offering instant entertainment and conversation. It features classic retro gaming style with vibrant blue, yellow, and hot pink accents, reminiscent of the 1980s arcade era.

This machine includes four iconic games: Ms. Pac-Man, Galaxian, Pac-Mania, and Pac-Man Plus, providing hours of nostalgic fun. Guide Ms. Pac-Man through infamous mazes while evading ghosts, or enjoy the other classic titles. The cabinet comes with a matching riser and a light-up marquee, enhancing its authentic arcade appearance.

SETUP AND ASSEMBLY

Your Arcade1Up Ms. Pac-Man machine requires assembly. The process typically takes approximately 1 to 2 hours, depending on your familiarity with similar constructions. All necessary components and hardware are included for a straightforward setup.

- Unpack all components carefully and verify against the included parts list.
- Follow the step-by-step instructions provided in the separate assembly guide to construct the cabinet.
- Ensure all connections are secure, especially for the display and control panel.
- Attach the included riser to achieve the full 5-foot height for optimal standing play.
- Connect the power cable to a standard electrical outlet.



Figure 1: Fully assembled Arcade1Up Ms. Pac-Man machine with its matching riser.

OPERATING INSTRUCTIONS

Once assembled and powered on, the machine is ready for play. The Arcade1Up Ms. Pac-Man cabinet operates without the need for coins, allowing for unlimited gameplay.

Game Selection:

The machine features a user-friendly game selection interface. Use the joystick to navigate through the available titles:

- Ms. Pac-Man
- Galaxian
- Pac-Mania
- Pac-Man Plus

Press the "Start Game" button to confirm your selection and begin playing.

Controls:



Figure 2: Detailed view of the control panel with joystick and buttons.

- **Joystick:** Use the red joystick for character movement within the games.
- **Start Game Buttons:** White buttons labeled "Start Game" initiate gameplay for 1 or 2 players.
- **Volume Control:** Adjust the game volume using the dedicated volume buttons (OFF/ON and VOL+).
- **Power Button:** The main power switch is located on the control panel for easy access.

To return to the main menu or save a high score, hold the designated button for 5 seconds. To reset a game, hold the button for 5 seconds.

MAINTENANCE

To ensure the longevity and optimal performance of your Arcade1Up machine, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the cabinet and screen. Avoid abrasive cleaners or solvents that could damage the finish or display.
- **Dusting:** Regularly dust the control panel and screen to prevent buildup that could affect performance or visibility.
- **Placement:** Place the machine in a dry, stable environment away from direct sunlight, extreme temperatures, and excessive moisture.
- **Power:** Always power off the machine using the designated switch before unplugging it from the wall outlet.

TROUBLESHOOTING

If you encounter any issues with your Arcade1Up Ms. Pac-Man machine, please refer to the following common troubleshooting tips:

- **No Power:** Ensure the power cable is securely plugged into both the machine and a working wall outlet. Check if the power switch is in the "ON" position.
- **No Display/Sound:** Verify all internal connections are secure, especially those related to the display and speakers. Adjust the volume control.
- **Controls Unresponsive:** Check the joystick and button connections. Ensure no debris is obstructing the movement of the joystick or buttons.
- **Game Freezes:** Try resetting the game by holding the reset button for 5 seconds. If the issue persists, power cycle the machine by turning it off, unplugging it, waiting 30 seconds, and then plugging it back in and turning it on.

For persistent issues or technical support, please visit the official Arcade1Up website or contact their customer service as indicated in your product packaging.

SPECIFICATIONS


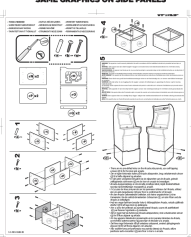

Feature	Detail
Brand	ARCADE1UP
Model Number	8267
Included Games	Ms. Pac-Man, Galaxian, Pac-Mania, Pac-Man Plus
Display Size	17-inch Full Color LCD
Assembled Dimensions (H x D x W)	45.8" H (57.8" H with riser) x 22.75" D x 19" W
Item Weight	80 pounds
Riser Included	Yes

Light-up Marquee	Yes
Coin Operation	Coin-less

WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or replacement parts, please refer to the documentation included with your Arcade1Up machine or visit the official Arcade1Up website. Customer support details are typically provided to assist with any inquiries or issues you may have.

Related Documents - 8267

 <p>The cover of the 'Arcade1Up 40th Anniversary Cabinet Assembly Guide' features the Arcade1Up logo and '40th ANNIVERSARY' text. It lists assembly instructions in multiple languages: ENGLISH, FRANÇAIS, ESPAÑOL, and PORTUGUÊS. A small image of the cabinet is also shown.</p>	<p>Arcade1Up 40th Anniversary Cabinet Assembly Guide</p> <p>Comprehensive assembly instructions for the Arcade1Up 40th Anniversary arcade cabinet. Includes a detailed parts list, tools required, step-by-step guidance with textual descriptions of diagrams, and safety information.</p>
 <p>The cover of the 'Arcade1Up Pac-Man 40th Riser Assembly Instructions' shows a technical diagram of the riser being assembled. The title 'SAME GRAPHICS ON SIDE PANELS' is visible at the top.</p>	<p>Arcade1Up Pac-Man 40th Riser Assembly Instructions</p> <p>Step-by-step assembly guide for the Arcade1Up Pac-Man 40th Riser, detailing required tools, parts, and installation procedures. Includes multilingual safety warnings and notes.</p>
 <p>The cover of the 'Arcade1Up Pac-Man Deluxe Owner's Manual' features a black and white image of the arcade machine. It includes the text 'ENGLISH', 'ARCADE1UP DELUXE', and 'OWNER'S MANUAL'. A warning symbol is also present.</p>	<p>Arcade1Up Pac-Man Deluxe Owner's Manual - Safety, Setup, and Troubleshooting</p> <p>This official owner's manual provides essential safety instructions, installation guidance, game control details, and troubleshooting tips for the Arcade1Up Pac-Man Deluxe arcade machine.</p>



Arcade1Up-PacMan
User Manual - (deutsch) manual -
(deutsch) manual - (deutsch) manual -
Benutzerhandbuch

[Arcade1Up Pac-Man Jr. User Manual](#)

User manual for the Arcade1Up Pac-Man Jr. arcade machine, covering setup, safety precautions, game modes, controls, and anti-tip device installation.



[Arcade1Up Pac-Man 40th Edition 12-in-1 Head-to-Head Owners Manual](#)

Owners manual for the Arcade1Up Pac-Man 40th Edition 12-in-1 Head-to-Head arcade machine. Includes safety warnings, game settings, and control descriptions.



[Arcade1Up Counter-Cade Owners Manual - Safety, Controls, and Troubleshooting](#)

Comprehensive owners manual for the Arcade1Up Counter-Cade, detailing safety instructions, installation, game controls for Pac-Man, Space Invaders, Dig Dug, and more, plus troubleshooting tips.