

GOOJPRT MTP-3

GOOJPRT MTP-3 Portable Bluetooth Thermal Receipt Printer User Manual

Model: MTP-3

1. INTRODUCTION

Thank you for choosing the GOOJPRT MTP-3 Portable Bluetooth Thermal Receipt Printer. This manual provides essential information for the safe and efficient use of your new printer. Please read it thoroughly before operation and retain it for future reference.

The MTP-3 is a compact and lightweight thermal printer designed for on-the-go receipt and label printing. It features both Bluetooth and USB connectivity, making it versatile for various applications such as retail, supermarkets, and other mobile printing needs.

2. SAFETY INFORMATION

- Do not expose the printer to water or moisture.
- Avoid dropping or subjecting the printer to strong impacts.
- Use only the provided AC adapter and USB cable for charging and connection.
- Keep the printer away from high temperatures and direct sunlight.
- Do not attempt to disassemble or repair the printer yourself. Contact customer support if service is required.
- Ensure proper ventilation during operation and charging.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x GOOJPRT MTP-3 Portable Thermal Printer
- 1 x AC Adapter
- 1 x USB Cable

- 1 x User Manual (this document)



Image: The GOOJPRT MTP-3 printer shown alongside its included AC adapter and USB cable.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your MTP-3 printer:



Image: Front view of the GOOJPRT MTP-3 printer with the paper compartment open and thermal paper loaded, showing control buttons and indicators.

Key Features:

- **Power Button:** Turns the printer on/off.
- **Feed Button:** Advances paper manually.
- **Mode Button:** Changes printer mode or settings.
- **Indicators:** LED lights for power, battery, and error status.
- **Paper Compartment:** Holds the thermal paper roll.
- **USB Port:** For charging and wired connection to a computer.

5. SETUP

5.1. Charging the Battery

Before first use, fully charge the printer's battery. Connect the AC adapter to the printer's charging port and plug it into a power outlet. The charging indicator will show the charging status.



Image: The back of the GOOJPRT MTP-3 printer with the battery compartment open and the rechargeable battery removed, showing the battery slot and connection points.

5.2. Loading Thermal Paper

1. Open the paper compartment cover by gently pressing the release button or latch.
2. Insert a new thermal paper roll into the compartment, ensuring the paper feeds from the bottom and the leading edge is straight.
3. Pull a small amount of paper out past the cutting edge.
4. Close the paper compartment cover firmly until it clicks into place.



Image: A visual guide illustrating the correct orientation for loading thermal paper (smooth side facing the print head) and an incorrect orientation.

5.3. Powering On/Off

Press and hold the Power button for a few seconds to turn the printer on or off. The power indicator light will illuminate when the printer is on.

6. OPERATING THE PRINTER

6.1. Bluetooth Connection

The MTP-3 printer supports Bluetooth 2.0 and 4.0 for wireless printing from compatible devices (iOS/Android smartphones, tablets, and Windows computers).

1. Ensure the printer is powered on and within range of your device.
2. On your device, go to Bluetooth settings and search for available devices.
3. Select the printer (usually named "MTP-3" or similar) from the list.
4. If prompted, enter the pairing PIN (common PINs are 0000 or 1234).

5. Once paired, you can use a compatible printing application to send print jobs to the printer.

BT 4.0 Technology

wireless connection, fast printing

For IOS/Android



For Windows



Image: A diagram illustrating the GOOJPRT MTP-3 printer connecting wirelessly via Bluetooth to iOS/Android devices and via USB to Windows computers.

6.2. USB Connection

Connect the printer to a Windows computer using the provided USB cable. You may need to install the printer drivers, which are typically available on a mini-CD included with the product or can be downloaded from the manufacturer's website. Once drivers are installed, the printer will appear as a standard printer in your system.

6.3. Printing

Use your preferred application (e.g., POS software, label printing app) to initiate a print job. Ensure the MTP-3 printer is selected as the output device. The printer will automatically print receipts or labels at a speed of 50mm/s.

High Performance Print Head

50mm/s print speed



Print Clearly



Image: A close-up view highlighting the high-performance print head of the GOOJPRT MTP-3 printer and a sample printout demonstrating clear and legible text and barcodes. The barcode shown is [0075678164125](#).

7. MAINTENANCE

7.1. Cleaning the Print Head

Regularly clean the print head to ensure optimal print quality and extend the printer's lifespan. Use a soft, lint-free cloth dampened with isopropyl alcohol. Gently wipe the print head surface. Ensure the printer is off and cooled down before cleaning.

7.2. Battery Care

To maximize battery life, avoid fully discharging the battery frequently. If the printer will not be used for an extended period, charge it to about 50% and store it in a cool, dry place. Recharge every few months to prevent deep discharge.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Printer does not power on	Low battery or power adapter issue	Charge the battery. Ensure the power adapter is correctly connected and functional.
No print output / Blank paper	Paper loaded incorrectly or not thermal paper	Check paper orientation and ensure you are using thermal paper. Reload paper correctly.
Poor print quality / Faded print	Dirty print head or old thermal paper	Clean the print head as described in the Maintenance section. Replace the thermal paper roll.
Cannot connect via Bluetooth	Printer not in pairing mode, out of range, or already paired	Ensure printer is on and discoverable. Move device closer. Unpair from other devices if necessary. Re-attempt pairing.
Printer not recognized via USB	Missing or incorrect drivers	Install the correct printer drivers for your operating system. Try a different USB port or cable.

9. SPECIFICATIONS

Feature	Detail
Model	MTP-3
Color	Blue
Printing Method	Thermal Line Printing
Print Speed	50 mm/s
Paper Type	Thermal Paper
Paper Width	79.5 ± 0.5 mm
Print Width	72 ± 0.5 mm
Paper Roll Diameter	≤ 40 mm
Paper Thickness	0.06 - 0.08 mm
Connectivity	Bluetooth (2.0 + 4.0), USB
Battery	7.4V, 1500 mAh Rechargeable Lithium Battery
Standby Time	5 - 7 days
Input Voltage	110 – 240V~, 50 / 60 Hz
Output Voltage	DC 12V, Max 1.5A
Operating Temperature	0 – 45 °C
Storage Temperature	-10 ~ 60 °C

Feature	Detail
Print Head Life	50 km
Instruction Set	ESC/POS Compatible
Product Dimensions (L x W x H)	10.5 x 12 x 5.5 cm (4.1 x 4.7 x 2.2 inches)
Product Weight	270 g (9.5 oz)
Supported Barcodes	EAN/UPC-A, EAN/UPC-E, JAN/EAN13, JAN/EAN8, CODE39, ITF, CODABAR, CODE93, CODE128, QR Code, PDF417



Image: A diagram illustrating the dimensions of the GOOJPRT MTP-3 printer: 10.5 cm (4.1 in) length, 12 cm (4.7 in) width, and 5.5 cm (2.2 in) height. The barcode shown is [0075678164125](#).

10. WARRANTY AND SUPPORT

The GOOJPRT MTP-3 Portable Bluetooth Thermal Receipt Printer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the manufacturer directly.



© 2026 GOOJPRT. All rights reserved.