

Cangaroo LHB-008

Cangaroo Kimchi High Chair Instruction Manual

Model: LHB-008

1. INTRODUCTION

Thank you for choosing the Cangaroo Kimchi High Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your high chair. Please read these instructions carefully before use and keep them for future reference. This high chair is designed for children who can sit unaided, from approximately 6 months up to 3 years, or a maximum weight of 15 kg.

2. IMPORTANT SAFETY INFORMATION

- **WARNING:** Never leave the child unattended.
- **WARNING:** Always use the restraint system.
- **WARNING:** Always use the crotch strap in combination with the waist harness.
- **WARNING:** Ensure that any harness is correctly fitted and adjusted.
- **WARNING:** Ensure that the high chair is fully erected and all locking mechanisms are engaged before placing your child in it.
- **WARNING:** Do not use the high chair if any part is broken, torn, or missing.
- **WARNING:** Be aware of the risk of open fires and other sources of strong heat in the vicinity of the high chair.
- **WARNING:** Be aware of the risk of tilting when your child pushes its feet against a table or any other structure.
- Keep children away from the product during assembly and folding to prevent injury.
- Regularly check all parts for wear and tear. Replace worn or damaged parts immediately.
- Do not use accessories or replacement parts other than those approved by the manufacturer.
- Place the high chair on a flat, stable surface.
- Do not allow children to play with the high chair.

3. PARTS LIST

Before assembly, ensure all components are present:

- High Chair Frame (main structure with legs and seat base)
- Seat Unit with Upholstery and 5-point Safety Harness
- Removable Double Tray
- Footrest
- Storage Basket
- Wheels (pre-attached to rear legs)



Figure 1: Fully assembled Cangaroo Kimchi High Chair, showing the main components including the seat, tray, and frame.

4. SETUP AND ASSEMBLY

The Cangaroo Kimchi High Chair is designed for easy setup. Follow these steps to prepare the high chair for use:

1. **Unfolding the High Chair:**

Place the folded high chair on a flat surface. Locate the folding release mechanisms (usually buttons or levers on the side of the frame). Press these mechanisms and gently pull the legs apart until the frame locks into its fully open position. Ensure all locking indicators are engaged and the chair is stable.



Figure 2: The Kangaroo Kimchi High Chair in its compact folded state, demonstrating its space-saving design.

2. Attaching the Tray:

Align the tray with the slots on the armrests of the high chair. Slide the tray onto the armrests until it clicks securely into place. The tray can be adjusted to different depths. Ensure it is firmly attached

before placing your child in the chair.

3. Adjusting the Footrest:

The footrest can be adjusted to provide comfort for your child. Locate the adjustment points on the side of the footrest and set it to a comfortable position for your child's legs.

4. Installing the Storage Basket:

Attach the storage basket to the designated hooks or clips underneath the seat unit. Ensure it is securely fastened.



Figure 3: Rear view of the high chair, showing the attached storage basket and the back of the removable tray.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the various adjustable features of your Cangaroo Kimchi High Chair:

1. Height Adjustment:

The high chair offers 5 height positions. To adjust, locate the height adjustment buttons on the side of the main frame (usually near the top of the legs). Press these buttons simultaneously and slide the seat unit up or down to the desired height. Release the buttons to lock the seat into position. Ensure both sides are locked at the same height.



Figure 4: Front view of the high chair, highlighting the numbered markings for height adjustment on the frame.

2. Backrest Recline:

The backrest can be adjusted to 3 different recline positions. Locate the recline lever or button behind the backrest. Press or pull the lever and adjust the backrest to the desired angle. Release the lever to lock it in place.

3. Tray Adjustment and Removal:

The double tray can be adjusted forward or backward to accommodate your child. To adjust, locate the release mechanism (often a lever or buttons) under the tray or on the sides. To remove the tray for cleaning or to bring the chair closer to a table, activate the release mechanism and slide the tray off the armrests.

4. Using the 5-Point Safety Harness:

Always secure your child with the 5-point safety harness. Place your child in the seat, bring the shoulder straps over their shoulders, and the waist straps around their waist. Connect the two shoulder straps to the waist straps, then insert all buckles into the central buckle until they click. Adjust the straps to ensure a snug, secure fit without being too tight. To release, press the button on the central buckle.

5. Moving the High Chair:

The high chair is equipped with two wheels on the rear legs for easy movement. To move the chair, slightly lift the front legs and roll the chair using the rear wheels. Ensure the chair is stable and locked in place once positioned.

6. Folding for Storage:

To fold the high chair for compact storage, remove the tray. Locate the folding release mechanisms on the frame (similar to unfolding). Activate these mechanisms and gently push the legs together until the chair folds into its compact position. Ensure it is securely locked in the folded state.



Figure 5: Side view of the high chair demonstrating its folded configuration for storage.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your high chair:

- **Seat Upholstery:** The soft seat cushion is removable and washable. Refer to the care label on the fabric for specific washing instructions. Typically, it can be wiped clean with a damp cloth and mild soap, or hand-washed.
- **Tray:** The removable double tray is dishwasher-safe for convenient cleaning. Alternatively, wash it by hand with warm soapy water.
- **Frame:** Wipe the plastic and metal parts of the frame with a damp cloth and mild soap. Dry thoroughly. Do not use abrasive cleaners or solvents.

- **Harness:** Clean the safety harness straps with a damp cloth and mild soap. Allow to air dry completely before use.
- **Storage:** When not in use, store the high chair in a clean, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter any issues with your Cangaroo Kimchi High Chair, refer to the following common problems and solutions:

- **High Chair does not unfold/fold easily:**
Ensure all locking mechanisms are fully disengaged before attempting to fold or unfold. Check for any obstructions in the folding joints. Apply gentle, even pressure.
- **Tray does not attach securely:**
Verify that the tray is correctly aligned with the slots on the armrests. Push firmly until you hear a click, indicating it is locked in place. Check for any debris in the slots.
- **Seat height or backrest recline not locking:**
Ensure the adjustment buttons/levers are fully released after selecting the desired position. Wiggle the seat/backrest slightly to confirm it is securely locked.
- **Harness straps are too tight/loose:**
Adjust the length of the straps using the adjusters on each strap. Ensure the harness is snug but comfortable, allowing one finger to fit between the strap and your child's body.

8. SPECIFICATIONS

Feature	Detail
Model Number	LHB-008
Brand	Cangaroo (Manufacturer: Moni)
Product Dimensions (Unfolded)	85 x 103 x 60 cm (Length x Height x Width)
Item Weight	7.5 kg
Recommended Age	Approx. 6 months to 3 years
Maximum Recommended Weight	15 kg
Height Adjustment	5 positions
Backrest Recline	3 positions
Safety Harness	5-point
Tray	Removable, double, dishwasher-safe, with cup holder
Portability	Foldable, with rear wheels
Assembly Required	Yes (minimal)
Color	Dark Green



Figure 6: High chair dimensions: 85cm length, 103cm height, 60cm width.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the terms and conditions provided by your retailer at the time of purchase. Keep your proof of purchase for any warranty claims.

For technical support, spare parts, or further assistance, please contact the retailer where you purchased the Cangaroo Kimchi High Chair or the manufacturer, Moni. Contact details can usually be found on their official websites or on your purchase receipt.

