

[Manuals.plus](#) /

› [SINGLEHOMIE](#) /

› SINGLEHOMIE IXFD003 2800W Induction Hob User Manual

SINGLEHOMIE IXFD003

SINGLEHOMIE IXFD003 2800W Induction Hob User Manual

Model: IXFD003

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- **Electrical Safety:** Ensure the hob is connected to a standard 13A outlet (220-240V) as specified. Do not use extension cords or adapters. Disconnect from power before cleaning or maintenance.
- **Cookware:** Use only induction-compatible cookware (iron, stainless steel, alloy pans). Non-magnetic or unsuitable cookware will not heat and may trigger the stove sensor.
- **Hot Surfaces:** The hob surface may remain hot after use. Avoid touching until cooled.
- **Child Safety:** Activate the child lock function to prevent unintentional operation. Keep children away from the hob during and after use.
- **Overheat Protection:** The hob is equipped with overheat protection. If activated, allow the unit to cool before resuming use.
- **Automatic Shutdown:** The hob will automatically shut down if a pan is removed for more than 2 minutes or if unsuitable objects are left on the surface for 1 minute.
- **Ventilation:** Ensure adequate ventilation around the hob during operation. Do not block air vents.
- **Cleaning:** Clean the hob regularly as per maintenance instructions. Do not immerse the appliance in water.

2. PRODUCT OVERVIEW

The SINGLEHOMIE IXFD003 Induction Hob features two integrated burners with a flexible zone function, touch controls, and multiple safety features for efficient cooking.



Image 1: Key features of the SINGLEHOMIE Induction Hob, highlighting flexible cooking zones, touch controls, timer, child lock, pause function, automatic shutdown, boost/keep warm functions, and overheat protection.

3. SETUP AND INSTALLATION

This induction hob is designed for easy installation and can be plugged directly into a standard 13A electrical outlet (220-240V).

3.1 Unpacking

- Carefully remove the hob from its packaging.
- Inspect the appliance for any damage. Do not use if damaged.
- Retain packaging for future transport or disposal.

3.2 Countertop Installation

The hob is designed for countertop installation. Ensure the countertop material is heat-resistant and stable.


- Ensure sufficient clearance around the hob for ventilation.
- Cut an opening in the countertop according to the dimensions provided below.
- Place the hob into the cutout, ensuring it sits flush with the countertop.

Heating Zone

① 2000/2800W (Booster)

② 1500/2000W (Booster)

Total Rating Power:2800W

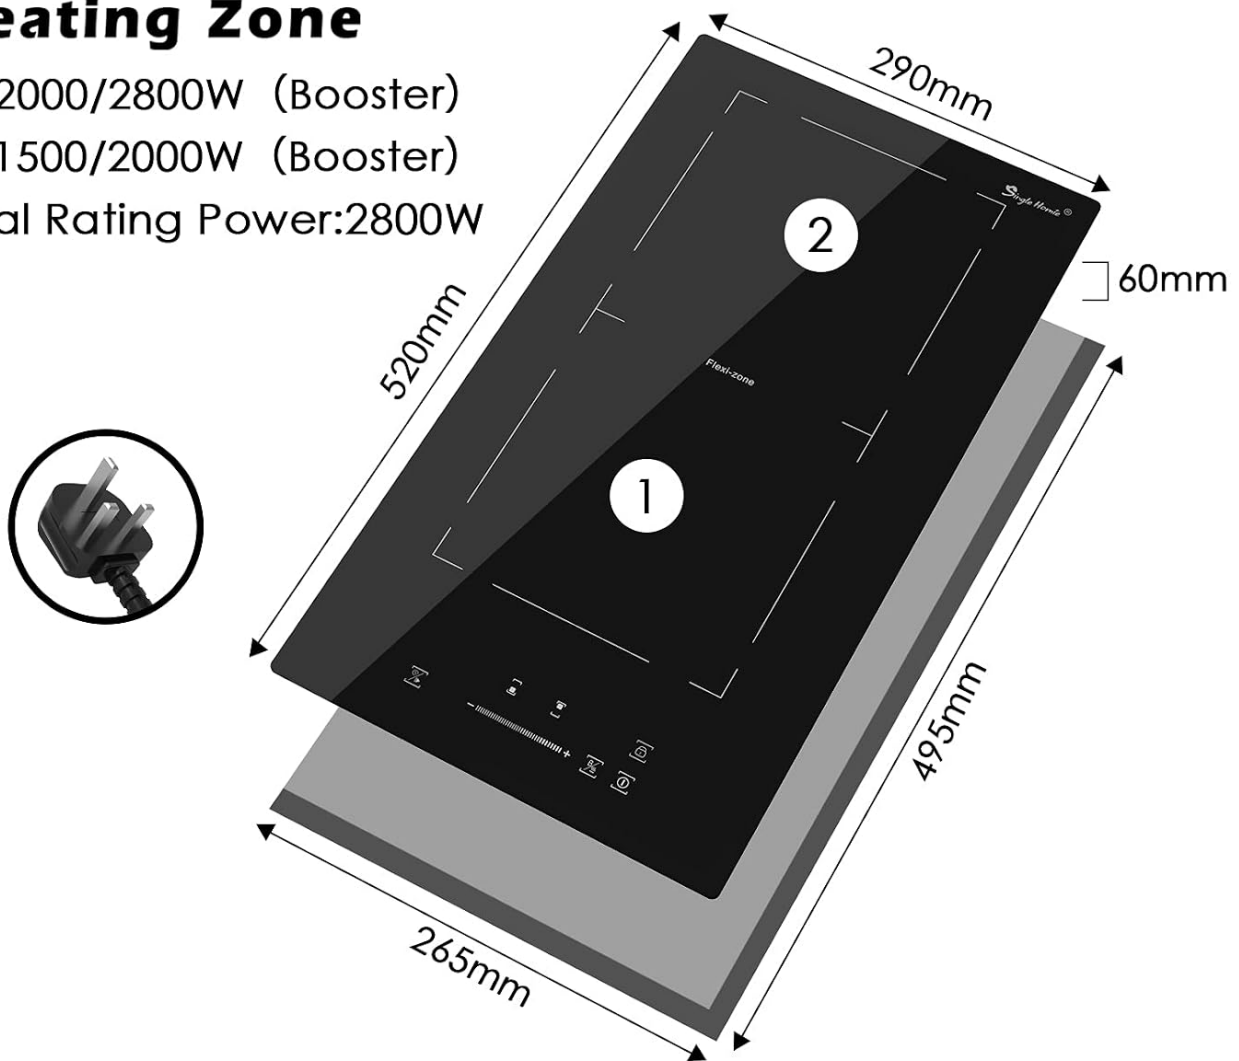

Powerful Heat

2800W(MAX) Flexzone

Combined with two independent inductors that can be controlled separately

Image 2: Dimensions for the hob and countertop cutout. The hob measures 520mm x 290mm on the surface, with a required cutout of 495mm x 265mm and a depth of 60mm. A standard 13A plug is shown for power connection.

3.3 Electrical Connection

Connect the hob directly to a standard 13A, 220-240V electrical outlet. No hardwiring is required.

4. OPERATING INSTRUCTIONS

The SINGLEHOMIE IXFD003 Induction Hob offers intuitive touch controls and versatile cooking options.

4.1 Powering On/Off

- Press the power button to turn the hob on.

- Press and hold the power button to turn the hob off.

4.2 Selecting a Cooking Zone and Power Level

The hob features two independent cooking zones. Use the sliding touch controls to adjust power.



SLIDER-TOUCH SENSITIVE CONTROLS

The controls respond to touch,
so you don't need to apply any pressure.

Image 3: Demonstrates the slider-touch sensitive controls. Simply slide your finger along the control bar to select one of the 9 power levels.

- Place induction-compatible cookware on the desired cooking zone.
- Select the zone using its dedicated control.
- Slide your finger along the control bar to select a power level from 1 to 9.



9 Power Setting with BOOST Function

Easily meet your various cooking needs

Image 4: The hob operating at power level 9, demonstrating the 9 power settings with Boost function for various cooking needs.

4.3 Boost Function

The Boost function provides maximum power to a cooking zone for rapid heating.

- Select the desired cooking zone.
- Press the Boost button (often indicated by 'B' or a similar icon) to activate.
- The Boost function will automatically reduce power after a set time to prevent overheating.

4.4 Flexible Zone (Barbecue Function)

The two cooking zones can be combined to form a single large flexible zone, ideal for larger or elongated cookware, such as grill pans for barbecue.



Image 5: The flexible hob feature in action, showing a grill pan spanning both cooking zones for a barbecue function. This allows for larger cookware to be used effectively.

- Place a large, induction-compatible pan over both cooking zones.
- Activate the flexible zone function (refer to the hob's control panel for the specific button, often indicated by a rectangle or linked zones icon).
- Adjust the power level for the combined zone.

4.5 Timer Function

Set a cooking timer for up to 99 minutes.

- Select the cooking zone you wish to apply the timer to.
- Press the timer button.
- Use the '+' and '-' controls to set the desired cooking time.
- The hob will automatically switch off the zone when the timer expires.

4.6 Pause Function (Stop and Go)

Temporarily pause cooking and resume with the same settings.

- Press the pause button (often indicated by a pause icon).
- To resume cooking, press the pause button again.

4.7 Keep Warm Function

Maintain food at a warm temperature after cooking.

- After cooking, select the zone and press the Keep Warm button.

4.8 Child Lock

Lock the control panel to prevent accidental operation.

- To activate: Press and hold the child lock button (often indicated by a lock icon) for a few seconds.
- To deactivate: Press and hold the child lock button again until unlocked.

4.9 Cookware Compatibility

Only use induction-compatible cookware. These typically have a flat bottom and are made of ferromagnetic materials.

Suitable for all Iron Pans Stainless Steel Pans And Alloy Pans



Image 6: Examples of suitable cookware for induction hobs, including iron pots, stainless steel pots, and composite bottom pots. Ensure your cookware is magnetic.

- **Suitable:** Cast iron, enameled iron, steel, stainless steel, or aluminum pots with a magnetic base.
- **Unsuitable:** Ceramic, glass, copper, or aluminum pots without a magnetic base.
- The stove sensor will detect unsuitable cookware and prevent heating, or automatically go to standby.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction hob.

5.1 Daily Cleaning

- Ensure the hob is switched off and completely cool before cleaning.
- Wipe the glass ceramic surface with a soft cloth and a mild detergent.
- For stubborn stains, use a specialized ceramic hob cleaner.

- Rinse with a damp cloth and dry thoroughly.

5.2 Avoiding Damage

- Do not use abrasive cleaners, scouring pads, or harsh chemicals.
- Avoid dropping heavy objects on the glass surface.
- Do not drag cookware across the surface, as this may cause scratches.

6. TROUBLESHOOTING

If you encounter issues with your induction hob, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; Child lock activated.	Check power connection; Deactivate child lock.
Cooking zone not heating.	Cookware not induction-compatible; Pan not centered; Stove sensor activated by small object.	Use induction-compatible cookware; Center the pan; Remove any foreign objects.
Hob automatically shuts down.	Pan removed for too long (2 minutes); Overheat protection activated.	Place pan back on hob; Allow hob to cool down.
Display shows an error code.	Internal fault or specific issue.	Refer to the specific error code in a more detailed manual (if available) or contact customer support.

If the problem persists after attempting these solutions, please contact SINGLEHOMIE customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	SINGLEHOMIE
Model Number	IXFD003
Total Power	2800W
Voltage	220-240V
Amperage	13A
Number of Heating Elements	2
Surface Material	Glass Ceramic
Fuel Type	Electric
Installation Type	Counter Top
Product Weight	4.8 kg

Feature	Detail
Product Dimensions (L x W)	520mm x 290mm
Cutout Dimensions (L x W x D)	495mm x 265mm x 60mm

8. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please contact the retailer or SINGLEHOMIE customer service directly. Keep your purchase receipt as proof of purchase.

Contact details can typically be found on the manufacturer's official website or through your point of purchase.

© 2023 SINGLEHOMIE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08H1KQSFM>

More documents and user manuals: <https://manuals.plus/>