

[Manuals.plus](#) /

› [Arafuna](#) /

› ARAFUNA Portable CD Player Instruction Manual

Arafuna CD5189

ARAFUNA Portable CD Player Instruction Manual

Model: CD5189

Brand: Arafuna

1. INTRODUCTION

The ARAFUNA Portable CD Player (Model CD5189) is a versatile audio device designed for on-the-go music listening. Featuring built-in dual stereo speakers, it eliminates the constant need for headphones, reducing ear fatigue. Its rechargeable battery provides extended playback, and anti-skip protection ensures uninterrupted audio during movement. This player supports various CD formats and includes convenient features like A-B repeat and last memory, making it ideal for both entertainment and educational purposes.

This manual provides detailed instructions for setting up, operating, and maintaining your ARAFUNA Portable CD Player to ensure optimal performance and longevity.

2. WHAT'S IN THE BOX



The package for your ARAFUNA Portable CD Player includes the following items:

- 1 x ARAFUNA Portable CD Player
- 1 x AUX Cord
- 1 x Earphone
- 1 x USB Charging Cord

- 1 x User Manual (this document)

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts and controls of your CD player for easy operation.



The image above illustrates the key components and controls of the ARAFUNA Portable CD Player. Each numbered point corresponds to a specific function or port:

Component Descriptions

No.	Component	Function
1	MODE Button	Switches between playback modes (Repeat a track, Repeat All, Play in random order, Play first 10s of file, Play in order).
2	Previous Button	Skips to the previous track or rewinds current track.
3	Play/Pause Button	Starts or pauses playback.
4	Next Button	Skips to the next track or fast-forwards current track.
5	SPEED- Button	Decreases playback speed.
6	PROG (Program) Button	Used for programming track order.
7	A-B Repeat Button	Repeats a specific section of audio.
8	Stop Button	Stops playback.
9	EQ (Equalizer) Button	Cycles through sound effects (BBS/Pop/Jazz/Rock/Classic).
10	SPEED+ Button	Increases playback speed.
11	TF Card Slot	Insert a TF (Micro SD) card for playing compatible audio files.
12	Power On/Off Switch	Turns the device on or off.

No.	Component	Function
13	DC Charging Port	Connect the USB charging cable here.
14	Charging Indicator	Light indicates charging status.
15	Earphone/AUX Jack	Connect headphones or an AUX cable for external audio output.
16	Volume Adjustment Knob	Adjusts the audio volume.
17	HOLD On/Off Switch	Locks buttons to prevent accidental presses.
18	Door Open Button	Opens the CD compartment.

4. SETUP

4.1 Charging the Device



Your ARAFUNA CD Player comes with a built-in rechargeable 1400mAh battery. To charge the device, connect the included USB charging cable to the DC Charging Port (13) on the player and to a compatible USB power source (e.g., wall adapter, power bank, computer USB port, or car charger). The Charging Indicator (14) will illuminate during charging. A full charge takes approximately 4 hours and provides over 12 hours of music playback at medium volume.

4.2 Inserting a CD or TF Card



The ARAFUNA CD Player supports a wide range of audio formats, including standard CDs, CD-R, HDCD, MP3 discs, WMA audio files on CD, and files from a TF (Micro SD) card.

- **For CDs:** Press the Door Open Button (18) to open the CD compartment. Carefully place your CD onto the spindle with the label side facing up. Close the compartment firmly until it clicks.
- **For TF Cards:** Insert a TF card (not included) into the TF Card Slot (11) until it clicks into place. Ensure the card is inserted in the correct orientation.

5. OPERATING INSTRUCTIONS

5.1 Basic Playback

1. Ensure the Power On/Off Switch (12) is in the "ON" position.
2. Press the Play/Pause Button (3) to start playback. The LCD display will show track information.
3. Use the Previous Button (2) or Next Button (4) to skip tracks. Hold these buttons to fast-forward or rewind.
4. Adjust the volume using the Volume Adjustment Knob (16).
5. To stop playback, press the Stop Button (8).

5.2 Playback Modes and Sound Effects

- **MODE Button (1):** Press to cycle through different playback modes: Repeat a track, Repeat All, Play in random order, Play first 10s of file, and Play in order.
- **EQ Button (9):** Press to select various sound effects: BBS, Pop, Jazz, Rock, and Classic.

5.3 Anti-Skip Protection

The player features an anti-skip system that helps prevent interruptions caused by minor vibrations. This is particularly useful when using the player during activities like exercising or driving, ensuring a smoother listening experience.

5.4 A-B Repeat and Last Memory

- **A-B Repeat (7):** This function allows you to repeat a specific segment of audio. Press the A-B Repeat button once to mark the starting point (A), and press it again to mark the ending point (B). The player will continuously loop this section. Press a third time to cancel. This feature is highly beneficial for language learning or studying specific audio passages.
- **Last Memory:** The player automatically records the position of the last played track. When you power on the device, it will resume playback from where you last stopped, providing convenience for continuous listening.

5.5 Speed Control

Use the SPEED+ (10) and SPEED- (5) buttons to adjust the playback speed. This feature is useful for accelerating or decelerating audio content, such as audiobooks or lectures, to match your comprehension pace.

5.6 Using Built-in Speakers and AUX Output



The ARAFUNA CD Player features built-in dual stereo speakers, allowing you to listen to music without headphones, which can reduce ear fatigue. The larger LCD display also provides clear information.



For external audio output, you can connect the player to other devices, such as car audio systems or external speakers, using the included 3.5mm AUX cable. Connect one end of the AUX cable to the Earphone/AUX Jack (15) on the CD player and the other end to the 3.5mm AUX input port on your external device. **Note:** This player only supports 3.5mm AUX port connections; USB ports are not supported for audio output.

6. PRODUCT DEMONSTRATIONS

Watch the official product video for a visual guide on the ARAFUNA Portable CD Player's features and usage.

Your browser does not support the video tag.

Official product video demonstrating the Arafuna Portable CD Player's features, including its built-in speakers and portability. This video highlights key functionalities and design aspects.

7. SPECIFICATIONS

Specification	Detail
Product Dimensions	5.5 x 5.5 x 1.1 inches
Item Weight	9.2 ounces
Item Model Number	CD5189
Batteries	1 Lithium Polymer battery required (included)
Manufacturer	Arafuna
Country of Origin	China
Color	Black
Connectivity Technology	Auxiliary, USB
Special Feature	Portable

8. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the CD lens, use a specialized CD lens cleaner. Do not use abrasive cleaners or solvents.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, high temperatures, and humidity.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Handling:** Handle CDs and the player gently to prevent scratches and damage. Avoid touching the CD lens.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is low or depleted. Power switch is off. HOLD switch is on.	Charge the battery. Ensure Power On/Off Switch (12) is ON. Ensure HOLD switch (17) is OFF.
No sound from speakers/headphones.	Volume is too low. Headphones/AUX cable not properly connected. CD/TF card not inserted correctly or damaged.	Increase volume using knob (16). Re-insert headphones/AUX cable firmly into jack (15). Check CD/TF card for damage and re-insert.
CD skips or playback is interrupted.	CD is dirty or scratched. Player is experiencing strong vibrations.	Clean the CD with a soft cloth. Ensure the player is on a stable surface or use the anti-skip feature. Try another CD.
Cannot read TF card.	TF card is not inserted correctly. TF card is corrupted or incompatible.	Re-insert TF card firmly into slot (11). Ensure TF card is formatted correctly and contains compatible audio files. Try another TF card.

10. WARRANTY AND SUPPORT

For detailed warranty information and further support, please refer to the official Arafuna resources:

- **User Guide (PDF):** For a downloadable version of the user guide, please visit:
<https://manuals.plus/m/40b13655914474e9c143144e24c5b59567a31d3420b0f895cdbbb1711ceda9d7>
- **Arafuna Store:** Explore more products and find additional support on the official Arafuna store page:
<https://www.amazon.com/stores/Arafuna/page/27F0E0AD-EA5D-40B2-BCCC-6224F02C631B>

If you encounter any issues not covered in this manual, please contact Arafuna customer support for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question