

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Kidzone](#) /
- › [Kidzone 12V 7AH Electric Tractor with Trailer User Manual](#)

Kidzone 12V 7AH Electric Tractor

Kidzone 12V 7AH Electric Tractor with Trailer User Manual

Model: 12V 7AH Electric Tractor

Brand: Kidzone

INTRODUCTION

Thank you for choosing the Kidzone 12V 7AH Electric Tractor with Trailer. This manual provides essential information for the safe assembly, operation, and maintenance of your new ride-on toy. Please read it thoroughly before use and retain it for future reference.



Image: The Kidzone 12V 7AH Electric Tractor with its detachable trailer.

SAFETY INFORMATION

WARNING: Adult supervision is required at all times. This product is suitable for children aged 3 years and up, with a maximum weight capacity of 66 lbs.

- Always ensure the child wears a safety belt.
- Do not operate near stairs, steep inclines, swimming pools, or public roads.
- Ensure all connections are secure before each use.
- Only use the provided charger and battery.
- Keep hands and feet away from moving parts.

WHAT'S IN THE BOX

Please check the contents of the package to ensure all parts are present:

- Kids Ride On Tractor
- Detachable Trailer
- Remote Control
- Charger
- User Manual

ASSEMBLY

Assembly is required before first use. Please follow these steps carefully:

1. **Attach the Wheels:** Securely attach all four EVA treaded wheels to the tractor chassis. Ensure all washers and nuts are correctly placed and tightened.
2. **Install the Steering Wheel:** Place the steering wheel onto the steering column and secure it according to the instructions.
3. **Connect the Battery:** Locate the battery compartment, connect the battery terminals, and close the compartment.
4. **Attach the Seat:** Secure the seat to the tractor body using the provided fasteners.
5. **Attach the Trailer:** The trailer attaches to the rear of the tractor using a simple pin system. Align the trailer hitch with the tractor's hitch point and insert the pin to secure.

CHARGING THE BATTERY

The tractor is powered by a 12V rechargeable Lead-acid battery. For optimal performance, ensure the battery is fully charged before first use and after each play session.

- Locate the charging port on the side of the tractor.
- Plug the charger into a standard wall outlet, then connect it to the tractor's charging port.
- Charging time is typically 8-12 hours. Do not overcharge.
- Disconnect the charger once charging is complete.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the red power button on the control panel to turn the tractor on or off. You will hear a realistic engine startup sound when powered on.

2. Driving (Foot Pedal & Steering)

- To move the tractor, press the foot pedal located on the right side. Release the pedal to brake.
- Use the steering wheel to control the direction of the tractor.

3. Gear Shifter

The tractor features a 3-gear system: High, Low, and Reverse. Use the red shift knob on the control panel to select the desired gear.

- **High:** For faster forward movement.
- **Low:** For slower forward movement, ideal for younger children or rougher terrain.
- **Reverse:** For backward movement.

4. Lights

Toggle the light switch on the control panel to turn the 7-LED headlights on or off.



Dazzling LED lights

Image: Close-up of the tractor's front showing the illuminated LED headlights.

5. Music & Bluetooth

The control panel includes buttons for music playback, volume control, and a USB port. It also supports Bluetooth connectivity to play music from a connected device.

6. Remote Control Operation

For younger children or when adult supervision is needed, the tractor can be controlled using the included remote control.

- The remote allows control over forward, backward, left, and right movements.
- It also features buttons to switch between high and low speeds and to stop the tractor.
- Ensure the remote control is paired with the tractor before use.



Image: A child driving the tractor while an adult holds the remote control.

7. Detachable Trailer

The trailer can be easily attached or detached from the tractor. Simply lift the pin to release the trailer or insert it to secure.



Detachable Trailer

Remove the trailer for convenient storage

EVA Tires
Puncture proof, softer ride, better traction

Image: The detachable trailer feature and the durable EVA tires.

MAINTENANCE

- **Cleaning:** Wipe the tractor with a damp cloth. Do not use abrasive cleaners or submerge in water.
- **Battery Care:** Always fully charge the battery after each use. If storing for an extended period, charge the battery once a month to prolong its lifespan.
- **Tire Inspection:** Regularly check the EVA tires for wear and tear. The durable foam construction provides good grip on various surfaces.
- **General Inspection:** Periodically check all screws, nuts, and connections to ensure they are tight and secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tractor does not move	Low battery; Loose battery connection; Overload	Charge battery; Check connections; Reduce weight

Problem	Possible Cause	Solution
Tractor moves slowly	Low battery; Operating on rough terrain; Overload	Charge battery; Switch to low gear; Reduce weight
Remote control not working	Remote not paired; Dead batteries in remote	Re-pair remote; Replace remote batteries

SPECIFICATIONS

- **Product Dimensions:** 53.74 x 19.69 x 20.67 inches
- **Item Weight:** 30.6 pounds
- **Battery:** 12V 7AH Lead-acid (rechargeable)
- **Motors:** Dual 35W
- **Tires:** EVA Treaded
- **Recommended Age:** 3 years and up
- **Maximum Weight Capacity:** 66 lbs
- **Charging Time:** 8-12 hours
- **Features:** 3-Gear Shift, 7-LED Headlights, MP3, Bluetooth, Remote Control

WARRANTY & SUPPORT

For warranty information, technical support, or replacement parts, please refer to the contact details provided on the product packaging or visit the official Kidzone website. Keep your purchase receipt as proof of purchase.