

[Manuals.plus](#) /

> [Tefal](#) /

> Tefal FV 6810 Ultragliss Plus Steam Iron User Manual

Tefal FV6810

Tefal FV 6810 Ultragliss Plus Steam Iron User Manual

Model: FV6810

INTRODUCTION

Thank you for choosing the Tefal FV 6810 Ultragliss Plus Steam Iron. This appliance is designed to make your ironing tasks efficient and effortless. Featuring a powerful steam output and the highly durable Durilium Airglide soleplate, this iron ensures excellent glide and performance. Please read this manual carefully before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To prevent the risk of electric shock, always follow these safety precautions.

- Always plug the iron into a grounded outlet.
- Do not leave the iron unattended while it is connected to the power supply or while it is still hot.
- Keep the iron and its cord out of reach of children.
- Never immerse the iron, power cord, or plug in water or other liquids.
- Unplug the iron before filling with water, cleaning, or when not in use.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged. Contact authorized service personnel for repair.
- Use the iron only for its intended purpose, which is ironing clothes.
- The soleplate can become extremely hot. Avoid direct contact with skin.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Tefal Ultragliss Plus Steam Iron.



Figure 1: Side view of the Tefal FV 6810 Ultragliss Plus Steam Iron, highlighting the ergonomic handle and water filling inlet.

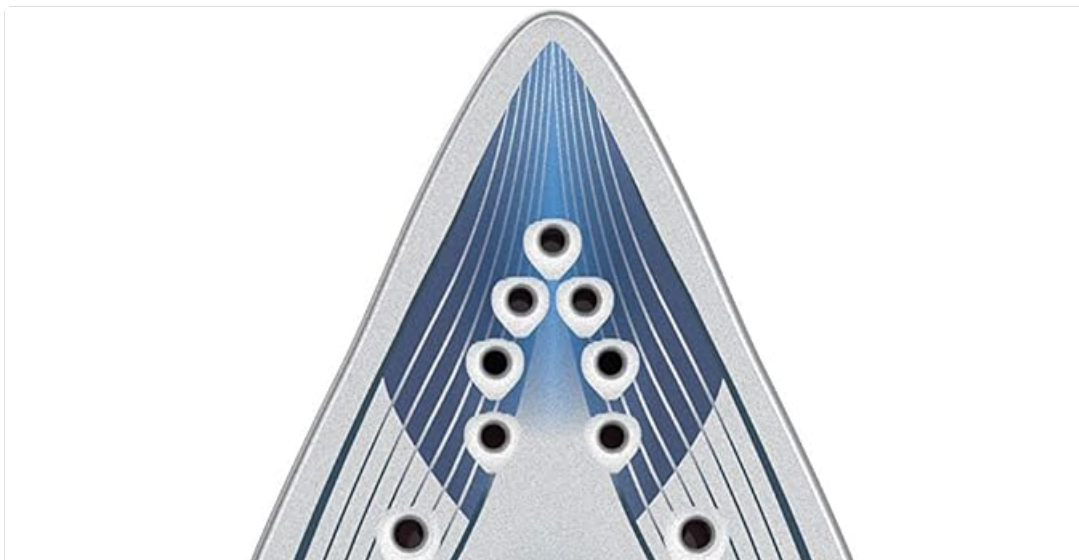




Figure 2: Underside view of the iron, showcasing the Durilium Airglide soleplate with active steam openings for optimal steam distribution.







Figure 3: Angled view of the iron, illustrating the soleplate design and accessible control dial.



Figure 4: Overall view of the Tefal FV 6810 Ultragliss Plus Steam Iron, showcasing its compact and modern design.

The iron features a high-performance Durilium Airglide soleplate, ensuring excellent glide and scratch resistance. It provides up to 50 g/minute continuous steam output and a powerful 250 g/minute steam boost for stubborn creases.

SETUP

Before First Use

1. Remove any stickers or protective covers from the soleplate.
2. Clean the soleplate with a soft cloth to remove any manufacturing residues.
3. For the first use, iron an old piece of fabric to ensure any remaining residues are removed and to test steam function.

Filling the Water Tank

- Ensure the iron is unplugged from the power outlet.

- Open the water filling inlet.
- Fill the water tank with tap water up to the "MAX" level indicator. Do not overfill.
- Close the water filling inlet securely.
- For optimal performance and to prolong the life of your iron, it is recommended to use tap water. If your tap water is very hard, mix it with an equal amount of distilled water. Do not use 100% distilled water or scented water.

OPERATING INSTRUCTIONS

Temperature and Steam Settings

1. Plug the iron into a grounded electrical outlet.
2. Adjust the temperature dial according to the fabric type you are ironing. Refer to the garment's care label for recommended settings.
3. Wait for the indicator light to turn off, signaling that the iron has reached the selected temperature.
4. For steam ironing, ensure the temperature setting is within the steam zone (usually indicated on the dial).
5. To activate continuous steam, slide the steam control to the desired steam level.
6. For a powerful steam boost to remove stubborn creases, press the steam boost button.
7. The iron features an Eco mode, which reduces energy consumption by up to 20% while maintaining effective ironing performance. Activate this mode for environmentally friendly ironing.



Figure 5: The iron in use, demonstrating effective steam output for smooth ironing.

Automatic Shut-off

For safety and energy saving, your Tefal FV 6810 Ultragliss Plus Steam Iron is equipped with an automatic shut-off feature. If left unattended in a horizontal position, the iron will turn off after a certain period. If left vertically, it will shut off after a longer period. To restart, simply move the iron.



Figure 6: The iron standing upright, demonstrating its stable resting position and automatic shut-off feature.

MAINTENANCE AND CLEANING

Cleaning the Soleplate

- Always ensure the iron is unplugged and completely cool before cleaning.
- Wipe the soleplate with a damp, non-abrasive cloth. Do not use abrasive cleaners or metallic scouring pads, as these can damage the Durilium Airglide coating.
- If starch or other residues stick to the soleplate, use a specialized soleplate cleaning stick or a mixture of baking soda and water applied with a soft cloth.

Anti-Calc System

Your iron is equipped with an integrated anti-calc system to reduce limescale build-up. To maintain its effectiveness, regularly perform the self-clean function (if available, otherwise general advice):

1. Fill the water tank to the MAX level.
2. Heat the iron to its maximum temperature setting.
3. Unplug the iron and hold it over a sink.
4. Press and hold the self-clean button (if present) or shake the iron gently to allow water and steam to flush out mineral deposits from the steam holes.
5. Repeat if necessary.

Storage

- After use, unplug the iron and allow it to cool completely.
- Empty any remaining water from the tank.
- Store the iron in an upright position to protect the soleplate.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet fault; automatic shut-off activated.	Check power connection; test outlet with another appliance; move the iron to reactivate.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to dry ironing; calc build-up.	Fill water tank; set higher temperature; adjust steam control; perform anti-calc cleaning.
Water drips from the soleplate.	Temperature too low for steam; iron tilted too much; overfilled water tank.	Increase temperature; keep iron horizontal during steam use; do not overfill water tank.
Soleplate is dirty or sticky.	Residues from fabric or starch.	Clean the soleplate as described in the Maintenance section.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Model Number: FV6810

Brand: Tefal

Power: 2800 Watts

Dimensions (L x W x H): 30.8 x 14.5 x 16 cm

Weight: 1.3 kg (2.87 lbs)

Soleplate Material: Ceramic (Durilium Airglide)

Continuous Steam Output: Up to 50 g/minute

Steam Boost: Up to 250 g/minute

Special Features: Automatic Shut-off, Eco Mode, Anti-Calc System

Voltage: 220V

Frequency: 50 Hz

WARRANTY AND SUPPORT

Warranty Information

This Tefal product is covered by a manufacturer's warranty for a period of **2 years** from the date of purchase, covering parts and manufacturing defects. Please retain your proof of purchase for warranty claims. The warranty does not cover damage resulting from improper use, neglect, or normal wear and tear.

Customer Support

For technical assistance, spare parts, or warranty service, please contact your local Tefal customer service center. You can find contact information on the official Tefal website or through your retailer. Please have your model number (FV6810) and proof of purchase ready when contacting support.

For more information, visit the official [Tefal Brand Store](#).

