

## TBVECHI AH-D11

# TBVECHI 17L Air Fryer Convection Oven Roaster (Model AH-D11) User Manual

Comprehensive instructions for safe and efficient use of your TBVECHI Air Fryer Convection Oven.

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage matches your power supply. Do not immerse the top unit (containing electrical components) in water or any other liquid. Always unplug the appliance when not in use and before cleaning.
- **Hot Surfaces:** The appliance generates heat and steam during operation. Always use oven mitts or gloves when handling hot parts. The glass bowl and internal accessories will be hot.
- **Automatic Shut-off:** The air fryer is engineered for safety and automatically shuts off when the handle is lifted. Cooking resumes upon lowering the handle.
- **Placement:** Place the appliance on a stable, heat-resistant surface, away from walls and other appliances to allow for proper ventilation. Ensure the base securely holds the glass cylinder and protects countertops from high temperatures.
- **Children and Pets:** Keep the appliance out of reach of children and pets. Close supervision is necessary when the appliance is used near children.
- **Damage:** Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way. Contact customer support for assistance.
- **Intended Use:** This appliance is for household use only. Do not use outdoors.



Image: A close-up view of the control unit, highlighting the important safety warning regarding hot surfaces and not immersing the top unit in liquid.

## **PRODUCT OVERVIEW AND COMPONENTS**

---

The TBVECHI 17L Air Fryer Convection Oven is designed for versatile cooking. Familiarize yourself with its components before use.



Image: An exploded view showing all included components: the main glass bowl, the top heating and control unit, power cord, two different grill racks, a steam rack, and a food clip.

- **Top Unit:** Contains the heating element, fan, and control panel (timer and temperature knobs).
- **Glass Bowl:** The main cooking chamber, made of borosilicate glass.
- **Base/Bracket:** Supports the glass bowl and protects surfaces.
- **Grill Racks:** Two different racks for cooking various foods.
- **Steam Rack:** For steaming or elevating food.
- **Food Clip:** For safely handling hot food and racks.
- **Expansion Ring (Optional/Included):** A metal ring that can be placed between the glass bowl and the top unit to increase cooking capacity.



Image: The air fryer assembled with the expansion ring, demonstrating how it increases the cooking volume for larger items.

## SETUP AND FIRST USE

---

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- 2. Cleaning:** Before first use, wash the glass bowl, grill racks, steam rack, and food clip with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the top unit with a damp cloth. Do not immerse the top unit in water.
- 3. Assembly:**
  - o Place the glass bowl securely onto the base/bracket.
  - o Insert the desired grill rack or steam rack into the glass bowl.
  - o If additional capacity is needed, place the expansion ring on top of the glass bowl before placing the top unit.
  - o Carefully place the top unit onto the glass bowl (or expansion ring). Ensure it sits flush and is stable.
- 4. Initial Burn-off:** For the first use, it is recommended to run the appliance empty for about 10-15 minutes at 350°F (175°C) to burn off any manufacturing residues. Ensure good ventilation during this process.

## OPERATING INSTRUCTIONS

The TBVECHI Air Fryer Convection Oven features simple knob controls for temperature and time settings.



Image: A close-up of the control panel, illustrating the mechanical timer and temperature knobs. The timer knob is being turned by a hand.

1. **Prepare Food:** Place your food on the appropriate rack inside the glass bowl. Do not overfill.
2. **Set Temperature:** Turn the **Temperature** knob to your desired cooking temperature. The range is 140-482°F (60-250°C).
3. **Set Timer:** Turn the **Timer** knob to the desired cooking time, up to 60 minutes. The appliance will begin heating once the timer is set.
4. **Indicator Lights:**
  - The **POWER** indicator light will illuminate when the unit is plugged in and the timer is set.
  - The **HEAT** indicator light will illuminate when the heating element is active and will cycle on and off to maintain the set temperature.
5. **Monitoring Cooking:** The transparent glass bowl allows you to monitor your food without opening the unit.
6. **Automatic Shut-off:** If you need to check or flip food during cooking, lift the handle on the top unit. The appliance will automatically pause operation. Lower the handle to resume cooking.
7. **Completion:** Once the timer reaches "Off," the appliance will automatically shut off and a bell will sound. Unplug the unit from the power outlet.
8. **Removing Food:** Carefully lift the top unit and place it on a heat-resistant surface. Use the provided food clip or oven mitts to remove the hot racks and food.



Image: The air fryer actively cooking a whole chicken, demonstrating its capacity and the visibility through the glass bowl. Various prepared dishes are arranged around the unit.



Image: The air fryer in operation, with the heating element visibly glowing, indicating the unit is actively cooking.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the lifespan of your appliance.

- **Always Unplug:** Before cleaning, always unplug the appliance and allow it to cool completely.
- **Glass Bowl and Accessories:** The glass bowl, grill racks, steam rack, and food clip are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry.
- **Top Unit:** Wipe the exterior of the top unit with a damp cloth. For stubborn stains, use a mild detergent. **NEVER immerse the top unit in water or any other liquid.**
- **Interior of Top Unit:** Gently wipe the interior of the top unit, including the heating element and fan guard, with a damp cloth. Ensure no water drips into the electrical components.
- **Storage:** Store the clean and dry appliance in a cool, dry place.

## TROUBLESHOOTING

---

If you encounter issues with your appliance, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Timer not set; Power outage.	Ensure the power cord is securely plugged into a working outlet. Set the timer knob to a desired cooking time. Check your household's power supply.
Food is not cooking evenly.	Overcrowding the basket; Incorrect temperature/time; Food not flipped.	Do not overcrowd the cooking chamber; cook in batches if necessary. Adjust temperature and time settings. Flip or shake food halfway through cooking.
White smoke coming from the unit.	Excess oil/grease from food; Food residues in the bowl.	This is usually normal for fatty foods. Ensure the glass bowl and racks are clean before use. Remove excess oil from food before cooking.
Appliance suddenly stops during operation.	Handle lifted; Timer expired; Overheating protection activated.	Ensure the handle is fully lowered. Check if the timer has run out. If overheating, unplug and let it cool for 30 minutes before restarting.

If the problem persists after trying these steps, please contact customer support.

## SPECIFICATIONS

---

Detailed technical specifications for the TBVECHI 17L Air Fryer Convection Oven.

- **Model Number:** AH-D11
- **Capacity:** 17L / 17.96 Quarts / 4.49 Gallons
- **Power:** 1200 Watts
- **Voltage:** 110V / 60HZ (US Standard)
- **Temperature Range:** 140-482°F (60-250°C)
- **Timer:** Up to 60 minutes
- **Control Method:** Mechanical Knob
- **Heating Method:** 360° Vertical Heating (Convection)
- **Main Materials:** Borosilicate Glass, PC, Food-grade Metal
- **Product Dimensions (L x H):** Approximately 14.6 x 16.5 inches (37.1 x 41.9 cm)
- **Bracket Height:** Approximately 12.99 inches (33 cm)
- **Power Cord Length:** 3.28 feet (1 meter)
- **Item Weight:** 13 Pounds (5.9 kg)
- **Dishwasher Safe Components:** Glass bowl, racks, clip.

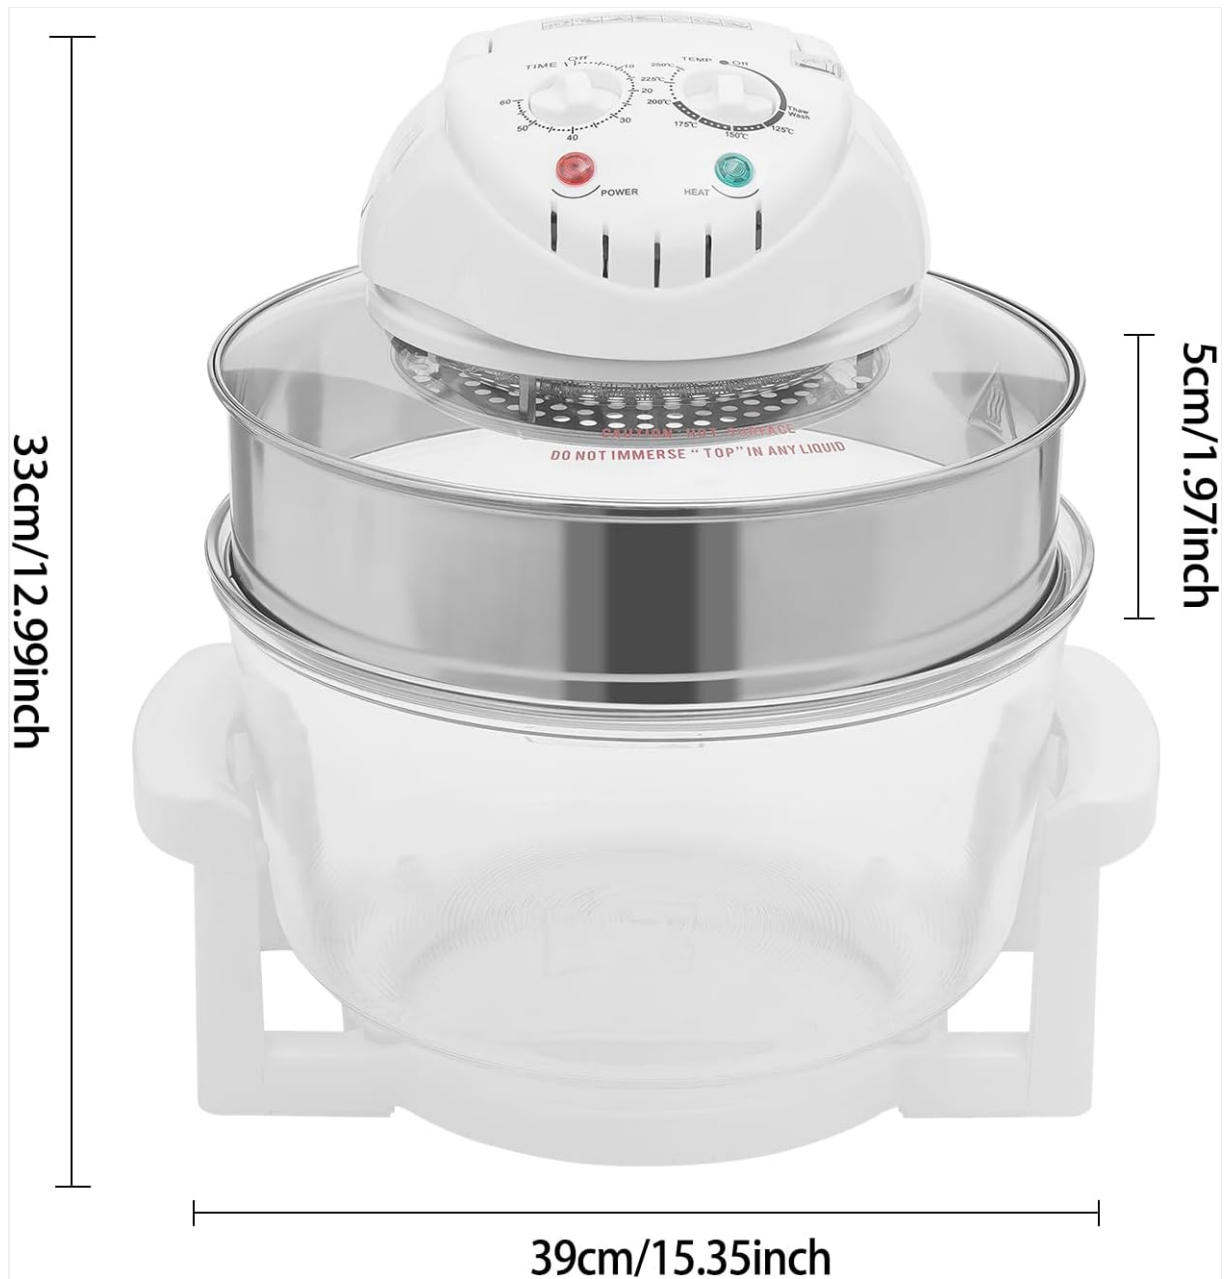


Image: A visual representation of the air fryer's dimensions, indicating a height of 33cm (12.99 inches) and a width of 39cm (15.35 inches).

## WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the seller directly. TBVECHI is committed to customer satisfaction.

For further assistance or inquiries, you may visit the official TBVECHI store on Amazon: [TBVECHI Store](#).