

[Manuals.plus](#) /

› [Galanz](#) /

› Galanz GLR10TS5F Refrigerator Instruction Manual

Galanz GLR10TS5F

Galanz GLR10TS5F Refrigerator

INSTRUCTION MANUAL

1. Important Safety Information

Read all instructions before using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- **Electrical Safety:** Ensure the refrigerator is connected to a properly grounded outlet. Do not use extension cords.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **Child Safety:** Supervise children to ensure they do not play with the appliance. Old refrigerators are dangerous if left unattended.
- **Ventilation:** Maintain adequate ventilation around the appliance to prevent overheating.
- **Servicing:** Do not attempt to repair or replace any part of your refrigerator unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

2. Product Overview

The Galanz GLR10TS5F is a 10.0 Cu.Ft top-mount refrigerator designed for efficient food storage. It features a stainless steel look, adjustable thermostat control, and an interior LED light.





Figure 2.1: Front view of the Galanz GLR10TS5F Refrigerator. This image shows the overall design and stainless steel finish of the appliance.

Key Components:

- Top Mount Freezer Compartment
- Refrigerator Compartment
- Adjustable Electrical Thermostat Control
- Removable Glass Shelves
- Crystal Crisper with Glass Cover
- Door Storage (Gallon Bottle & Cans Dispenser)
- Interior LED Light
- Leveling Front Legs



Figure 2.2: Interior view of the refrigerator and freezer compartments. This image highlights the glass shelves, crisper drawer, and door storage for bottles and cans.

3. Setup and Installation

3.1 Unpacking

Carefully remove all packaging materials, including the foam base and adhesive tape. Dispose of packaging materials

responsibly.

3.2 Placement

Place the refrigerator on a flat, stable surface strong enough to support the appliance when fully loaded. Ensure there is adequate space around the unit for proper ventilation.

- Allow at least 2 inches (5 cm) of space at the back and sides for air circulation.
- Avoid direct sunlight or heat sources.
- Do not install in areas where the temperature will fall below 50°F (10°C) or rise above 90°F (32°C).



Figure 3.1: Refrigerator placed in a kitchen environment, illustrating typical clearance. This image demonstrates how the refrigerator fits into a standard kitchen layout.

3.3 Leveling

The refrigerator must be level for proper operation and door sealing. Adjust the two front leveling legs by turning them clockwise to raise or counter-clockwise to lower the unit.

3.4 Electrical Connection

Plug the power cord into a dedicated 120V, 60Hz, 15 Amp grounded electrical outlet. Do not use an adapter or extension cord.

3.5 Initial Cleaning

Before first use, clean the interior and exterior of the refrigerator with a mild detergent and warm water. Wipe dry thoroughly.

4. Operating Instructions

4.1 Temperature Control

The refrigerator features an adjustable electrical thermostat control located inside the fresh food compartment. Turn the dial to adjust the temperature. Higher numbers indicate colder settings.

- Recommended setting for general use: 3 for refrigerator, middle for freezer.
- Allow several hours for the temperature to stabilize after initial setup or adjustment.

4.2 Food Storage

- **Refrigerator Compartment:** Ideal for fresh foods, dairy products, and beverages. Utilize the glass shelves and door storage.
- **Crystal Crisper:** Designed to maintain humidity for fruits and vegetables, keeping them fresh longer.
- **Freezer Compartment:** For frozen foods. Ensure packages are sealed to prevent freezer burn.

4.3 Adjusting Shelves

The glass shelves are removable and adjustable to accommodate items of various heights. Carefully lift and pull out shelves to reposition them.

5. Maintenance and Care

5.1 Cleaning

- **Interior:** Clean regularly with a solution of mild detergent and warm water. Rinse and dry thoroughly. Remove shelves and drawers for easier cleaning.
- **Exterior:** Wipe with a soft cloth and mild detergent. For stainless steel surfaces, use a stainless steel cleaner.
- **Door Gaskets:** Clean door gaskets regularly to ensure a proper seal.
- **Condenser Coils:** Periodically vacuum the condenser coils at the back or bottom of the refrigerator to maintain efficiency.

5.2 Defrosting

This refrigerator features a frost-free system, eliminating the need for manual defrosting of the freezer compartment.

5.3 Power Outage

In case of a power outage, keep the refrigerator and freezer doors closed to maintain temperature as long as possible. Food can remain frozen for several hours if the doors are not opened frequently.

6. Troubleshooting

Before contacting service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; power outage.	Check power cord connection; reset circuit breaker; check household power.
Temperature is too warm.	Thermostat setting too high; door opened too frequently; large amount of warm food added; poor ventilation.	Adjust thermostat to a colder setting; minimize door openings; allow warm food to cool before storing; ensure proper clearance.
Door does not close completely.	Food packages obstructing door; door gasket dirty or damaged; refrigerator not level.	Rearrange food; clean or replace gasket; adjust leveling legs.
Unusual noises.	Refrigerator not level; items vibrating inside; normal operating sounds (e.g., refrigerant flow).	Adjust leveling legs; secure loose items; normal sounds are expected.
Temperature control stuck after power outage.	Electronic control reset issue.	Unplug the unit for a few hours (e.g., 2-3 hours) then plug it back in to reset the system.

7. Specifications

Detailed specifications for the Galanz GLR10TS5F Refrigerator:

Feature	Detail
Model Number	GLR10TS5F
Capacity	10.0 Cu.Ft (Fresh food: 7.42 Cu.Ft, Freezer: 2.42 Cu.Ft)
Dimensions (H x W x D)	59.72 x 23.58 x 25.71 inches (151.69 x 59.89 x 65.3 cm)
Weight	54.02 kg (119.1 lbs)
Voltage	120 Volts / 60Hz
Annual Energy Consumption	325 kWh
Installation Type	Freestanding
Defrost System	Automatic (Frost Free)
Color	Stainless Steel Look



Figure 7.1: Product dimensions and Energy Guide label. This image provides visual confirmation of the refrigerator's measurements and energy efficiency rating.

U.S. Government

Federal law prohibits removal of this label before consumer purchase.

ENERGYGUIDE

Refrigerator-freezer

- Automatic Defrost
- Top-Mounted freezer
- Without Through-the -Door Ice Service

Galanz

Models: GLR10TWEF

GLR10TBKF

GLR10TS5F

Capacity: 10 Cubic Feet



Compare ONLY to other labels with yellow numbers.
Labels with yellow numbers are based on the same test procedures.

Estimated Yearly Energy Cost

\$39

Cost Range

Models with
similar features

\$36

\$53

All models

\$18

\$70

325 kWh

Estimated Yearly Electricity Use

- Your cost will depend on your utility rates and use.
- Cost range based only on models of similar capacity with automatic defrost, Top-Mounted freezer, Without Through-the -Door Ice Service.
- Estimated energy cost based on a national average electricity cost of 12 cents per kWh.

ftc.gov/energy

Figure 7.2: Close-up of the Energy Guide label. This label details the estimated yearly energy cost and electricity use for the refrigerator.

8. Warranty and Support

For warranty information, please refer to the warranty card included with your product or visit the official Galanz website. Keep your purchase receipt as proof of purchase.

If you encounter issues not covered in the troubleshooting section, or require further assistance, please contact Galanz customer support. Contact details can typically be found on the manufacturer's website or on the product's packaging.

Online Resources: For additional support and FAQs, visit the[Galanz Store on Amazon](#).