

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Ultragliss Anti-Calc Plus FV6830 Steam Iron User Manual

Tefal FV6830

Tefal Ultragliss Anti-Calc Plus FV6830 Steam Iron User Manual

Model: FV6830 | Brand: Tefal

1. INTRODUCTION

Welcome to the user manual for your new Tefal Ultragliss Anti-Calc Plus FV6830 Steam Iron. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.



Figure 1: The Tefal Ultragliss Anti-Calc Plus FV6830 Steam Iron, showcasing its sleek design and dark blue and silver color scheme.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the voltage indicated on the iron corresponds to your mains voltage.
- Do not leave the iron unattended while it is connected to the mains.
- Keep the iron and its cord out of reach of children when it is switched on or cooling down.
- Never immerse the iron, cord, or plug in water or any other liquid.
- Do not operate the iron if it has been dropped, if there are visible signs of damage, or if it is leaking.
- Always unplug the iron from the electrical outlet before filling with water, emptying, or cleaning.
- Use the iron only for its intended purpose, which is ironing clothes.

3. PRODUCT FEATURES

The Tefal Ultragliss Anti-Calc Plus FV6830 is designed with advanced features for efficient and effortless ironing:

- **Easy Maintenance:** Features an exclusive removable calc collector for effortless maintenance and sustained steam performance.
- **High Wattage:** Equipped with 2800 W power for rapid heat-up, ensuring quick readiness for ironing tasks.
- **Efficient Ironing:** Provides up to 50 g/min continuous steam output for smooth and effective ironing, complemented by a powerful 250 g/min steam boost to tackle stubborn creases and thicker fabrics.
- **Optimal Steam Distribution:** The soleplate boasts 100% active steam holes, offering maximum steam distribution. It features 30% more steam holes than previous Ultragliss models for enhanced efficiency.
- **Premium Soleplate:** Incorporates the new Durilium Airglide soleplate, recognized as Tefal's #1 in glide performance, known for its high scratch resistance and durability.
- **Eco-Friendly:** Includes an Eco mode that consumes up to 2% less energy, promoting environmentally conscious garment care and contributing to lower energy bills.
- **Precision Tip:** Designed with a precision tip to simplify ironing in hard-to-reach areas such as collars and around buttons.

4. SETUP

4.1 Unpacking

Carefully remove the iron from its packaging. Retain the packaging for storage or future transport. Check for any visible damage. If any damage is found, do not use the iron and contact customer support.

4.2 Filling the Water Tank

Before filling, ensure the iron is unplugged from the power outlet. Open the water filling inlet and slowly pour clean tap water into the tank up to the 'MAX' level indicator. Do not overfill. For optimal performance and to prolong the life of your iron, it is recommended to use demineralized or distilled water, especially in areas with hard water.

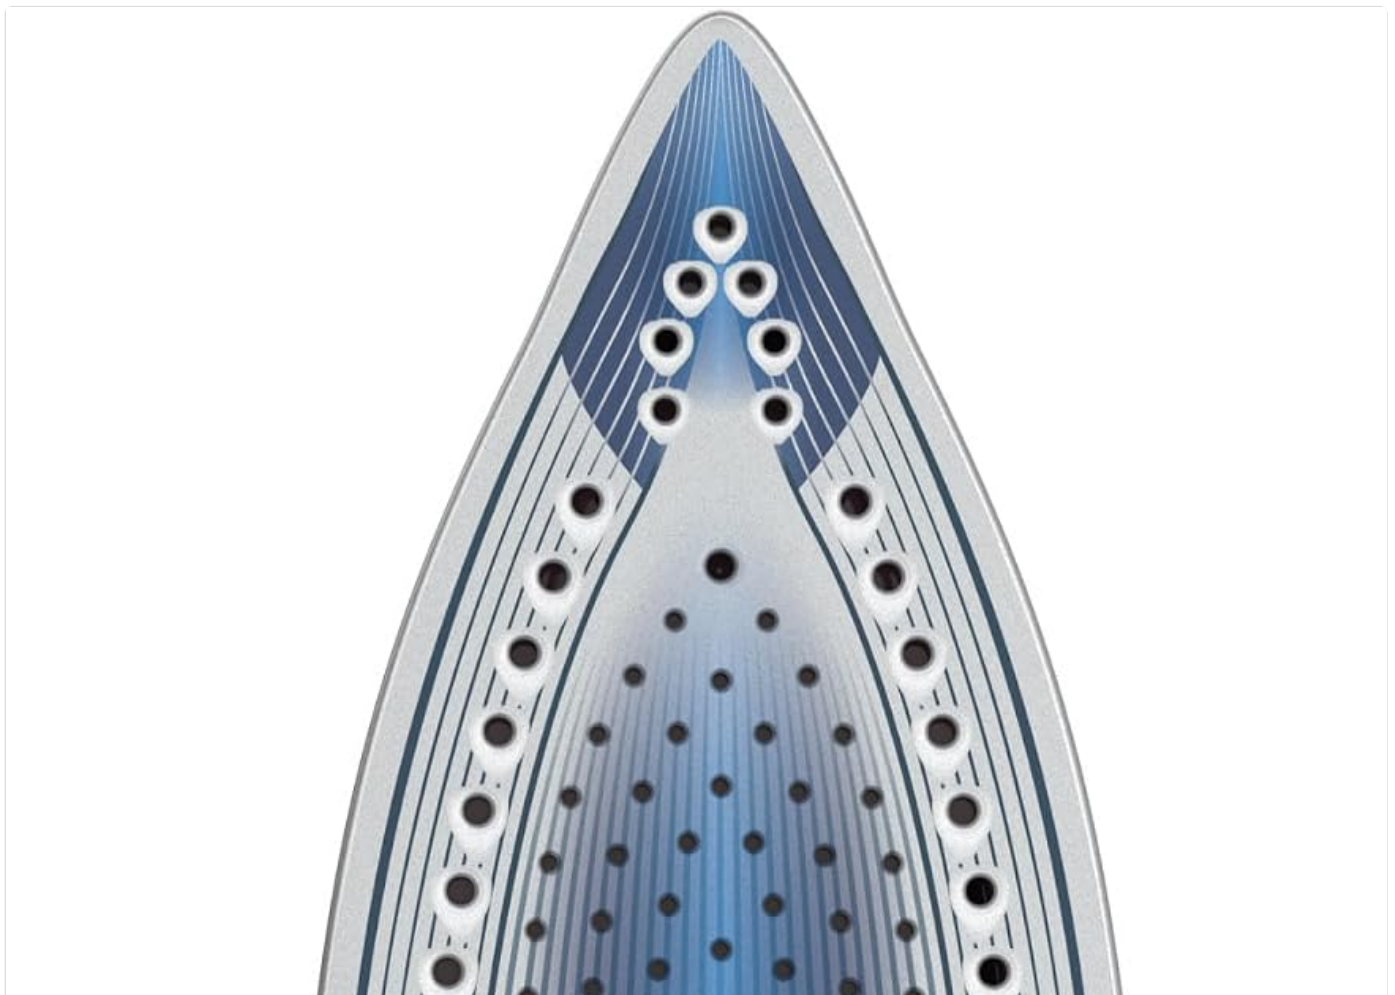




Figure 2: Side view of the iron, highlighting the transparent water tank and the water filling inlet.

4.3 First Use

During the first use, a slight odor or small amount of smoke may be emitted. This is normal and will disappear after a short period. It is advisable to iron an old piece of fabric first to ensure no residue is transferred to your garments.

5. OPERATING INSTRUCTIONS

5.1 Temperature Settings

Plug the iron into a suitable power outlet. Adjust the temperature dial according to the fabric type you are ironing. Refer to the garment's care label for recommended ironing temperatures. The iron's indicator light will illuminate while heating and turn off when the selected temperature is reached.

5.2 Steam Functions

For steam ironing, ensure the water tank is filled and the temperature setting is within the steam zone (usually indicated on the dial). The iron will produce continuous steam. For stubborn creases, press the steam boost button to release an

extra burst of steam.



Figure 3: The iron actively emitting steam, demonstrating its powerful steam output for effective wrinkle removal.

5.3 Vertical Steaming

The iron can be used for vertical steaming of hanging garments, curtains, or drapes. Hold the iron vertically a few centimeters away from the fabric and press the steam boost button repeatedly. Ensure the fabric is suitable for steaming and will not be damaged by direct steam contact.



Figure 4: The iron in motion, illustrating its smooth glide over fabric, enabled by the Durilium Airglide soleplate.

6. MAINTENANCE

6.1 Anti-Calc System (Removable Calc Collector)

The unique removable calc collector helps prevent limescale buildup, ensuring long-lasting steam performance. To clean the collector:

1. Ensure the iron is unplugged and completely cool.
2. Locate the calc collector, usually at the rear of the iron.
3. Twist or pull the collector to remove it (refer to specific diagrams in the full product manual if available).
4. Rinse the collector under running water to remove any collected limescale.

5. Reinsert the clean collector firmly back into the iron until it clicks into place.



Figure 5: A hand demonstrating the removal of the calc collector from the iron, illustrating the ease of maintenance.

6.2 Cleaning the Soleplate

To maintain the glide performance of the Durilium Airglide soleplate:

- Ensure the iron is unplugged and completely cool.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner if necessary.
- Do not use abrasive pads, scouring powders, or harsh chemicals as these can damage the soleplate coating.

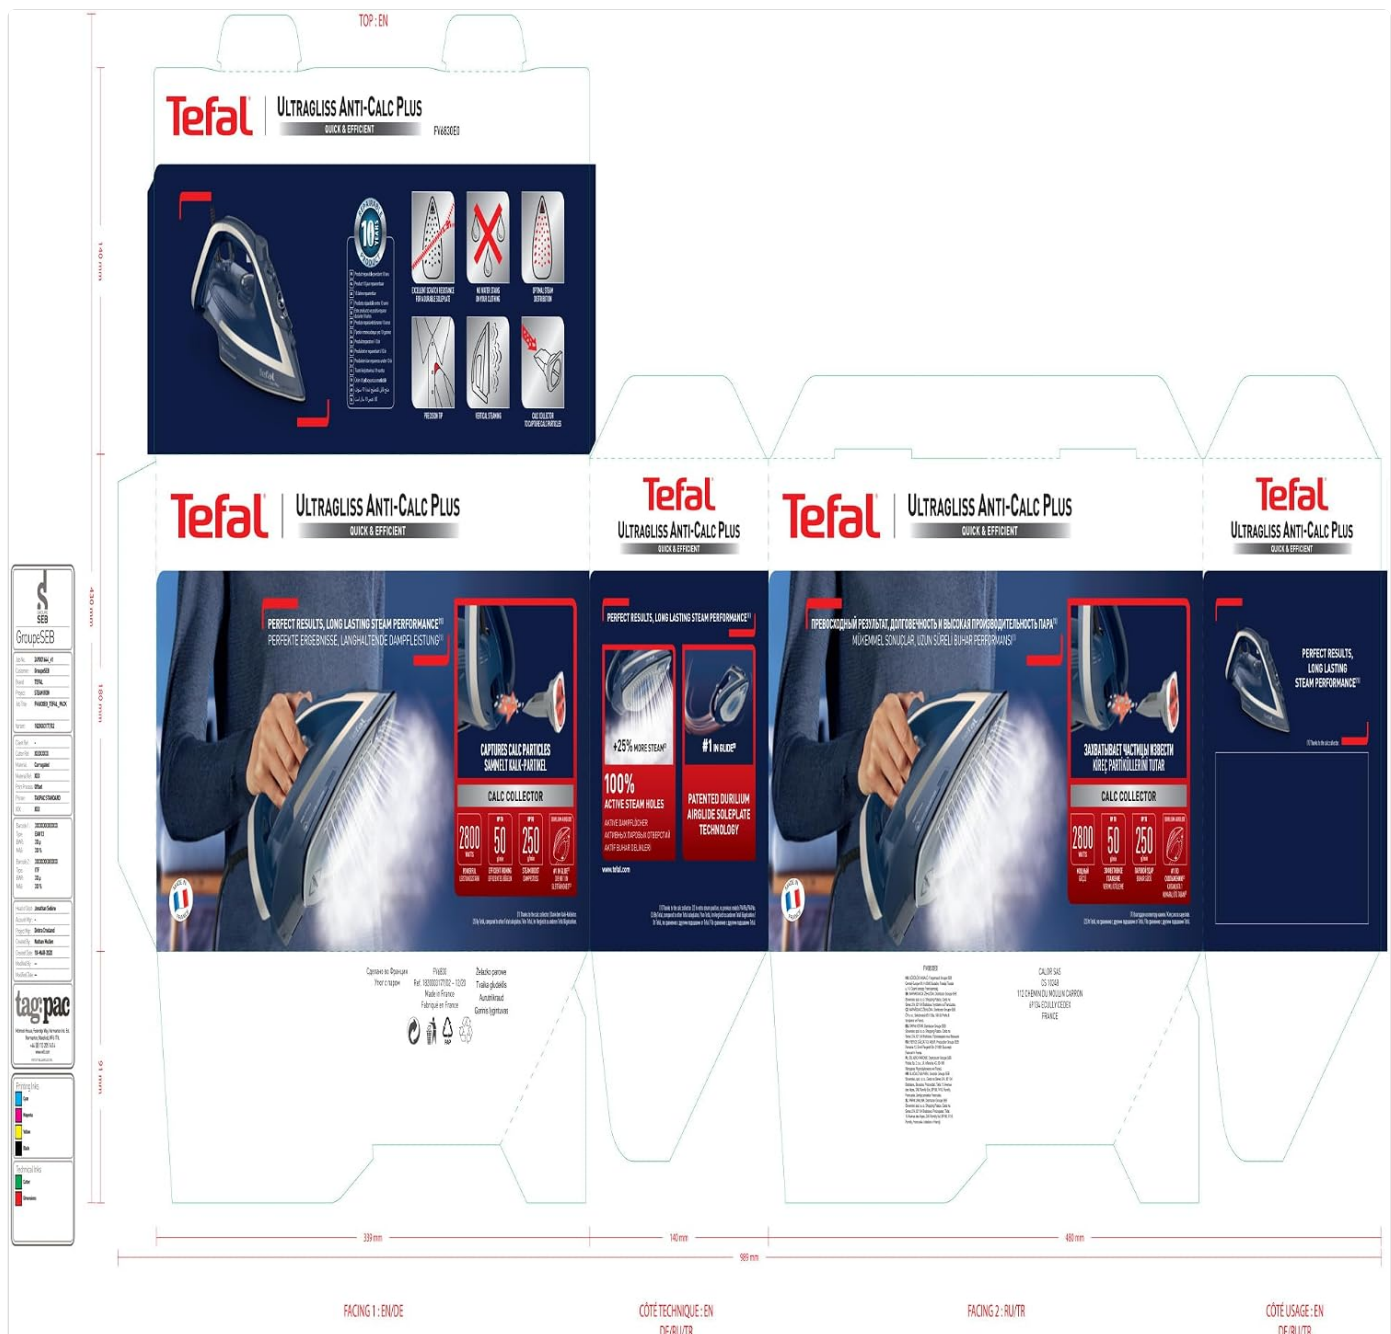


Figure 6: The underside of the iron, showing the Durilium Airglide soleplate with its numerous steam holes designed for optimal steam distribution.

6.3 Storage

After use, unplug the iron and allow it to cool down completely. Empty any remaining water from the tank. Store the iron in an upright position to prevent water leakage and protect the soleplate.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to minimum.	Check plug connection; test outlet with another appliance; turn temperature dial to desired setting.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; calc buildup.	Fill water tank; set temperature to steam zone; clean calc collector.

Problem	Possible Cause	Solution
Water leaking from soleplate.	Temperature too low for steam; water tank overfilled; iron not hot enough for steam.	Increase temperature; do not overfill; wait for iron to reach set temperature before using steam.
White flakes on clothes.	Limescale buildup.	Clean the calc collector and soleplate thoroughly. Use demineralized water.

If the problem persists after trying these solutions, please contact Tefal customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	FV6830
Color	Dark Blue / Silver
Product Dimensions	31 x 13.5 x 16 cm
Weight	1.3 kg
Power / Wattage	2800 watts
Voltage	240 Volt
Continuous Steam Output	Up to 50 g/min
Steam Boost	250 g/min
Soleplate Type	Durilium Airglide
Special Features	Scratch-resistant, Removable Calc Collector, Eco Mode

9. WARRANTY AND SUPPORT

This Tefal product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period. For technical support, spare parts, or repair services, please visit the official Tefal website or contact their customer service department. Keep your proof of purchase for warranty claims.

For more information, you can visit the official Tefal store:[Tefal Store on Amazon.nl](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question