

Vicco 2615

Vicco Oskar Changing Table with 3 Drawers - Instruction Manual

Model: 2615

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Vicco Oskar Changing Table. Please read these instructions carefully before assembly and retain them for future reference. The Vicco Oskar Changing Table is designed to provide a functional and safe space for changing your baby. It features three spacious drawers for storage and can be converted into a standard chest of drawers once the changing top is no longer needed.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always secure the changing table to the wall using the provided anti-tip kit to prevent tipping.
- Never leave a child unattended on the changing table.
- Keep sharp objects away from the changing surface, especially when removing the changing pad.
- Ensure all assembly instructions are followed precisely to guarantee safe use.
- Keep the changing table away from heat sources to prevent damage to the finish.
- The maximum weight capacity for the changing surface is 15 kg (33 lbs).
- Regularly check all screws and fittings to ensure they are tight and secure.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Changing Table panels (various sizes)
- 3 Drawer units
- Assembly hardware (screws, dowels, cam locks, drawer slides, handles)
- Anti-tip wall anchoring kit
- Assembly instructions manual

Note: A changing pad is not included with this product.

SETUP AND ASSEMBLY

Assembly requires two adults. Please follow the step-by-step instructions provided in the included assembly manual. Tools required (not included): Phillips head screwdriver, hammer, measuring tape.

Step 1: Prepare the Workspace

Clear a spacious area for assembly. Lay out all components on a soft, clean surface to prevent scratches.



Image: The fully assembled Vicco Oskar Changing Table in a white finish, shown in a nursery setting with a changing pad and baby essentials. This image illustrates the final product appearance.

Step 2: Assemble the Main Frame

Connect the side panels to the base and top panels using the provided dowels and cam locks. Ensure all connections are secure before proceeding.

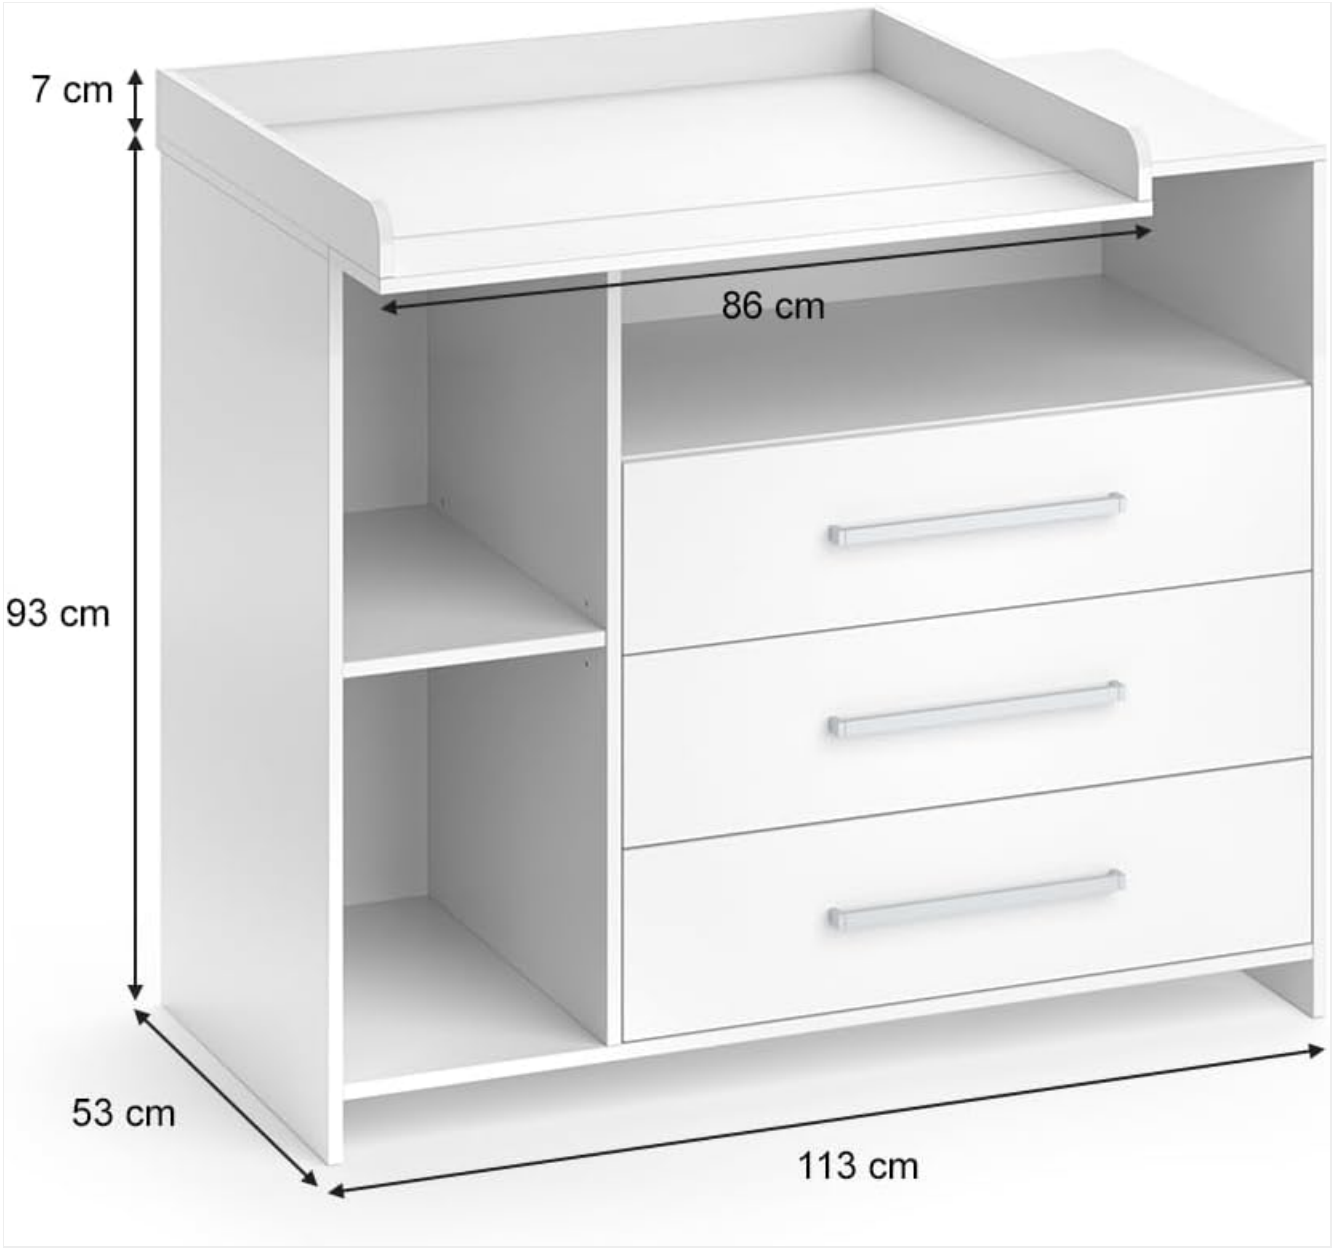


Image: A diagram illustrating the dimensions of the Vicco Oskar Changing Table. The overall width is 113 cm, height is 93 cm (excluding the changing top rail), and depth is 53 cm. The changing top surface is 86 cm wide. This image is crucial for understanding the product's size and fit within a room.

Step 3: Install Shelves and Drawer Supports

Insert the fixed shelves into the designated slots. Attach the drawer slides to the interior panels of the main frame, ensuring they are level and correctly oriented.



Image: A close-up view of the left side of the changing table, showing two open shelves. On the top shelf, baby powder and lotion bottles are visible. The bottom shelf holds a grey basket with folded baby clothes or diapers. This highlights the integrated storage functionality.

Step 4: Assemble the Drawers

Assemble each of the three drawers according to the instructions, attaching the drawer slides to the drawer sides. Install the handles onto the drawer fronts.



Image: A view of the three drawers of the changing table, with the top two drawers partially open. The image shows the metal drawer slides and the interior space of the drawers, demonstrating their capacity and smooth operation.

Step 5: Install the Changing Top

Secure the changing top unit to the main dresser frame. Ensure it is firmly attached and stable. This unit can be removed later to convert the item into a standard chest of drawers.



Image: A composite image showing the Vicco Oskar Changing Table in three different configurations. The top image shows the full changing table with a changing pad. The bottom left shows the dresser without the changing top, and the bottom right shows the changing top partially removed, illustrating its modular design.

Step 6: Wall Anchoring

IMPORTANT: Attach the anti-tip wall anchoring kit to the back of the changing table and securely fasten it to a wall stud. This step is critical for safety and prevents the unit from tipping over.

OPERATING INSTRUCTIONS

Using the Changing Surface

- Place a suitable changing pad (not included) on the changing surface.
- Always keep one hand on your baby while changing to prevent falls.
- Keep all necessary changing supplies (diapers, wipes, creams) within easy reach but out of the baby's grasp.

Using the Drawers and Shelves

- The three drawers provide ample space for storing baby clothes, blankets, and other essentials.
- The open shelves are ideal for frequently used items or decorative elements.
- Distribute weight evenly in drawers and on shelves to maintain stability.

Converting to a Dresser

Once your child no longer requires a changing table, the changing top can be removed. Carefully detach the changing top from the main dresser unit by reversing the assembly steps for that component. This transforms the unit into a standard chest of drawers for continued use.

CARE AND MAINTENANCE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the melamine finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood particle board.
- **Hardware:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Re-tighten if necessary.
- **Environment:** Avoid placing the changing table in direct sunlight or near heat sources to prevent warping or discoloration.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Difficulty during assembly	Missing or unclear part labels, complex instructions.	Review the assembly manual carefully. Ensure all parts are correctly identified before attaching. If issues persist, contact customer support.
Drawers do not slide smoothly or are misaligned	Drawer slides incorrectly installed or damaged. Uneven assembly of the main frame.	Check that drawer slides are installed level and securely on both the drawer and the main unit. Ensure all frame connections are tight and square.
Unit feels unstable or wobbly	Loose fasteners. Not anchored to the wall.	Tighten all screws and cam locks. Ensure the anti-tip wall anchoring kit is properly installed and secured to a wall stud.

SPECIFICATIONS

- Brand:** Vicco
- Model Number:** 2615
- Color:** White
- Material:** Engineered Wood (16 mm particle board with melamine resin coating)
- Product Dimensions (L x W x H):** 53 cm x 113 cm x 100 cm
- Weight:** Approximately 55.7 kg
- Number of Drawers:** 3
- Assembly Required:** Yes
- Care Instructions:** For domestic use, wipe clean with a damp cloth.

WARRANTY AND SUPPORT

For any questions, missing parts, or issues with your Vicco Oskar Changing Table, please contact your retailer or Vicco customer support. Please have your model number (2615) and purchase information ready when contacting support. Information regarding specific warranty terms may be provided by your point of purchase. Please refer to your purchase documentation for details.

For general inquiries about Vicco products, you may visit the official Vicco store: [Vicco Store on Amazon.fr](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question