

Tiny Land White Wooden Play Kitchen

Tiny Land Play Kitchen Instruction Manual

Model: White Wooden Play Kitchen

Brand: Tiny Land

1. INTRODUCTION

Thank you for choosing the Tiny Land Play Kitchen. This wooden playset is designed to provide an immersive and imaginative cooking experience for children aged 3 and up. Featuring realistic lights, sounds, and interactive components, this manual will guide you through the setup, operation, and maintenance of your new play kitchen.

2. IMPORTANT SAFETY INFORMATION

WARNING: Not suitable for children under 36 months due to small parts, which may present a choking hazard.

WARNING: Adult assembly only. Keep away from fire.

Ensure all parts are securely fastened before allowing children to play. Regularly inspect the playset for any loose or damaged components. Do not modify the product in any way. Always supervise children during play.

3. WHAT'S IN THE BOX

Your Tiny Land Play Kitchen comes with the following components and accessories:

- Wooden Play Kitchen structure
- Cutting food pieces
- Toy kitchen sets (pots, pans)
- Chef hat
- Apron
- Ice cubes (3 pieces)
- Cup
- Knife & Turner & Spoon
- Plates (2 pieces)
- Vegetables series



All-In-One Kitchen Set



Everything you need included.

Image: All-in-One Kitchen Set with included accessories such as cookware, toy food, chef hat, and apron.

4. SETUP AND ASSEMBLY

Assembly of the Tiny Land Play Kitchen requires adult supervision and tools. Please follow the detailed instructions provided in the separate assembly guide included with your product packaging. Ensure all screws and fasteners are tightened securely.

4.1. Adjustable Height Feature

The play kitchen features an adjustable height design to accommodate children aged 3-7. The legs include extenders that allow for two different height settings:

- **Lower Height:** Use the shorter leg extenders for a total height of 38.5 inches.
- **Taller Height:** Use the longer leg extenders for a total height of 40.7 inches.

To adjust the height, carefully detach the leg extenders and reattach the appropriate size. Ensure all leg extenders are firmly in place before use.

Adjustable Height

From 38.5 to 40.7 inches for endless playtime.



*With side A upward, the product is 40in high.



*With side B upward, the product is 40.7in high.



Image: Adjustable Height diagram illustrating the two height options (38.5 inches and 40.7 inches) by changing leg extenders.

5. OPERATING INSTRUCTIONS

The Tiny Land Play Kitchen includes several interactive features to enhance playtime:

5.1. Stove and Range Hood

The stove burners and range hood feature realistic lights and sounds. Locate the control buttons on the range hood. Press the light button to turn on the hood light. Press the fan button to activate the fan sound. The stove burners light up and make cooking sounds when their respective knobs are turned.

Realistic Kitchen *Lights & Sounds*

Interactive features for an immersive play experience.



Image: Realistic Kitchen Lights & Sounds showing the glowing stove, light & sound effects on the hood, and light-up oven.

5.2. Oven

The oven door opens to reveal a spacious interior for play food. Twist the oven knobs to hear realistic clicking sounds and activate the internal light. The light automatically turns off when the door is closed.

5.3. Microwave

The microwave door opens and closes, allowing children to mimic real cooking activities by placing toy food inside.

5.4. Faucet and Sink

The faucet can be rotated for a hands-on play experience. The sink is removable for easy cleaning.

5.5. Ice Maker

The ice maker dispenses included ice cubes. Simply place the ice cubes into the top compartment of the ice maker. Push the lever or button (depending on model variation) to watch the ice cubes drop into the cup.



1 MICROWAVE

**Open and close the door to mimic real cooking activities.*



2 ICE MAKER

**Push to watch ice cubes drop into the cup!*



3 FAUCET

**Rotating faucet for hands-on fun experience.*



Image: Interactive features including the microwave, ice maker, and rotating faucet for an engaging play experience.

6. MAINTENANCE AND CARE

To ensure the longevity of your Tiny Land Play Kitchen, follow these maintenance guidelines:

- Cleaning:** Wipe down all surfaces with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as they may damage the wood finish.
- Wood Care:** Keep the playset away from direct sunlight and excessive moisture to prevent warping or fading.
- Battery Replacement:** The lights and sounds features require 1 Lithium Metal battery (included). When the lights dim or sounds become faint, replace the battery according to the instructions in the battery compartment (typically located near the range hood or oven).
- Inspections:** Periodically check all screws and connections to ensure they are tight. Tighten any loose fasteners as needed.

7. TROUBLESHOOTING

If you encounter any issues with your Tiny Land Play Kitchen, please refer to the following common solutions:

- **Lights or Sounds Not Working:**

- Check if the battery is correctly installed.
- Replace the battery if it is depleted.
- Ensure the power switch (if applicable) is in the 'On' position.

- **Ice Cubes Not Dispensing:**

- Verify that ice cubes are properly loaded into the top compartment.
- Ensure no obstructions are blocking the dispenser mechanism.

- **Loose Parts:**

- Identify the loose component and tighten the corresponding screws. Do not overtighten.

If the problem persists after attempting these solutions, please contact Tiny Land customer support.

8. SPECIFICATIONS

Feature	Detail
Product Dimensions	17.13 x 6.89 x 35.04 inches (L x W x H)
Item Weight	30 pounds
Manufacturer Recommended Age	3 years and up
Batteries	1 Lithium Metal battery (included)
Material	Wood

Warranty and Support

Tiny Land is committed to providing high-quality products and unparalleled customer care. For any questions, concerns, or support needs regarding your play kitchen, please contact Tiny Land customer service through the retailer's platform or visit the official Tiny Land store online.

For more information, visit the [Tiny Land Store](#).