

Crisis Full HD 1080P Mini Sports Action Camera

Full HD 1080P Sports Action Camera User Manual

Brand: Crisis | Model: Full HD 1080P Mini Sports Action Camera

1. INTRODUCTION

This manual provides detailed instructions for the proper use, setup, and maintenance of your Crisis Full HD 1080P Sports Action Camera. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. This ultra-small, lightweight camera is designed for various applications, including outdoor sports, home security, and general video recording, offering 1080P full HD video and 12MP photo capabilities with night vision and noise reduction features.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 1 x Mini Camera
- 1 x Data Cable (USB to Mini USB and RCA)
- 1 x Bracket (360° rotating)
- 1 x Back Clip
- 1 x User Manual (this document)



Figure 2.1: Contents of the camera package, including the mini camera, data cable, rotating bracket, and back clip.

3. PRODUCT OVERVIEW AND FEATURES

The Crisis Mini Sports Action Camera is a compact and versatile device designed for various recording needs. Its key features include:

- **Full HD 1080P Recording:** Captures video at 1080P resolution at 30 frames per second, ensuring clear and detailed footage.
- **12MP Photo Capture:** Capable of taking high-resolution still images.
- **Night Vision:** Supports recording in low-light or dark environments.
- **HD Noise Reduction:** Built-in microphone with noise reduction technology for clearer audio recording.
- **Compact and Lightweight Design:** Ultra-small form factor for discreet placement and easy portability.
- **Long Battery Life:** Integrated 200mAh battery provides up to 90 minutes of continuous recording.
- **Expandable Storage:** Supports Micro SD (TF) cards up to 32GB (not included).
- **Versatile Mounting:** Includes a 360° rotating bracket and back clip for flexible positioning.



Figure 3.1: Front view of the mini camera, highlighting its compact design.

Ultra-small, lightweight, concealed and easy to carry



Figure 3.2: The camera's ultra-small size, demonstrated by fitting in the palm of a hand.



Figure 3.3: The camera's capability for 1080P Full HD video recording.

Support for up to 32G memory cards



Figure 3.4: The camera supports Micro SD cards up to 32GB for storage.



Figure 3.5: The camera features HD noise reduction for clear audio recording.



Figure 3.6: Comparison of day and night vision capabilities of the camera.

4. SETUP

4.1. Charging the Battery

Before first use, fully charge the camera's built-in battery. Connect the camera to a USB power source (e.g., computer USB port or USB wall adapter) using the provided data cable. The indicator light will show charging status (refer to camera's LED indicator guide in Operating Instructions for specific light patterns).

4.2. Inserting a Micro SD Card

The camera requires a Micro SD (TF) card for storing recordings. Ensure the card is formatted to FAT32. The camera supports cards up to 32GB.

1. Locate the Micro SD card slot on the side of the camera.
2. Gently insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, gently push the card in again until it springs out.



Figure 4.1: Side view of the camera, indicating the Micro SD card slot and Mini USB port.

4.3. Mounting the Camera

Use the provided 360° rotating bracket and back clip for flexible mounting options.

- Attach the camera to the bracket or back clip.
- Secure the bracket or clip to a desired surface or clothing. The 360° rotation allows for optimal viewing angles.

5. OPERATING INSTRUCTIONS

The camera typically has two main buttons: a Power/Mode button and a Record/Shutter button. Refer to your specific model's button layout if different.

5.1. Power On/Off

- **Power On:** Press and hold the Power/Mode button for a few seconds until the indicator light turns on.
- **Power Off:** Press and hold the Power/Mode button again for a few seconds until the indicator light turns off.

5.2. Video Recording

The camera supports 1080P and 720P video recording modes.

1. **Enter Video Mode:** After powering on, press the Power/Mode button briefly to cycle through modes until the indicator light shows the video recording mode (e.g., solid blue for 1080P, solid red for 720P - consult specific LED guide).
2. **Start Recording:** Press the Record/Shutter button once to start recording. The indicator light will typically flash during recording.
3. **Stop Recording:** Press the Record/Shutter button again to stop recording. The indicator light will return to solid.

5.3. Taking Photos

1. **Enter Photo Mode:** After powering on, press the Power/Mode button briefly to cycle through modes until the indicator light shows the photo mode (e.g., solid green - consult specific LED guide).
2. **Take Photo:** Press the Record/Shutter button once to take a photo. The indicator light may flash briefly.

5.4. Night Vision

The camera automatically adjusts for low-light conditions. Some models may have a dedicated night vision activation. If available, press and hold the Record/Shutter button while in video mode to toggle night vision on/off (consult specific model instructions).

5.5. Connecting to a Computer

To access recorded files, connect the camera to your computer using the provided data cable.

1. Ensure the camera is powered off.
2. Connect the camera to your computer's USB port.
3. The camera will be recognized as a removable disk. You can then browse and transfer files.

6. MAINTENANCE

6.1. Cleaning

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a specialized lens cleaning cloth and solution to avoid scratches.
- Do not use harsh chemicals or abrasive cleaners.

6.2. Storage

- Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove the Micro SD card if storing for extended periods.

6.3. Battery Care

- Avoid fully discharging the battery frequently.
- If storing for a long time, charge the battery to about 50% every few months to maintain its health.

7. TROUBLESHOOTING

If you encounter issues with your camera, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; faulty battery; camera malfunction.	Charge the battery fully. If problem persists, contact support.
Cannot record video/take photos.	No Micro SD card; Micro SD card full or corrupted; incorrect mode.	Insert a Micro SD card. Format or replace the card. Ensure camera is in the correct mode.
Poor video/photo quality.	Dirty lens; insufficient lighting; camera shake.	Clean the lens. Ensure adequate lighting or activate night vision. Stabilize the camera during recording.
Camera not recognized by computer.	Faulty USB cable; incorrect connection; driver issue.	Try a different USB cable or port. Ensure camera is powered off before connecting.

8. SPECIFICATIONS

Feature	Detail
Photoreceptor	2Mega CMOS sensor GC1024
Aperture	F 2.0
Focal Length	f = 2.9mm
Memory	TF Card, up to 32GB (not included)
Microphone	Built-in
Battery	3.7V 200mAh
Image Resolution	12M (4032*3024)
Picture Format	JPEG
Video Resolution	1080P/30FPS, 720P/30FPS
Video Compression Format	AVI (M-JPEG)
Recordable Time	Approx. 90 minutes (video)
Working Temperature	-10~50°C
Storage Temperature	-10~70°C
Humidity Environment	5%-90% (no condensation)
Size	2.5 * 2.5 * 2.5cm / 1.0 * 1.0 * 1.0in
Weight	Approx. 58g

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support, troubleshooting

assistance beyond this manual, or inquiries regarding parts and service, please contact Crisis customer support through their official website or the contact information provided with your purchase.

Please retain your proof of purchase for warranty claims.

© 2023 Crisis. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question