



Manuals.plus /

› WONNIE /

› WONNIE 10.5" Dual Screen Portable DVD Player Instruction Manual

WONNIE P-USMJ1011-cr

WONNIE 10.5" Dual Screen Portable DVD Player Instruction Manual

Model: P-USMJ1011-cr

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your WONNIE 10.5-inch Dual Screen Portable DVD Player. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 2 x 10.5" Portable DVD Players
- 2 x AC Power Adapters
- 1 x Car Charger (12V)
- 2 x Car Mounting Brackets
- 2 x Remote Controls
- 2 x Headrest Straps
- 1 x AV Cable (3.5mm to 3.5mm)
- 1 x RCA Cable (3.5mm to 3 RCA)
- 1 x Instruction Manual

Package Listing



Two AC Adapter



Car Mounting
Brackets



Remote Control



Two Headrest
Straps




AV Cable



Car Charger



RCA Cable

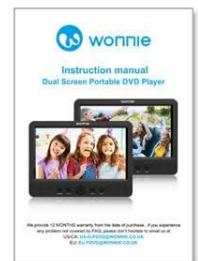

Manual

Figure 1: Illustration of all items included in the WONNIE Dual Screen Portable DVD Player package, including two DVD players, power adapters, car charger, mounting accessories, remote controls, and various cables.

SETUP

Powering the Devices

Your DVD players can be powered in three ways:

- **AC Adapter:** Connect the provided AC adapter to a standard wall outlet and the DC IN port on the player.
- **Car Charger:** Use the 12V car charger to power the players in your vehicle. Connect it to the car's cigarette lighter socket and the DC IN port on the player.
- **Rechargeable Battery:** Each player has a built-in 2800mAh rechargeable battery, providing approximately 4-5 hours of playback for a single player, or 2-2.5 hours when both players are connected and playing simultaneously.



Figure 2: Demonstrates various power options for the DVD players, including the 2-in-1 car charger, AC adapter for home use, and the built-in rechargeable battery with an indicator showing charge levels.

Mounting in a Vehicle

To mount the DVD players on car headrests:

1. Attach the car mounting bracket to the headrest posts.
2. Secure the bracket by tightening the screws.
3. Slide the DVD player onto the bracket until it clicks into place.
4. Adjust the viewing angle as needed.



Figure 3: Step-by-step guide on how to install the DVD player using the car headrest mounting bracket. This includes attaching the bracket, securing it, sliding the player into position, and adjusting the screen.

Connecting Two Players for Simultaneous Playback

To play the same movie on both screens:

1. Connect the two DVD players using the provided AV cable (3.5mm to 3.5mm) by plugging one end into the AV OUT port of the master player and the other end into the AV IN port of the slave player.
2. On the slave player, press the **SOURCE** button and select **AV IN**.
3. Insert a DVD into the master player. Both screens will now display the same content.

The players can also play two different movies independently without connecting them via the AV cable.

Play a same movie on two players via AV cable connecting



HD DUAL DVD PLAYERS DESIGN



Play two different movies

Figure 4: Illustrates the connection of two WONNIE DVD players using an AV cable to display the same movie simultaneously. Also shows two players operating independently to play different movies.

OPERATING INSTRUCTIONS

Basic Controls

The DVD players feature on-device buttons and come with remote controls for convenient operation. Key buttons include:

- **SOURCE:** Select input source (DVD, AV IN, USB, SD).
- **SETUP:** Access the system settings menu.
- **VOL+/-:** Adjust volume level. Ensure both players' volumes are set to 20 for maximum sound when connected.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate menus and confirm selections.
- **Play/Pause, Stop, Fast Forward/Rewind:** Standard media playback controls.

Playing Media

1. **DVD/CD:** Open the disc tray, insert the disc with the label side facing up, and close the tray. The player will typically start playback

automatically. If not, select DVD as the source.

2. **USB/SD/MMC:** Insert a USB drive or SD/MMC card into the respective slot. Press the **SOURCE** button and select USB or SD/MMC. Navigate to your desired media file using the navigation buttons.

The players support a wide range of formats including CD, DVD, CD-R/RW, VCD, MP3, WMA, VOB, AVI, MPEG1, XVID, and JPEG. They are region-free, allowing playback of DVDs from any region. Blu-ray discs are not supported.

The advertisement features a central image of a black DVD player with a large screen displaying a group of people taking a selfie. The screen also shows a playback interface with 'POWER ON 00:29:30' and 'POWER OFF 00:29:30' text. Above the player, there are five icons representing supported media formats: a globe with 'ALL' (IT SUPPORTS), a CD/DVD icon (CD/DVD/CD-R/RW/VCD), a photo icon (JPG/JPEG), a music note icon (MP3/WMA), and a video player icon (VOB, AVI, MPEG 1, MPEG 2, XVID). The text 'Last Memory & Regions Free' and 'Make Sure Last Memory on at General Setup Page' is prominently displayed.

Figure 5: Displays the various media formats supported by the WONNIE DVD player, including CD/DVD, JPG/JPEG, MP3/WMA, and VOB/AVI/MPEG1/MPEG2/XVID. It also highlights the "Last Memory" function.

Last Memory Function

The player features a "Last Memory" function, which allows it to resume playback from where it left off after being powered off. Ensure this feature is enabled in the General Setup menu.

External Connections

The players offer various ports for connectivity:

- **AV IN:** For connecting external video sources to display on the player's screen (e.g., from another DVD player).
- **AV OUT:** For outputting video and audio to an external display (e.g., a TV) or another DVD player.
- **Headphone Jack:** For private listening.
- **USB Port:** For playing media files from a USB flash drive (up to 32GB, FAT32 format).
- **SD/MMC Card Slot:** For playing media files from an SD or MMC memory card (up to 32GB, FAT32 format).
- **DC IN 9-12V:** Power input port.



Figure 6: Detailed view of the various ports on the WONNIE DVD player, including AV IN, AV OUT, headphone jack, SD card slot, USB port, and DC IN 9-12V power input. Illustrations show how these ports connect to external devices like speakers, TVs, and storage devices.

MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth to gently wipe the screen. Do not use abrasive cleaners or solvents.
- **Cleaning the Disc Tray:** Keep the disc tray free of dust and debris. Avoid touching the laser lens inside the disc compartment.
- **Storage:** When not in use, store the players in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the battery regularly, even if the player is not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	No power supply; battery depleted.	Ensure AC adapter or car charger is properly connected, or charge the internal battery.
Disc does not play or loads slowly.	Disc is dirty, scratched, or incompatible format; laser lens is dirty.	Clean the disc. Try a different disc. Ensure the disc format is supported (Blu-ray is not supported). Do not touch the laser lens.
No sound or low volume.	Volume too low; headphones connected; incorrect audio settings.	Increase volume using VOL+ button. Disconnect headphones if using speakers. Check audio settings in the SETUP menu. If two players are connected, ensure both volumes are set to 20 for maximum output.
Second player not displaying content from master player.	AV cable not connected correctly; slave player source not set to AV IN.	Verify AV cable connection between AV OUT of master and AV IN of slave. On the slave player, press SOURCE and select AV IN.
USB/SD card not recognized.	Incorrect format; card/drive capacity too large; incorrect source selected.	Ensure USB drive/SD card is formatted to FAT32 and does not exceed 32GB. Press SOURCE and select USB or SD/MMC.

SPECIFICATIONS

- **Model:** P-USMJ1011-cr
- **Screen Size:** 10.5 inches (x2)
- **Display Type:** LCD
- **Resolution:** 1024x800 HD
- **Supported Disc Formats:** CD, DVD, CD-R/RW, VCD
- **Supported Media Formats:** MP3, WMA, VOB, AVI, MPEG1, XVID, JPEG (up to 720*576)
- **USB/SD/MMC Support:** Up to 32GB, FAT32 format
- **Battery:** Built-in 2800mAh rechargeable Lithium Metal battery (approx. 4-5 hours single player, 2-2.5 hours dual player)
- **Power Input:** DC 9-12V
- **Special Features:** Region-free, Last Memory function, Dual Speakers
- **Product Dimensions:** 11.2 x 10.7 x 5.2 inches (approximate, for one unit)
- **Item Weight:** 7.04 pounds (total for package)

WARRANTY AND SUPPORT

WONNIE provides a 1-year warranty for quality-related issues from the date of purchase. For technical support or customer service, please contact WONNIE directly through the Amazon platform ("Get product Support") or via the after-sales email provided with your product. Support is typically available within 24 hours.

