

Kyocera DuraXV Extreme E4810

Kyocera DuraXV Extreme E4810 User Manual

Model: DuraXV Extreme E4810

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Kyocera DuraXV Extreme E4810 rugged flip phone. Designed for durability, this device features 100dB+ front-facing dual loud speakers, dual-mic noise cancellation, HD voice for clear calls, Mobile Hotspot capability supporting up to 10 devices, and a 5MP auto-focus camera with LED flash and video recorder.



Figure 1: Front view of the Kyocera DuraXV Extreme E4810 when closed.

2. SETUP

2.1 Package Contents

Ensure all items are present in your product package:

- Kyocera DuraXV Extreme E4810 Phone
- Standard Battery (STD Battery)
- Data Cable
- Cling (Screen Protector)

2.2 Battery and SIM Card Installation

To install the battery and SIM card:

1. Locate the battery cover on the back of the phone.
2. Carefully remove the battery cover.
3. Insert the SIM card into the designated slot, ensuring proper orientation.
4. Insert the Lithium Ion battery into its compartment.
5. Replace the battery cover, ensuring it clicks securely into place to maintain water and dust resistance.



Figure 2: Back view of the Kyocera DuraXV Extreme E4810, showing battery cover area.

2.3 Initial Charging

Before first use, fully charge your device using the provided data cable and a compatible power adapter. Connect the data cable to the phone's charging port (refer to Figure 4 for port location) and the other end to a power source.

2.4 Powering On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen illuminates.
- **To Power Off:** Press and hold the Power/End Call button, then select 'Power off' from the options.

3. OPERATING INSTRUCTIONS

3.1 Basic Call Functions

- **Making a Call:** Enter the phone number using the keypad and press the Send button.
- **Answering a Call:** Press the Send button when the phone rings.
- **Ending a Call:** Press the Power/End Call button.
- **HD Voice:** Enjoy crystal clear calls with HD Voice support.

3.2 Messaging

The phone supports sending and receiving text messages. Navigate to the 'Messages' application from the main menu to compose new messages or view existing conversations.

3.3 Camera Functions

The Kyocera DuraXV Extreme E4810 is equipped with a 5MP auto-focus camera with LED flash. To use the camera:

1. Open the 'Camera' application from the menu.
2. Frame your shot using the display.
3. Press the designated camera button or center navigation button to capture a photo or start/stop video recording.



Figure 3: Open view of the Kyocera DuraXV Extreme E4810, showing the screen and keypad.

3.4 Mobile Hotspot

Your device can function as a mobile hotspot, allowing up to 10 other devices to connect to its LTE network. Refer to the phone's settings for Mobile Hotspot activation and configuration.

3.5 GPS Navigation

The phone includes GPS capabilities. Specific navigation applications may vary based on carrier and software version. Consult your device's application list for available GPS features.

3.6 Bluetooth Connectivity

The DuraXV Extreme supports Bluetooth for connecting to various accessories. Supported profiles include HSP, HFP,

OPP, FTP, PBA, A2DP, AVRC, HID, PAN, SAP, MAP. To pair a Bluetooth device, navigate to 'Settings' > 'Bluetooth' and follow the on-screen instructions.



Figure 4: Side view of the Kyocera DuraXV Extreme E4810, illustrating external ports and buttons.

3.7 Audio Features

Benefit from 100dB+ front-facing dual loud speakers for clear audio in noisy environments and dual-mic noise cancellation for improved call clarity.

4. MAINTENANCE

4.1 Cleaning Your Device

To clean your phone, use a soft, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used. Avoid harsh chemicals or abrasive materials.

4.2 Water and Dust Resistance

The Kyocera DuraXV Extreme E4810 is designed to be waterproof and dustproof. Ensure all port covers and the battery cover are securely closed to maintain its protective ratings. Do not intentionally submerge the device beyond its specified limits.

4.3 Drop Protection

This rugged phone is built to withstand drops. While highly durable, extreme impacts can still cause damage. Handle with care to prolong the device's lifespan.

4.4 Battery Care

To maximize battery life, avoid exposing the phone to extreme temperatures. Charge the battery regularly and avoid complete discharge when possible. The device uses a 3600 Milliamp Hours Lithium Ion battery.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

Problem	Possible Cause	Solution
Phone does not power on	Low battery; Battery not installed correctly	Charge the battery; Reinstall battery
Cannot make/receive calls	No network signal; SIM card issue	Move to an area with better signal; Reinsert SIM card
Audio is unclear or distorted	Obstruction of speakers/microphones; Volume too low/high	Clean speakers/mics; Adjust volume settings
Device overheating	Heavy usage; Poor ventilation	Reduce usage; Ensure phone is not covered

5.2 Factory Reset

A factory reset will erase all data on your phone and restore it to its original settings. This should only be performed as a last resort for persistent issues. Consult your carrier or Kyocera support for specific steps, as they may vary.

6. SPECIFICATIONS

Feature	Detail
Model Number	DuraXV
Manufacturer	KYOCERA
Color	Black
Form Factor	Flip
Package Dimensions	4.69 x 2.95 x 2.56 inches
Item Weight	6.8 ounces
Batteries	1 Lithium Ion batteries required (included)
Battery Power Rating	3600 Milliamp Hours
Wireless Communication Technologies	Cellular, Wi-Fi

Feature	Detail
Connectivity Technologies	Wi-Fi
GPS	True
Special Features	Bluetooth Supported Profiles: HSP, HFP, OPP, FTP, PBA, A2DP, AVRC, HID, PAN, SAP, MAP Extreme+: version 5.1 / original Extreme: version 4.2
Display Technology	LED
Human Interface Input	Keypad
Other Camera Features	Front
Flash	Internal
Shooting Modes	Automatic
Exposure Control Type	Automatic
Video Capture Resolution	720p
Media Type	SD Card
Date First Available	September 2, 2020

7. WARRANTY AND SUPPORT

7.1 Manufacturer's Warranty

The Kyocera DuraXV Extreme E4810 comes with a Manufacturer's 2-Year Warranty. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty information provided with your device or visit the official Kyocera website.

7.2 Customer Support

For further assistance, technical support, or warranty inquiries, please contact Kyocera customer service or your service provider. Contact information can typically be found on the manufacturer's official website or your carrier's support pages.

© 2024 Kyocera. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question