

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Philips](#) /

› [Philips Grill Master Accessory Kit HD9941/00 Instruction Manual](#)

Philips HD9941/00

Philips Grill Master Accessory Kit HD9941/00 Instruction Manual

INTRODUCTION

This manual provides instructions for the safe and effective use of your Philips Grill Master Accessory Kit (Model HD9941/00). This kit is designed to enhance the grilling capabilities of your Philips compact Airfryer, allowing you to prepare a variety of grilled dishes.

PRODUCT OVERVIEW

The Philips Grill Master Accessory Kit includes the following components:

- 1 Grill Pan with non-stick coating and perforated surface.
- 4 Metal Skewers.
- 1 Recipe Booklet (includes chef's tips, beginner's recipe, and cooking times).



This image displays the complete Philips Grill Master Accessory Kit, featuring the non-stick grill pan and four metal skewers, designed for use with Philips compact Airfryer models.



A detailed view of the grill pan's perforated surface, engineered to allow optimal airflow for even grilling and browning of food.



This image shows the grill pan from a side perspective, illustrating how it integrates with the Airfryer basket's handle mechanism for secure placement and removal.



The grill pan is shown detached from its handle, highlighting its separate components for easier cleaning and storage.



An example of the metal skewers loaded with various vegetables and meat, ready for grilling in the Airfryer, demonstrating their practical use.

COMPATIBILITY

The Philips Grill Master Accessory Kit (HD9941/00) is compatible with Philips Airfryer models **HD972x** and **HD974x**. This accessory kit is **not compatible** with Airfryer models HD9650, HD9630, HD9240, HD9220, and HD9230.

SETUP

1. Before first use, wash the grill pan and metal skewers with warm soapy water. Rinse thoroughly and dry completely.
2. Ensure your Philips Airfryer is unplugged and cool before inserting or removing accessories.
3. Carefully place the grill pan into the Airfryer basket, ensuring it sits securely.
4. The metal skewers can be used by piercing food items and then placing them onto the grill pan or directly into the Airfryer basket if space allows, depending on your Airfryer model and recipe.

OPERATING INSTRUCTIONS

1. **Preheating:** For best grilling results, preheat your Airfryer with the grill pan inside for 3-5 minutes at the recommended temperature for your recipe.
2. **Placing Food:** Arrange food items directly on the grill pan. For skewers, thread your ingredients and place the skewers on the grill pan. Do not overcrowd the pan to ensure even cooking and airflow.
3. **Cooking Time:** Refer to the included recipe booklet or your Airfryer's manual for recommended cooking times and temperatures for various grilled foods. Adjust as necessary based on food type and desired doneness.
4. **Turning Food:** For even grilling, turn food items halfway through the cooking process using heat-

resistant tongs.

5. **Removal:** Always use oven mitts or heat-resistant gloves when removing the hot grill pan and skewers from the Airfryer.

MAINTENANCE AND CLEANING

1. **After Each Use:** Allow the grill pan and skewers to cool completely before cleaning.
2. **Hand Washing:** Wash the grill pan and skewers with warm water and a mild dish soap. Use a non-abrasive sponge or cloth to protect the non-stick coating. Rinse thoroughly.
3. **Dishwasher Safe:** The grill pan and metal skewers are dishwasher safe. Place them on the top rack of your dishwasher for cleaning.
4. **Stubborn Residue:** For baked-on food, soak the grill pan in warm soapy water for a few minutes before cleaning. Avoid using metal scouring pads or harsh abrasive cleaners, as these can damage the non-stick surface.
5. **Storage:** Store the clean and dry accessories in a safe place.

TROUBLESHOOTING

- **Food Not Grilling Evenly:** Ensure the grill pan is not overcrowded. Turn food halfway through cooking. Check that your Airfryer is operating at the correct temperature.
- **Food Sticking to Pan:** Ensure the non-stick coating is intact. Lightly brush or spray food with a small amount of oil before grilling, if appropriate for the recipe.
- **Smoke from Airfryer:** Excessive smoke can occur if there is too much fat or oil. Ensure the Airfryer basket and accessories are clean. Trim excess fat from meat before grilling.

SPECIFICATIONS

Model	HD9941/00
Color	Black
Material	Plastic (handle/frame), Metal with Non-stick coating (grill pan), Metal (skewers)
Product Dimensions	7.87 x 8.07 x 3.15 inches (20 x 20.5 x 8 cm)
Item Weight	7.8 ounces (0.22 Kilograms)
Special Feature	Dishwasher Safe
Recommended Use	Grilling in Philips compact Airfryers

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your Philips Airfryer or visit the official Philips website. Keep your purchase receipt as proof of purchase for warranty claims.

