

Indesit MWI 120 GX

Indesit MWI 120 GX Microwave Grill User Manual

Model: MWI 120 GX

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- **Do not** operate the microwave oven if the door or door seals are damaged.
- **Do not** heat liquids or other foods in sealed containers as they are liable to explode.
- **Never** use the appliance for anything other than its intended purpose.
- **Always** ensure food is thoroughly cooked to avoid foodborne illness.
- **Do not** allow children to use the microwave oven without supervision.
- **Never** attempt to repair or modify the appliance yourself. Contact qualified service personnel.
- **Ensure** proper ventilation around the appliance during operation.
- **Use** only microwave-safe utensils and containers.
- **Be cautious** when removing hot food or liquids from the microwave.

PRODUCT OVERVIEW

The Indesit MWI 120 GX is a 20-liter built-in microwave grill designed for efficient cooking and grilling. It features a stainless steel finish and a ceramic interior for durability and easy cleaning.



Figure 1: Front view of the Indesit MWI 120 GX Microwave Grill, showing the control panel and door.

Key Components:

- **Control Panel:** Features knobs and buttons for setting cooking time, power level, and functions.
- **Door:** Equipped with a safety lock mechanism.
- **Turntable:** Rotates food for even cooking. Includes a rotating ring.
- **Grill Element:** Located at the top of the interior for grilling functions.
- **Ceramic Interior:** Easy to clean and durable.

SETUP AND INSTALLATION

The Indesit MWI 120 GX is designed for built-in installation. Professional installation is recommended to ensure proper fit and electrical connection.

Before Installation:

- Unpack the microwave oven and all accessories.
- Check for any damage during transit. Do not install if damaged.
- Ensure the installation cabinet dimensions match the appliance dimensions (10D x 48B x 50H cm).
- Ensure the electrical outlet is properly grounded and meets the required voltage (220V) and wattage (3600W for grill, 800W for microwave).

Initial Use:

1. Clean the interior of the microwave with a damp cloth.
2. Place the rotating ring and glass turntable inside the oven.
3. Plug the appliance into a grounded electrical outlet.
4. Run the microwave empty for 5 minutes on high power to remove any manufacturing odors. Ensure the room is well-ventilated during this process.

OPERATING INSTRUCTIONS

The Indesit MWI 120 GX offers various cooking functions controlled by the front panel knobs and buttons.

Basic Microwave Cooking:

1. Place food in a microwave-safe container on the turntable.
2. Close the door securely.
3. Select the desired microwave power level using the power knob (1 power level available, 800W).
4. Set the cooking time using the timer knob or buttons.
5. Press the start button to begin cooking.

Grill Function:

Use the grill function for browning and crisping food. Ensure the grill rack (if supplied) is used for best results.

1. Place food on the grill rack in a heat-resistant dish.
2. Close the door.
3. Select the grill function using the function selector.
4. Set the grilling time.
5. Press the start button. Monitor food closely to prevent burning.

Defrost Function:

The appliance features a dedicated defrost system to thaw frozen foods evenly.

1. Place frozen food in a microwave-safe container.
2. Close the door.
3. Select the defrost function.
4. Enter the weight of the food or the desired defrost time.
5. Press the start button. Turn food over periodically for even defrosting.

Pre-set Programs:

The microwave grill includes 6 pre-set programs for common dishes. Refer to the appliance's internal display or a quick guide for specific program details.

1. Place food in the oven.
2. Select the desired program number using the control panel.
3. Confirm the selection and press start.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and efficient operation of your Indesit MWI 120 GX Microwave Grill.

- **Always unplug** the appliance before cleaning.
- **Interior Cleaning:** Wipe the ceramic interior with a damp cloth and mild detergent after each use. For stubborn

stains, heat a bowl of water with lemon juice in the microwave for a few minutes to loosen residue, then wipe clean.

- **Exterior Cleaning:** Clean the stainless steel exterior with a soft, damp cloth. Avoid abrasive cleaners or scouring pads that can scratch the surface.
- **Door and Seals:** Regularly clean the door, door seals, and adjacent parts with a damp cloth to remove spills and ensure proper sealing.
- **Turntable and Ring:** The glass turntable and rotating ring can be washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Grill Element:** The grill element is self-cleaning to some extent during use. For any residue, ensure the oven is cool, then gently wipe with a damp cloth. Do not use harsh chemicals.

TROUBLESHOOTING

If you encounter issues with your microwave grill, refer to the table below for common problems and solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Microwave does not start.	Power cord unplugged; door not closed properly; fuse blown.	Check power connection; ensure door is latched; check household fuse/circuit breaker.
Food not heating evenly.	Turntable not rotating; food placed incorrectly; insufficient cooking time.	Ensure turntable and ring are correctly positioned; stir or turn food during cooking; increase cooking time.
Unusual noise during operation.	Turntable or ring not seated correctly; foreign object inside.	Reposition turntable and ring; check for and remove any obstructions.
Smoke or sparks inside.	Metal in microwave; food residue burning.	Immediately turn off and unplug. Remove metal objects. Clean interior thoroughly.

SPECIFICATIONS

Model Name:	MWI 120 GX
Brand:	Indesit
Capacity:	20 Liters
Microwave Power:	800 Watts
Grill Power:	3600 Watts
Voltage:	220 Volts
Product Dimensions (D x W x H):	10D x 48B x 50H centimeters
Weight:	15.5 Kilograms
Material:	Stainless Steel (Exterior), Ceramic (Interior)
Installation Type:	Built-in
Control Type:	Knob, Keyboard
Number of Power Levels:	1
Number of Programs:	6

Defrost System:	Yes
Timer Function:	Yes

WARRANTY AND SUPPORT

Your Indesit MWI 120 GX Microwave Grill comes with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and faulty materials under normal domestic use.

To claim warranty service or for technical support, please contact Indesit customer service. Keep your proof of purchase for warranty validation.

Contact Information:

Please refer to the Indesit official website or the documentation included with your appliance for the most up-to-date customer service contact details in your region.

Availability of Spare Parts: Spare parts for this appliance are guaranteed to be available in the EU for a period of 2 years.