

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Qaba](#) /

› [Qaba Corner Kids Kitchen Playset, Wooden Pretend Toy Kitchen Set with Drinking Fountain, Microwave, Fridge and Accessories, Pretend Play Kitchen for 3+ Years, White](#)

Qaba 350-079WT

Qaba Corner Kids Kitchen Playset Instruction Manual

Model: 350-079WT

Brand: Qaba

INTRODUCTION

This instruction manual provides detailed information for the assembly, operation, and maintenance of your Qaba Corner Kids Kitchen Playset (Model: 350-079WT). Please read this manual thoroughly before assembly and use to ensure safe and proper functionality. This playset is designed to provide an engaging and educational play experience for children aged 3 years and up, encouraging imaginative play and skill development.



Figure 1: Qaba Corner Kids Kitchen Playset with included accessories.

SAFETY INFORMATION

WARNING: This product can expose you to chemicals including formaldehyde, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

- Adult assembly required. Keep small parts away from children during assembly.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- This playset is intended for indoor use only.
- Do not allow children to climb on the playset, as this may cause tipping or injury.
- Keep away from open flames and heat sources.
- Supervise children during play to prevent misuse or accidents.
- The electronic water dispenser requires 2 AA batteries (not included). Ensure batteries are inserted with correct polarity and dispose of used batteries responsibly.

PARTS LIST

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Main Kitchen Unit (Corner Section)
- Refrigerator Unit (Detachable)
- Microwave Unit
- Sink with Faucet
- 1 Knife
- 1 Fork
- 2 Spoons
- 1 Saucepan
- 1 Round Pot
- 2 Seasoning Bottles (Salt & Pepper)
- 1 Crab Play Food
- 1 Onion Play Food
- 1 Mushroom Play Food
- 1 Shrimp Play Food
- 1 Fish Play Food
- 1 Broccoli Play Food
- Assembly Hardware (screws, dowels, etc.)

REALISTIC KITCHEN PLAYSET



Simulation microwave



Electronic drinking fountain
(2 AA batteries required)



Simulation water tank



Simulation range hood



Simulation refrigerator

Figure 2: Overview of the Qaba Corner Kids Kitchen Playset and its 14 included accessories.

SETUP AND ASSEMBLY

Assembly of the Qaba Corner Kids Kitchen Playset requires careful attention to the provided diagrams and instructions. It is recommended to have two adults for assembly. A Phillips head screwdriver will be needed.

- 1. Unpack and Organize:** Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches. Identify each part using the labels and the parts list.
- 2. Assemble Base Units:** Begin by assembling the main corner kitchen unit and the separate refrigerator unit according to the step-by-step diagrams in the included assembly guide. Ensure all cam locks and screws are fully tightened.
- 3. Attach Appliances:** Secure the microwave unit above the stove area. Install the sink basin into its designated cutout on the countertop.
- 4. Install Accessories:** Attach the faucet to the sink. Hang the wooden utensils on the hooks provided. Place the salt and pepper shakers on the shelf.
- 5. Battery Installation:** Locate the battery compartment for the electronic water dispenser (typically on the back or underside of

the refrigerator unit). Insert 2 AA batteries, ensuring correct polarity.

6. **Final Placement:** Position the assembled kitchen playset in its desired location. The refrigerator unit can be detached and placed separately if preferred.



Figure 3: Detailed view of the playset's dimensions and structural components for assembly.



Figure 4: The playset features an opening oven door and internal shelving for storage.

OPERATING INSTRUCTIONS

The Qaba Corner Kids Kitchen Playset offers various interactive features for realistic play:

- **Microwave:** The microwave door opens and closes. The keypad is for pretend play and does not have electronic functions.
- **Stove Burners:** The stove features two pretend burners. The knobs can be turned to simulate cooking.
- **Sink and Faucet:** The sink basin can hold a small amount of water for realistic washing. The faucet is stationary.
- **Electronic Water Dispenser:** Located on the refrigerator door, this dispenser makes sounds when activated, simulating water or ice dispensing. Ensure batteries are installed for this feature.
- **Refrigerator and Oven:** Both the refrigerator and oven have doors that open and close, providing storage space for play food and accessories.

FUN KIDS KITCHEN PLAY SET



Figure 5: Key interactive elements of the playset, including the microwave, electronic water dispenser, and sink.

Your browser does not support the video tag.

Video 1: Demonstration of the Qaba Kids Kitchen Playset features and overall design.

MAINTENANCE AND CARE

- Cleaning:** Wipe down all surfaces with a soft, damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals. Dry thoroughly after cleaning.
- Water Management:** If using water in the sink, ensure it is emptied and dried completely after each play session to prevent mold or damage to the wooden components.
- Hardware Check:** Periodically inspect all screws, bolts, and connectors to ensure they are tight. Re-tighten as necessary to maintain structural integrity.
- Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or fading.
- Battery Replacement:** Replace AA batteries in the electronic water dispenser when sounds become faint or stop working.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Electronic water dispenser not working.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with new 2 AA batteries.
Playset feels wobbly or unstable.	Loose screws or fasteners.	Inspect all connection points and tighten any loose screws. Ensure the playset is on a flat, stable surface.
Doors (oven, fridge) do not close properly.	Hinges are loose or misaligned.	Check and tighten screws on hinges. Adjust door alignment if necessary.

SPECIFICATIONS

- Model Number:** 350-079WT
- Overall Dimensions:** 33.75" L x 25.25" W x 33.25" H
- Item Weight:** 40.7 pounds
- Recommended Age:** 3 years and up
- Material:** Pine and P2 level MDF board
- Batteries Required:** 2 AA batteries (for electronic water dispenser)
- Manufacturer:** Aosom LLC

PERFECT SIZE FOR CHILDREN



Figure 6: The playset's height is suitable for children aged 3 and up.

WARRANTY AND SUPPORT

For warranty information, missing parts, or technical support, please contact the manufacturer, Aosom LLC. Refer to your purchase documentation for specific warranty terms and contact details. You can also visit the official Qaba store on Amazon for additional product information and support resources.

Online Store: [Qaba Store on Amazon](#)

 <p>Qaba Play Kitchen Set 350-079 Assembly Instructions</p>	<p>Comprehensive assembly instructions for the Qaba 350-079 Play Kitchen Set. Includes parts list, hardware details, and step-by-step guidance for adult assembly.</p>
 <p>Qaba 350-141V00 Kids Play Kitchen Set Assembly Instructions</p>	<p>Comprehensive assembly guide for the Qaba 350-141V00 Kids Play Kitchen Set. This manual provides a detailed parts list, hardware inventory, and step-by-step instructions for adult assembly, ensuring a safe and fun play experience for children aged 3-6 years. Includes contact information for Aosom customer care.</p>
 <p>Qaba 350-142V00_350-142V01 Play Kitchen Assembly Instructions and Safety Guide</p>	<p>Comprehensive assembly instructions, safety warnings, and care information for the Qaba 350-142V00_350-142V01 wooden play kitchen. Includes parts list, hardware details, and step-by-step assembly guidance.</p>
 <p>Qaba 311-034 Toy Box Kids Seat Bench Storage Chest Assembly Instructions</p>	<p>Assembly instructions and safety information for the Qaba 311-034 wooden toy box and kids seat bench storage chest. Includes part lists, hardware details, and maintenance care.</p>
 <p>Qaba 4-Piece Kids Table and Chair Set with Storage Bench - Model 312-001</p>	<p>Assembly instructions, safety warnings, and maintenance guide for the Qaba 4-Piece Kids Table and Chair Set with Storage Bench (Model 312-001). This set is designed for children aged 3 years and older, with a maximum weight capacity of 25 Kg for chairs and table. The document includes bilingual (English/French) safety information and contact details for Aosom.</p>
 <p>Qaba 312-134V80 Kids Table and Chair Set Assembly Instructions</p>	<p>Official assembly instructions for the Qaba 312-134V80 Kids Table and Chair Set. Includes parts list, hardware details, step-by-step assembly guide, and care instructions. Suitable for ages 3+.</p>

