Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- MASINGO /
- MASINGO G2 Portable Karaoke Machine User Manual

MASINGO G2

MASINGO G2 Portable Karaoke Machine User Manual

Model: G2

1. Introduction

This manual provides comprehensive instructions for the safe and efficient operation of your MASINGO G2 Portable Karaoke Machine. Please read this manual thoroughly before use and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 1 x MASINGO G2 Portable Karaoke Machine
- 2 x Wireless Microphones
- 1 x 3.5 mm AUX Cable
- 1 x 3.5 mm AUX-RCA TV Cable
- 1 x USB Charging Cable
- 1 x Power Adapter
- 1 x User Manual (this document)

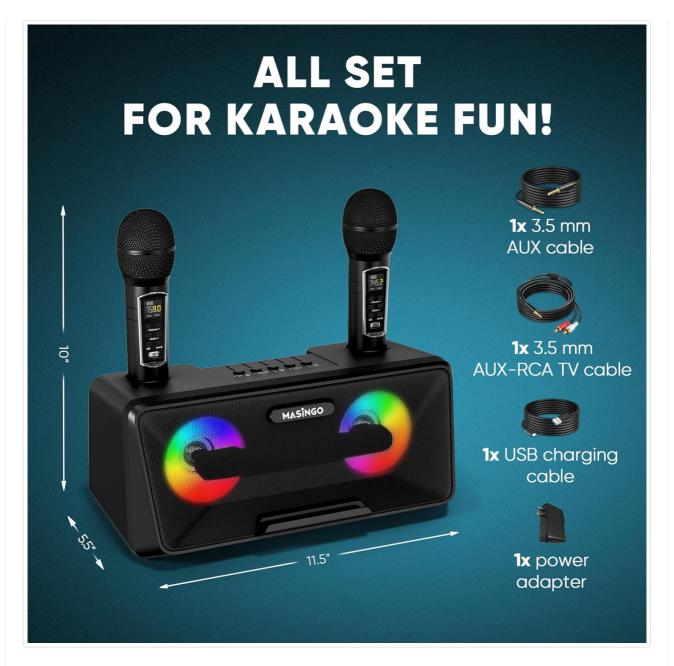


Image: The MASINGO G2 Karaoke Machine displayed with its two wireless microphones, 3.5mm AUX cable, 3.5mm AUX-RCA TV cable, USB charging cable, and power adapter. Dimensions are indicated as 11.5 inches (width), 5.5 inches (depth), and 10 inches (height).

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your MASINGO G2 Karaoke Machine.



Image: The MASINGO G2 Portable Karaoke Machine, a black rectangular unit with two wireless microphones docked on top. The front features a speaker grille with colorful LED lights and the 'MASINGO' brand logo.

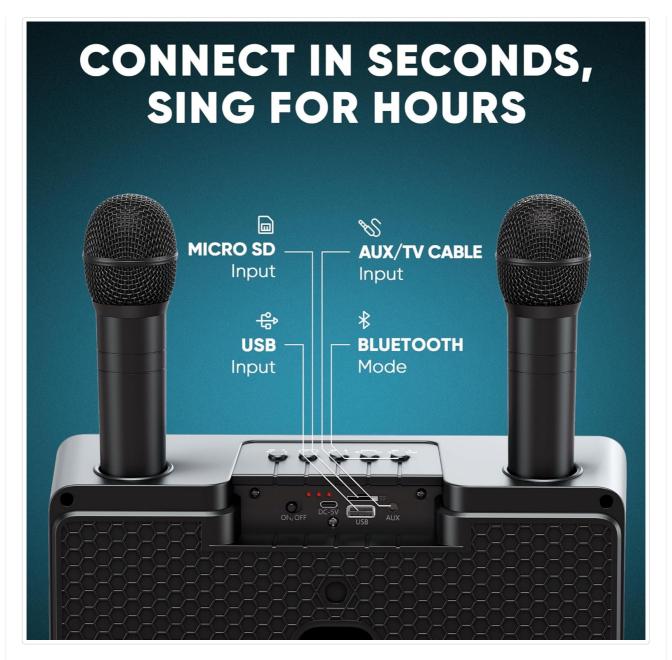


Image: A diagram illustrating the input ports on the MASINGO G2 Karaoke Machine. These include a Micro SD Input, USB Input, AUX/TV Cable Input, and an indicator for Bluetooth Mode.

4. SETUP

4.1 Charging the Unit and Microphones

- 1. Connect the USB charging cable to the karaoke machine's DC 5V input port and the power adapter. Plug the adapter into a standard wall outlet.
- 2. The unit's charging indicator will illuminate. Allow approximately 3-4 hours for a full charge.
- 3. Place the wireless microphones into their respective docking slots on the karaoke machine. The microphones will charge automatically when docked, even if the main unit is not plugged in, provided the unit has sufficient battery.
- 4. A full charge provides up to 3 hours of operation.



Image: The MASINGO G2 Karaoke Machine highlighting its dual wireless microphones. The image indicates 'Quick Sync Activation' for instant connection and 'Rechargeable Battery' with a 3-hour power capacity, recharging directly in the machine.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the 'ON/OFF' button located on the control panel to power the unit on or off.

5.2 Bluetooth Connection

- 1. Power on the MASINGO G2 Karaoke Machine. It will automatically enter Bluetooth pairing mode.
- 2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
- 3. Select "MASINGO G2" from the list of devices. A confirmation sound will indicate a successful connection.
- 4. You can now play audio from your device through the karaoke machine.

5.3 USB and Micro SD Playback

- 1. Insert a USB flash drive or a Micro SD card (with pre-loaded audio files) into the corresponding port on the karaoke machine.
- 2. The machine will automatically detect the storage device and begin playing audio.
- 3. Use the control buttons on the unit to navigate tracks (play/pause, next/previous).

5.4 AUX/TV Connection

To connect to an external audio source or a TV:

- 1. Using the provided 3.5 mm AUX cable, connect one end to the AUX input on the karaoke machine and the other end to the audio output of your external device.
- 2. Alternatively, use the 3.5 mm AUX-RCA TV cable to connect the karaoke machine to your television's audio input ports (red and white RCA jacks).
- 3. Ensure the karaoke machine is set to AUX input mode (if applicable, refer to control panel indicators).



Image: The MASINGO G2 Karaoke Machine positioned in front of a television screen, demonstrating its connectivity to a TV for displaying lyrics. The image highlights the inclusion of an AUX-RCA TV Cable.

5.5 Microphone Usage

The wireless microphones are designed for ease of use and offer adjustable settings:

- Power: Each microphone has an individual power button. Press to turn on/off.
- Volume: Use the '+' and '-' buttons on the microphone to adjust your vocal volume.
- Echo: The 'Echo' button allows you to add or reduce an echo effect to your voice.
- EQ: The 'EQ' button cycles through different equalization presets for your voice.

6. MAINTENANCE

6.1 Cleaning

Wipe the unit and microphones with a soft, dry cloth. Do not use abrasive cleaners or solvents. Avoid exposing the unit to excessive moisture.

6.2 Battery Care

The MASINGO G2 contains a rechargeable Lithium-ion battery (5V 2000 mAh). To prolong battery life:

- Fully charge the unit before first use.
- · Avoid completely draining the battery frequently.
- If storing the unit for an extended period, charge it to approximately 50% every few months.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted; Power adapter not connected.	Charge the unit using the provided power adapter.
No sound from speaker	Volume too low; Incorrect input mode; Device not connected.	Increase volume; Select correct input mode (Bluetooth, AUX, USB/SD); Ensure device is properly connected.
Microphones not working	Microphone battery low; Microphone not powered on; Microphone out of range.	Charge microphones by docking them; Ensure microphones are powered on; Keep microphones within operating range of the main unit.
Bluetooth connection issues	Device too far; Bluetooth not enabled on device; Interference.	Move device closer to the unit; Enable Bluetooth on your device; Disconnect other Bluetooth devices.

8. SPECIFICATIONS

Brand: MASINGOModel Number: G2

Connectivity Technology: Bluetooth
 Special Features: Portable, Wireless

• Total USB Ports: 1

• Rechargeable Battery: Yes (1 Lithium-ion battery required)

• Battery Capacity: 5V 2000 mAh (up to 3 hours playtime)

• Speaker Power: 15 Watts

• Speaker Size: Dual 4-inch speakers

• Number of Channels: 2

• Item Dimensions (L x W x H): 29 x 15 x 16 cm (approximately 11.5 x 5.9 x 6.3 inches)

Item Weight: Approximately 4 lbs
Compatible Devices: Speaker
Power Source: Battery Powered

• Connector Type: USB

· Color: Black

• UPC: 810101037047

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official MASINGO website. Please retain your proof of purchase for warranty claims.

Related Documents - G2



Masingo Lento X5 Karaoke Machine User Manual

Comprehensive user manual for the Masingo Lento X5 Karaoke Machine. Learn about setup, operation, features like Bluetooth connectivity, wireless microphones, PA system functionality, LED lights, and troubleshooting for an optimal party experience.



Masingo Festoso X9 Karaoke Machine User Manual

Comprehensive user manual for the Masingo Festoso X9 Karaoke Machine, covering setup, features, operation, troubleshooting, and maintenance.



Masingo Soprano X1 Karaoke Machine User Manual

User manual for the Masingo Soprano X1 Karaoke Machine, detailing its features, setup, operation, maintenance, and troubleshooting. Learn how to connect devices, use microphones, and enjoy your karaoke experience.



MASINGO Festoso X9 Karaoke Machine User Manual

Comprehensive user manual for the MASINGO Festoso X9 Karaoke Machine, detailing setup, features, operation, app usage, and troubleshooting.



Masingo Soprano X1 Karaoke Machine User Manual

User manual for the Masingo Soprano X1 Karaoke Machine, covering setup, features, operation, maintenance, and troubleshooting for this portable PA system with wireless microphones.



Masingo Allegro X8 User Manual: Your Guide to Professional Karaoke

Discover the Masingo Allegro X8, a feature-rich karaoke machine designed for professional-quality sound and an engaging party experience. This user manual guides you through setup, operation, and maintenance.