



Manuals.plus /

› VITESSE /

› Vitesse 42 inch Ultra-Thin Electric Fireplace User Manual

VITESSE 42-FP-C3

Vitesse 42 inch Ultra-Thin Electric Fireplace User Manual

Model: **42-FP-C3** | Brand: **VITESSE**

1. IMPORTANT SAFETY INFORMATION

Please read and understand this entire owner's manual, including all safety information, before plugging in or using this product. Failure to do so could result in fire, electric shock, or serious personal injury.

- Always unplug the fireplace when not in use.
- Do not operate any fireplace with a damaged cord or plug, or if the heater has malfunctioned, been dropped, or damaged in any manner.
- Do not use outdoors. This fireplace is intended for indoor use only.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the fireplace and away from the sides and rear.
- To prevent a possible fire, do not block air intakes or exhaust openings in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- The fireplace is equipped with an auto-heat kill safety feature to prevent overheating. If the heater shuts off, unplug the unit and allow it to cool for 10-15 minutes before restarting.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep away from other appliances to ensure proper ventilation and operation.

2. PACKAGE CONTENTS

Carefully remove all components from the packaging and place them on a soft, clean surface. Ensure all items listed below are present before discarding packaging materials.

- Electric Fireplace Unit
- Remote Control

- Mounting Hardware (screws, anchors, brackets)
- User Manual

3. SPECIFICATIONS

Feature	Specification
Brand	VITESSE
Model Name	42-FP-C3
Product Dimensions	3.85"D x 42"W x 18.11"H
Item Weight	37.8 Pounds
Power Source	Corded Electric
Material	Metal, Tempered Glass
Finish Type	Powder Coated
Installation Type	Wall Mount, Recessed, Semi-Recessed
Heat Output	750W / 1500W
Heating Coverage	Up to 400 square feet
Special Features	Energy Saving, Flame Effect, Timer, Low Noise
Flame Colors	12 options
Ember Bed Colors	12 options
Flame Speeds	5 options
Timer	1 to 8 hours
Included Components	Remote Control
Cord Length	5.2 ft

4. INSTALLATION

This electric fireplace offers versatile installation options: it can be recessed into a wall or mounted directly on a wall surface. It is designed to fit perfectly within a 2" x 6" stud wall.

4.1 Wall Mounted Installation

For wall-mounted installation, ensure the chosen wall can support the weight of the fireplace. Use the provided mounting hardware to securely attach the unit to the wall.

Two Install Methods

Wall-Mounted



Recessed



Image: Illustration of the two primary installation methods: wall-mounted and recessed.

4.2 Recessed Installation

For recessed installation, a cutout in the wall is required. The fireplace's ultra-thin design, with a depth of 3.85 inches, allows for a sleek, flush appearance. Refer to the detailed dimensions below for precise cutout measurements.

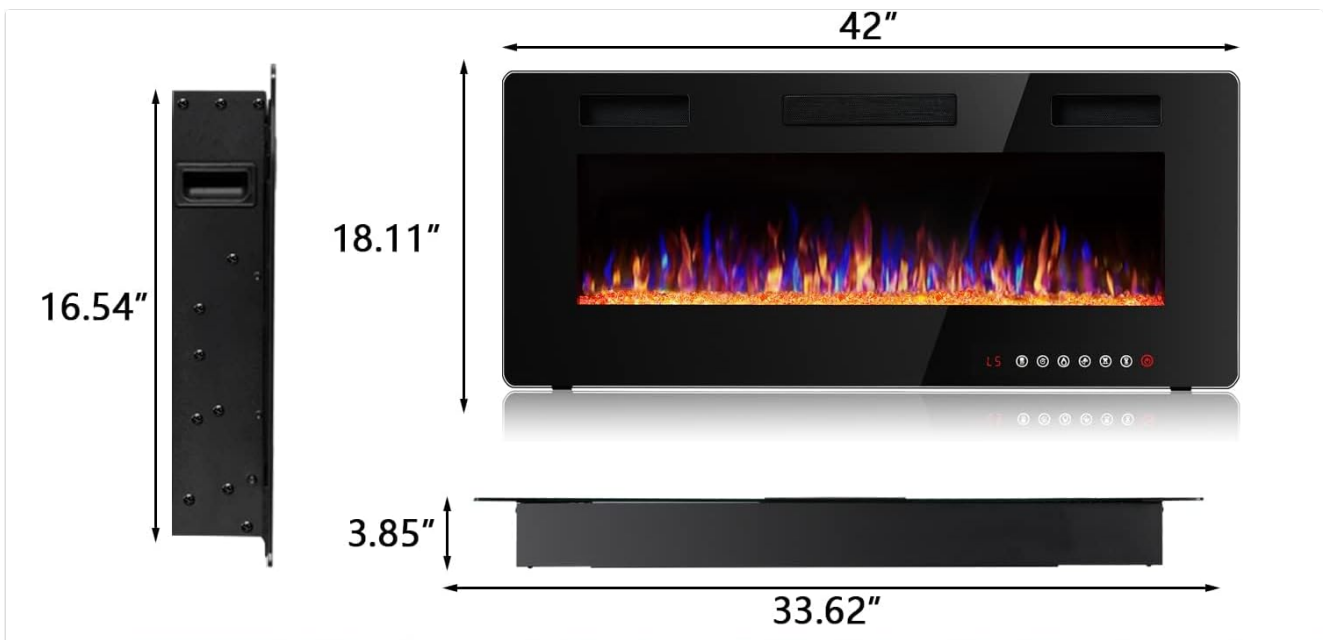


Image: Detailed dimensions of the fireplace (42"W x 18.11"H x 3.85"D) and recommended wall opening for recessed installation (approximately 34.21"-34.61"W x 16.95"-17.7"H x 3.58"-3.94"D).

4.3 Power Cord Management

The power cord is 5.2 feet long and is located on the right side of the unit. Ensure the cord is not pinched or routed through areas where it could be damaged. The unit features a cable protection design for safety.



Cable Protection Design

Cord length: 5.2ft




Cord located: Right side

Main Switch



Ultra-Thin Design

Others:

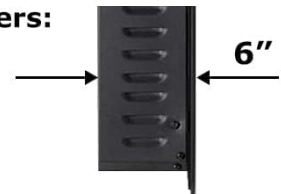

Ours:



Image: Illustration of the cable protection design and the location of the main power switch.

5. OPERATING INSTRUCTIONS

The Vitesse electric fireplace can be operated using either the integrated touch screen controls on the unit or the included remote control.

5.1 Controls Overview



Image: Depiction of the two control methods: remote control and touch screen.

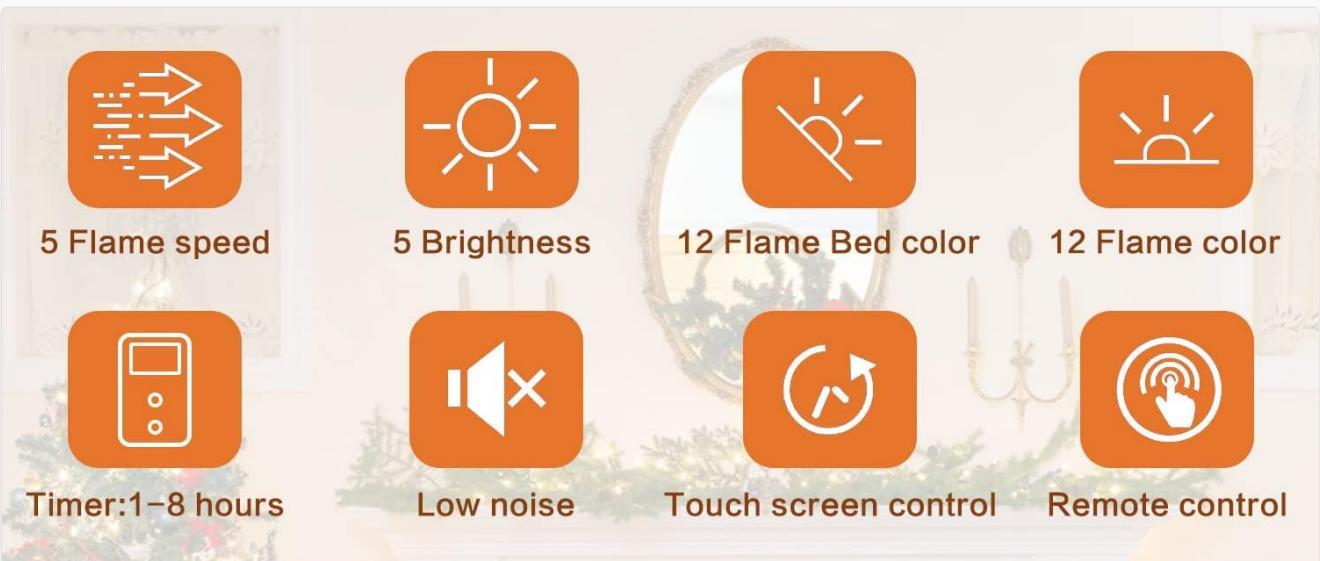


Image: Detailed breakdown of control functions: Heat (750W-1500W), Speed (V1-V5 Flame Speed), Bed Color (12 Flame Bed Colors), Timer (1-8 hours), Dimmer (L1-L5 Brightness & Sleep Mode), Flame Color (12 Flame Colors), and ON/OFF.

5.2 Power On/Off

Press the power button on the remote or touch screen to turn the fireplace on or off. There is also a main switch located on the unit itself (refer to Installation section).

5.3 Heat Settings

The fireplace offers two heat settings: 750W and 1500W. Select the desired wattage based on your heating needs. The 1500W setting provides supplemental zone heating for areas up to 400 square feet. The heat function can be operated independently of the flame effect.

5.4 Flame and Ember Bed Customization

Customize the visual ambiance with a variety of flame and ember bed options:

- **Flame Colors:** Choose from 12 distinct flame colors.
- **Flame Speeds:** Adjust the flame movement with 5 different speed settings (V1 to V5).
- **Ember Bed Colors:** Select from 12 LED ember bed lighting options to complement the flame.
- **Brightness/Dimmer:** Adjust the flame brightness from L1 to L5. A sleep mode function is also available.



Image: Visual representation of the 12 flame colors, 12 ember bed colors, and 5 levels of flame brightness.

5.5 Timer Function

Set the operational timer for 1 to 8 hours. The fireplace will automatically turn off after the set duration.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

- **Cleaning:** Ensure the unit is turned off and unplugged before cleaning. Use a soft, damp cloth to wipe down the exterior surfaces. Do not use abrasive cleaners or sprays.
- **Glass Panel:** Clean the glass panel with a soft cloth and a non-abrasive glass cleaner.
- **Air Vents:** Periodically check and clean the air intake and exhaust vents to ensure they are free from dust and debris, which can impede airflow and heating efficiency.
- **Storage:** If storing the fireplace for an extended period, unplug it and store it in a dry, dust-free location.

7. TROUBLESHOOTING

If you experience issues with your fireplace, refer to the following common problems and solutions:

- **Fireplace does not turn on:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the main power switch on the unit is in the 'ON' position.
- Verify that the remote control batteries are not depleted.

- **Heater stops working:**

- The unit may have activated its auto-heat kill safety feature due to overheating. Unplug the fireplace and allow it to cool for 10-15 minutes before attempting to restart.
- Ensure air vents are not blocked.

- **Remote control not responding:**

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the fireplace's sensor.

- **Flame effect not visible:**

- Ensure the flame effect function is turned on via the controls.
- Adjust the brightness settings.

If problems persist after attempting these solutions, please contact customer support.

8. WARRANTY AND SUPPORT

This Vitesse electric fireplace comes with a **Limited Warranty**. For specific terms and conditions of the warranty, please refer to the documentation included with your purchase or contact Vitesse customer service.

For any inquiries, technical assistance, or warranty claims, our dedicated support team is available to assist you. Please have your model number (42-FP-C3) and purchase information ready when contacting support.

Manufacturer: VITESSE