

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ROCCAT](#) /

› [ROCCAT Vulcan TKL Mechanical Gaming Keyboard User Manual](#)

ROCCAT ROC-12-274

ROCCAT Vulcan TKL Mechanical Gaming Keyboard User Manual

Model: ROC-12-274

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ROCCAT Vulcan TKL Mechanical Gaming Keyboard. The Vulcan TKL is a tenkeyless mechanical keyboard featuring ROCCAT's Titan Switches with linear actuation, per-key AIMO RGB lighting, an anodized aluminum top plate, and a detachable USB-C cable for enhanced portability and convenience.

PACKAGE CONTENTS

Verify that all items are present in your package:

- ROCCAT Vulcan TKL Mechanical Gaming Keyboard
- Detachable USB-C Cable
- Quick Start Guide (if included)

SETUP

1. Connecting the Keyboard

1. Locate the detachable USB-C cable.
2. Connect the USB-C end of the cable to the port on the back of the ROCCAT Vulcan TKL keyboard.
3. Connect the standard USB-A end of the cable to an available USB port on your computer.
4. The keyboard will automatically be detected by your operating system.



Image: ROCCAT Vulcan TKL keyboard with the detachable USB-C cable connected to the rear port.

2. Software Installation (ROCCAT Swarm)

For full customization options, including AIMO intelligent lighting, key remapping, and macro creation, download and install the ROCCAT Swarm software from the official ROCCAT website. Swarm allows you to configure and save profiles directly to the keyboard's onboard memory.

OPERATING INSTRUCTIONS

Basic Keyboard Functions

The ROCCAT Vulcan TKL functions as a standard mechanical keyboard upon connection. All keys perform their labeled functions. The tenkeyless design provides a compact form factor, freeing up desk space.



Image: Top-down view of the ROCCAT Vulcan TKL keyboard, showcasing its layout and RGB lighting.

Media Controls and Volume Dial

The keyboard features dedicated media controls and a mixer-style volume dial located in the upper right corner.

- **Volume Dial:** Rotate to adjust system volume. Press to mute/unmute audio.
- **Media Keys:** Dedicated keys for Play/Pause, Stop, Previous Track, and Next Track are typically located near the

volume dial.



Image: Side view of the ROCCAT Vulcan TKL, highlighting the low-profile keycaps and the volume dial.

Function (Fn) Key Combinations

The Fn key, located near the right Alt key, can be combined with other keys to access secondary functions. Refer to the keycap legends for specific Fn combinations, which may include lighting adjustments, profile switching, or other system controls.

CUSTOMIZATION (ROCCAT SWARM SOFTWARE)

The ROCCAT Swarm software is essential for unlocking the full potential of your Vulcan TKL keyboard. With Swarm, you can:

- **AIMO Intelligent Lighting:** Customize per-key RGB lighting effects and synchronize them with other AIMO-compatible devices.
- **Key Assignment:** Remap keys, assign macros, and create custom functions for individual keys.
- **Profile Management:** Create and save multiple profiles for different applications or games, and switch between them easily.
- **Firmware Updates:** Ensure your keyboard has the latest performance enhancements and features.

Visit the official ROCCAT website to download the latest version of the Swarm software.

MAINTENANCE

Cleaning the Keyboard

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution to wipe the keycaps and chassis. Avoid excessive moisture.
- For dust and debris between keys, use compressed air.
- Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the keyboard's finish and keycap legends.

Cable Care

The detachable USB-C cable should be handled with care. Avoid sharp bends or excessive pulling on the cable to prevent damage to the connectors or internal wiring.

TROUBLESHOOTING

Problem	Possible Solution
Keyboard is not responding.	<ul style="list-style-type: none">• Ensure the USB-C cable is securely connected to both the keyboard and the computer.• Try connecting the keyboard to a different USB port on your computer.• Restart your computer.• Check if the keyboard is recognized in your operating system's device manager.
RGB lighting is not working or incorrect.	<ul style="list-style-type: none">• Ensure the ROCCAT Swarm software is installed and running.• Check lighting settings within the Swarm software.• Perform a firmware update via Swarm.• Try resetting the keyboard to factory defaults (refer to Swarm software or ROCCAT support for instructions).
Keys are not registering or double-typing.	<ul style="list-style-type: none">• Clean the affected key(s) using compressed air.• Ensure the keyboard firmware is up to date.• If the issue persists, contact ROCCAT support.

For further assistance, visit the official ROCCAT support website or consult the ROCCAT Swarm software's help section.

SPECIFICATIONS

Brand	ROCCAT
Model Number	ROC-12-274
Hardware Platform	PC
Connectivity	USB-C (Detachable Cable)
Switch Type	Titan Switch Mechanical (Linear)
Lighting	Per-Key AIMO RGB
Material	Anodized Aluminum Top Plate
Form Factor	Tenkeyless (TKL)
Dimensions (LxWxH)	14.17 x 5.25 x 1.34 inches
Weight	2.2 pounds

Included Components	USB Cable
---------------------	-----------

WARRANTY AND SUPPORT

Warranty Information

ROCCAT products are covered by a manufacturer's warranty. The specific terms and duration of your warranty may vary by region and product. Please retain your proof of purchase for warranty claims.

Technical Support

For technical assistance, product inquiries, or warranty service, please visit the official ROCCAT support website. You can typically find FAQs, driver downloads, and contact information for customer support there.

ROCCAT Official Website: www.roccat.com