

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Farberware](#) /

› [Farberware Cookstart DiamondMax Nonstick Cookware Set - Instruction Manual](#)

Farberware 22307

Farberware Cookstart DiamondMax Nonstick Cookware Set - Instruction Manual

Model: 22307

PRODUCT OVERVIEW

The Farberware Cookstart 15-Piece DiamondMax™ Nonstick Cookware Set is designed for convenience and reliability in the kitchen. This set features heavy-duty aluminum construction for excellent heat distribution and superior DiamondMax™ nonstick interiors, which perform 3X better than ceramic nonstick for easy food release and cleanup. The cookware is oven safe up to 350°F and includes comfortable handles and shatter-resistant glass lids.

Key Features:

- **Durable Construction:** Crafted from heavy-duty aluminum for excellent heat distribution and lasting durability.
- **Superior Nonstick:** DiamondMax™ nonstick interiors ensure easy food release and quick cleanup.
- **Versatile and Convenient:** Oven safe to 350°F and dishwasher safe for ultimate convenience.
- **Functional Design:** Dual-riveted handles provide a confident grip, and shatter-resistant glass lids allow monitoring without heat loss.

WHAT'S INCLUDED

This 15-piece set provides a comprehensive collection of cookware and tools for your kitchen needs:

- 1-Quart Covered Saucepan
- 2-Quart Covered Straining Saucepan
- 5-Quart Covered Dutch Oven
- 8-Inch Skillet
- 9.75-Inch Skillet
- 9-Inch by 13-Inch Cookie Sheet
- (6) Prestige Nylon Tools: Slotted Turner, Slotted Spoon, Solid Spoon, Pasta Fork, Whisk, Ladle



What's Included

FARBERWARE®

Figure 1: All components of the 15-piece Farberware Cookstart DiamondMax Nonstick Cookware Set.

SETUP

Before first use, follow these steps to prepare your new cookware:

- 1. Unpack:** Carefully remove all cookware and tools from the packaging. Remove any labels or protective materials.
- 2. Wash:** Wash all pieces thoroughly with warm, soapy water using a soft cloth or sponge.
- 3. Rinse and Dry:** Rinse thoroughly with clean water and dry immediately to prevent water spots.
- 4. Initial Seasoning (Optional for Nonstick):** While not strictly necessary for DiamondMax nonstick, some users prefer to lightly condition the surface. Apply a thin layer of cooking oil (vegetable, canola, or grapeseed) to the nonstick interior with a paper towel. Heat over low heat for 30 seconds, then remove from heat and wipe off any excess oil.

OPERATING INSTRUCTIONS

General Cooking Guidelines:

- **Heat Settings:** Use medium to low heat for most cooking. High heat can damage the nonstick coating over time and is generally not needed due to the efficient heat distribution of aluminum.
- **Matching Burner Size:** Always match the pan bottom to the burner size and center it to ensure even heating and prevent handle overheating.
- **Cooking Oils:** Use a small amount of butter or oil. Avoid cooking sprays as they can leave a residue that is difficult to remove and may affect nonstick performance.
- **Utensils:** To protect the nonstick surface, always use nylon, plastic, silicone, or wooden utensils. Metal utensils can scratch and damage the coating.
- **Oven Use:** The pots and pans are oven safe up to 350°F (175°C). Glass lids are also oven safe to this temperature.
- **Stay-Cool Handles:** The dual-riveted handles are designed to stay cool during normal stovetop use. Always use caution and an oven mitt if handles become hot, especially during prolonged cooking or oven use.



DURABLE CONSTRUCTION

**HEAVY-DUTY ALUMINUM
FOR FAST AND EVEN HEATING**

FARBERWARE®

Figure 2: Cookware in use, demonstrating even heat distribution.

DIAMONDMAX™ NONSTICK



**EASY RELEASE AND
ENHANCED DURABILITY**

FARBERWARE®

Figure 3: The DiamondMax nonstick surface provides easy food release.

MAINTENANCE AND CLEANING

Cleaning Instructions:

- **Dishwasher Safe:** The entire cookware set is dishwasher safe for convenient and effortless cleanup.
- **Hand Washing:** For best results and to prolong the life of your cookware, hand washing with warm, soapy water is recommended. Use a soft sponge or cloth.
- **Avoid Abrasives:** Do not use steel wool, abrasive scouring pads, or harsh chemical cleaners, as these can damage the nonstick coating and exterior finish. Never use oven cleaners on your cookware.
- **Stubborn Food:** If food is stuck, fill the pan with warm water and a small amount of dish soap, let it soak for 15-20 minutes, then clean with a soft sponge.

Storage:

When storing, place a paper towel or soft cloth between stacked pans to protect the nonstick surface from scratches.

EASY CLEAN DISHWASHER SAFE



FOR CONVENIENT AND
EFFORTLESS CLEANUP

FARBERWARE®

Figure 4: Farberware Cookstart cookware is dishwasher safe for easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Food sticking to nonstick surface	High heat, insufficient oil, residue buildup from cooking sprays.	Use medium to low heat. Ensure a small amount of oil or butter is used. Avoid cooking sprays. Clean thoroughly to remove any residue.
Discoloration on exterior or interior	Overheating, hard water stains, food residue.	Avoid excessive high heat. Clean immediately after use. For hard water stains, try a solution of vinegar and water.
Scratches on nonstick coating	Use of metal utensils or abrasive cleaning tools.	Always use nylon, plastic, silicone, or wooden utensils. Avoid abrasive cleaners and scouring pads.

SPECIFICATIONS

Feature	Detail
Brand	Farberware
Model Number	22307
Material	Heavy-Duty Aluminum
Coating	DiamondMax Nonstick
Color	Aqua
Oven Safe Temperature	Up to 350°F (175°C)
Dishwasher Safe	Yes
Item Weight	11 Pounds
UPC	631899223074

WARRANTY AND SUPPORT

This Farberware Cookstart DiamondMax Nonstick Cookware Set comes with a **Limited Lifetime Warranty**, ensuring quality and durability for years of cooking enjoyment.

For warranty claims, product support, or any inquiries regarding your cookware set, please contact Farberware Customer Service. Refer to the product packaging or the official Farberware website for the most current contact information.

Return Policy: Items purchased from Amazon.com typically have a 30-day return policy from the date of purchase. Please refer to Amazon's return policy for specific details and conditions.

© 2024 Farberware. All rights reserved.

For more information, visit [the Farberware Store on Amazon](#).