

- Manuals.plus /
- › Skullcandy /
- › Skullcandy Crusher Wireless Over-Ear Headphones Instruction Manual

Skullcandy SCS6CRW-M685-cr

Skullcandy Crusher Wireless Over-Ear Headphones Instruction Manual

Model: SCS6CRW-M685-cr | Brand: Skullcandy

INTRODUCTION

This manual provides comprehensive instructions for the Skullcandy Crusher Wireless Over-Ear Headphones. Designed for an immersive audio experience, these headphones feature adjustable sensory bass, wireless Bluetooth connectivity, and a comfortable over-ear fit. Please read this manual thoroughly to ensure proper use and maintenance of your device.



Image: Skullcandy Crusher Wireless Over-Ear Headphones, showcasing the deep red color and over-ear design.

PACKAGE CONTENTS

Before you begin, ensure all items are present in your package:

- Skullcandy Crusher Wireless Over-Ear Headphones
- USB Charging Cable
- AUX Cable for wired listening
- Travel Pouch



Image: Contents of the Skullcandy Crusher Wireless Headphones package, including the headphones, charging cable, AUX cable, and a travel pouch.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. Connect the provided USB charging cable to the charging port on the headphones and to a USB power source. The LED indicator will show charging status.

- **Rapid Charge:** A 10-minute charge provides approximately 3 hours of playback.
- **Total Battery Life:** Enjoy up to 40 hours of listening on a full charge.

2. Bluetooth Pairing

1. Ensure your headphones are powered off.
2. Press and hold the power button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.

4. Select "Crusher Wireless" from the list of available devices.
5. Once connected, the LED indicator will turn solid blue.

The headphones offer a reliable Bluetooth range of up to 10 meters (33 feet).

OPERATING INSTRUCTIONS

Controls

The Skullcandy Crusher Wireless headphones feature intuitive controls for managing your audio and calls:

- **Power On/Off:** Press and hold the power button.
- **Volume Control:** Use the dedicated volume buttons (+/-) on the earcup.
- **Track Control:** Use the track buttons (forward/backward) to skip tracks.
- **Call Management:** The built-in microphone allows for hands-free calls. Use the multi-function button to answer/end calls.
- **Activate Device Assistant:** Press the multi-function button to activate your device's voice assistant.

Adjustable Sensory Bass

Customize your audio experience with the adjustable sensory bass slider located on the earcup. Move the slider up or down to increase or decrease the bass intensity to your preference.



Image: Diagram highlighting key features of the Skullcandy Crusher Wireless Headphones, including battery life, rapid charge, and easy controls.

Noise Isolation

The over-ear design and comfortable earcups provide a noise-isolating fit, reducing ambient distractions for a more focused listening experience.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the headphones in the provided travel pouch to protect them from dust and scratches.
- **Temperature:** Avoid exposing the headphones to extreme temperatures (hot or cold) or high humidity.
- **Water Exposure:** These headphones are not waterproof. Avoid contact with liquids.

TROUBLESHOOTING

Problem	Solution
Headphones not turning on	Ensure the headphones are fully charged. Connect to a power source and check the charging indicator.
Cannot pair via Bluetooth	Ensure headphones are in pairing mode (flashing blue/red LED). Turn off and on Bluetooth on your device. Forget "Crusher Wireless" from your device's Bluetooth list and try pairing again. Ensure headphones are within 10 meters of your device.
No sound or low volume	Check volume levels on both headphones and your connected device. Ensure headphones are properly connected via Bluetooth or AUX cable. Try restarting both the headphones and your device.

SPECIFICATIONS

Feature	Detail
Model Name	Crusher
Item Model Number	SCS6CRW-M685-cr
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Battery Life	40 Hours
Charging Time (Rapid Charge)	10 minutes for 3 hours playback
Earpiece Shape	Over-Ear
Noise Control	Sound Isolation
Control Type	Volume Control, Touch
Special Features	Foldable, Lightweight, Noise Isolation, Adjustable Sensory Bass
Product Dimensions	7.4 x 3.5 x 7.9 inches
Item Weight	9.7 ounces
Headphones Jack	3.5 mm Jack
UPC	649661064336

OFFICIAL PRODUCT VIDEO

Watch this official video for an overview of the Skullcandy Crusher Wireless Headphones:

Your browser does not support the video tag.

Video: An official overview of the Skullcandy Crusher Wireless Headphones, demonstrating key features and design.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Skullcandy website or contact their customer service. This product is offered as an Amazon Renewed item, which typically includes a 90-day replacement or refund guarantee from Amazon if you are not satisfied with your purchase.

- **Amazon Renewed Guarantee:** Eligible for replacement or refund within 90 days if not satisfied.
- **Protection Plans:** Additional protection plans may be available for purchase.

For further assistance, please visit the [product detail page on Amazon](#).

© 2025 Skullcandy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08HFT4Z1X>

More documents and user manuals: <https://manuals.plus/>