Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > eKids /
- › eKids LOL Surprise Kids Bluetooth Headphones User Manual

eKids LL-B52

eKids LOL Surprise Kids Bluetooth Headphones

USER MANUAL

1. Introduction

This user manual provides detailed instructions for the safe and effective use of your eKids LOL Surprise Kids Bluetooth Headphones. Please read this manual thoroughly before using the product and retain it for future reference. This product is designed for children aged 36 to 96 months.

2. Product Overview

The eKids LOL Surprise Kids Bluetooth Headphones are designed to provide a high-quality, kid-friendly audio experience. These wireless headphones feature a built-in microphone for communication and a foldable design for portability. They are adorned with colorful LOL Surprise character graphics.



Figure 2.1: Front view of the eKids LOL Surprise Kids Bluetooth Headphones. The headphones are pink with colorful LOL Surprise character designs on the headband and a star-shaped design on the earcups.



Figure 2.2: Key features of the headphones, highlighting volume reduction for safe listening, up to 28 hours of battery life, and a built-in microphone for communication.

Key Features:

- Wireless Connectivity: Bluetooth 4.0 for seamless connection to smartphones, tablets, and computers.
- Integrated Microphone: Allows for hands-free communication during calls or online gaming.
- Adjustable & Foldable Design: Ensures a comfortable fit for various head sizes and compact storage for travel.
- Long Battery Life: Up to 24 hours of continuous playtime on a single charge.
- Kid-Friendly Volume: Engineered with reduced volume levels to protect young ears.
- Durable Construction: Made from plastic material suitable for children's use.

3. Setup

3.1 Unboxing and Initial Charge

Upon opening the package, ensure all components are present. The box should contain the eKids LOL Surprise Kids Bluetooth Headphones and an aux cord. Before first use, fully charge the headphones.

- 1. Locate the charging port on the headphones.
- 2. Connect a compatible charging cable (not included) to the charging port.
- 3. Plug the other end of the charging cable into a compatible USB power source (e.g., computer USB port, USB wall adapter).
- 4. The charging indicator light (if present) will illuminate during charging and turn off or change color when fully charged.
- 5. A full charge provides approximately 24 hours of battery life.



Figure 3.1: Side view of the headphones, showing the earcups and the general shape. The charging port is typically located on one of the earcups.

3.2 Bluetooth Pairing

To use the headphones wirelessly, they must be paired with a Bluetooth-enabled device.

- 1. Ensure the headphones are charged and powered off.
- 2. Press and hold the Power/Bluetooth button (refer to product diagram if available) on the headphones until the indicator light flashes, indicating pairing mode.
- 3. On your device (smartphone, tablet, computer), navigate to the Bluetooth settings.

- 4. Turn on Bluetooth and search for available devices.
- 5. Select "eKids LOL Surprise" or a similar name from the list of found devices.
- 6. Once connected, the indicator light on the headphones will typically stop flashing and remain solid.
- 7. The headphones have a Bluetooth range of up to 10 meters (33 feet).

4. Operating Instructions

4.1 Power On/Off

- To power on: Press and hold the Power button until the indicator light illuminates.
- To power off: Press and hold the Power button until the indicator light turns off.

4.2 Volume Control

The headphones feature volume control buttons. For safe listening, the maximum volume output is limited.

- Increase Volume: Press the Volume Up button.
- Decrease Volume: Press the Volume Down button.

4.3 Using the Microphone

The built-in microphone allows for voice communication. Ensure the headphones are connected via Bluetooth for microphone functionality.

- For calls: Answer/end calls using the multi-function button (if available) or directly from your connected device.
- For gaming/online learning: The microphone will automatically activate when an application requires voice input.

4.4 Wired Mode (Optional)

If the battery is depleted or a wired connection is preferred, use the included aux cord.

- 1. Plug one end of the aux cord into the 3.5mm audio jack on the headphones.
- 2. Plug the other end into the 3.5mm audio jack of your device.
- 3. The headphones will function as wired headphones, and Bluetooth will be disabled.

4.5 Folding for Storage

The headphones are designed to fold for compact storage and portability.

- Gently fold the earcups inwards towards the headband until they are compact.
- This feature is ideal for travel or storing the headphones when not in use.



Figure 4.1: A child comfortably using the headphones while interacting with a tablet, demonstrating typical usage.

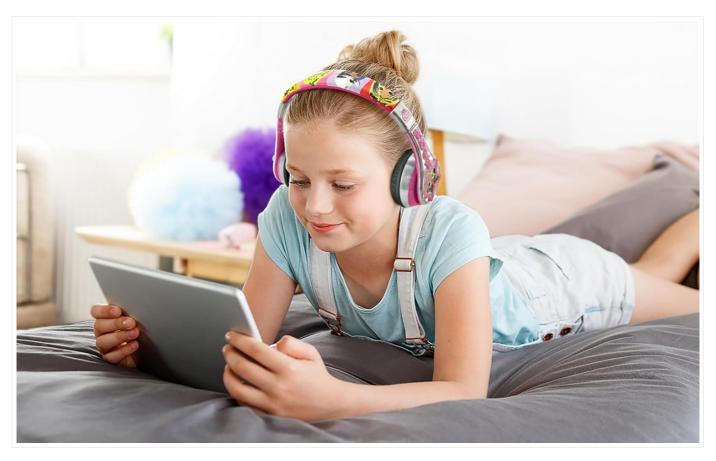


Figure 4.2: The headphones being used by a child in a car, highlighting their portability and suitability for travel.

5. Maintenance

5.1 Cleaning

To maintain the appearance and functionality of your headphones:

- Wipe the surfaces with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive cleaners.
- Avoid getting moisture into the charging port or audio jack.

5.2 Storage

When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures. Utilize the foldable design to save space and protect the headphones from damage.

5.3 Battery Care

To prolong the life of the built-in lithium-ion battery:

- · Avoid fully discharging the battery frequently.
- Charge the headphones regularly, even if not in constant use.
- Do not expose the headphones to extreme heat or cold.

6. Troubleshooting

If you encounter issues with your headphones, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Headphones do not power on.	Battery is depleted.	Charge the headphones fully.
No sound when connected via Bluetooth.	Volume is too low or muted; headphones not properly paired; device volume is low.	Increase headphone and device volume. Re-pair the headphones with your device. Ensure the correct audio output is selected on your device.
Cannot pair headphones with device.	Headphones not in pairing mode; device Bluetooth is off; too far from device.	Ensure headphones are in pairing mode (flashing light). Turn on Bluetooth on your device. Move headphones closer to the device (within 10 meters).
Microphone not working.	Not connected via Bluetooth; device microphone settings.	Ensure headphones are connected via Bluetooth. Check microphone input settings on your device.
Sound distortion or static.	Out of Bluetooth range; interference; low battery.	Move closer to the connected device. Avoid strong electromagnetic interference. Charge the headphones.

7. Specifications

Feature	Detail
Model Name	LL-B52
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth 4.0
Headphones Jack	3.5 mm Jack (for wired use)
Battery Life	Up to 24 Hours

Feature	Detail
Bluetooth Range	10 Meters (33 feet)
Material	Plastic
Item Weight	8.8 ounces
Product Dimensions (L x W x H)	1.1 x 0.94 x 0.43 inches
Age Range (Description)	36 months to 96 months
Included Components	Aux cord
Manufacturer	Kid Designs
UPC	092298950822

8. Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for any warranty claims.

Manufacturer: Kid Designs

For further assistance, you may visit the eKids brand store on Amazon:eKids Store

© 2024 eKids. All rights reserved. Model: LL-B52.

Related Documents - LL-B52



eKids B50 Bluetooth Headphones User Manual and Guide

Comprehensive user manual for the eKids B50 Bluetooth Headphones, covering setup, operation, controls, charging, and warranty information. Learn how to pair, use, and maintain your wireless headphones.



eKids B64 Series Disney Themed Wireless Headphones with EZ Link - User Manual

User manual for the eKids B64 Series wireless Bluetooth headphones featuring EZ Link technology and Disney themes (Princess, Frozen, Encanto). Includes setup, pairing, app usage, controls, safety, and warranty information.



eKids DG-556 TR-556 Bluetooth MP3 Karaoke with Microphone User Manual

Comprehensive user manual for the eKids DG-556 TR-556 Bluetooth MP3 Karaoke machine. Includes setup, operation for USB, MP3, and Bluetooth modes, voice control, troubleshooting, FCC/IC compliance, and warranty information.



eKids DE-072 MP3 Microphone User Manual and Instructions

User manual for the eKids DE-072 MP3 Microphone by Disney, detailing battery installation, maintenance, FCC compliance, and how to use the Song and MP3 playback modes.



eKids B64 Series Wireless Headphones with EZ Link User Manual

Comprehensive user manual for the eKids B64 Series Wireless Headphones with EZ Link. Learn about setup, Bluetooth pairing, EZ Link app features, controls, charging, battery information, warranty, and safety guidelines. Supports Disney Princess, Frozen, and Encanto themes.



eKids B50 Bluetooth Headphones User Manual

User manual for eKids B50 Bluetooth Headphones, providing instructions on setup, operation, controls, charging, pairing, and warranty information.