

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [eKids](#) /
- › [LOL Surprise OMG Remix Karaoke Machine User Manual](#)

eKids LL-115V10L

LOL Surprise OMG Remix Karaoke Machine

USER MANUAL

Brand: eKids | Model: LL-115V10L

1. INTRODUCTION

Welcome to the world of music and fun with your new LOL Surprise OMG Remix Karaoke Machine! This interactive boombox is designed to provide hours of entertainment for kids, allowing them to sing along to built-in music, record their own performances, and create unique sound effects. With its vibrant design and easy-to-use features, it's perfect for aspiring pop stars and DJs.



Front view of the LOL Surprise OMG Remix Karaoke Machine, showcasing its colorful design and included microphone.

2. SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Adult supervision is recommended during use.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted batteries from the product.
- Do not expose the unit to extreme temperatures or moisture.
- Keep the microphone cord away from young children to prevent entanglement.

3. WHAT'S INCLUDED

- LOL Surprise OMG Remix Sing Along Boombox
- Real Working Microphone
- 3 x AA Batteries (pre-installed for demo purposes, replacement recommended for extended use)



The karaoke machine as it appears in its original packaging, highlighting its key features.

4. SETUP

4.1 Battery Installation

Your karaoke machine comes with 3 AA batteries for demo purposes. For optimal performance and extended play, it is recommended to replace these with fresh alkaline batteries.

1. Locate the battery compartment on the back of the unit.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 3 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and tighten the screw.

4.2 Microphone Connection

The included microphone is pre-connected to the unit. When not in use, the microphone can be securely stored in the designated holder on the side of the boombox.

4.3 Connecting External Devices (Aux-in)

You can connect an MP3 player, smartphone, or other audio device to the karaoke machine using an Aux-in cable (not included).

1. Locate the Aux-in port on the back of the unit.
2. Plug one end of the Aux-in cable into your external audio device and the other end into the Aux-in port on the karaoke machine.
3. Ensure your external device's volume is set to a moderate level before playing music.



Rear view of the karaoke machine, detailing the battery compartment and Aux-in connection point.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **Power On/Off Button** located on the front panel to turn the unit on or off.

5.2 Music Playback

The karaoke machine features built-in music. Press the **Song Select Button** to cycle through the available tracks.

5.3 Microphone Use (Sing-Along & Recording)

To use the microphone:

- Ensure the microphone is connected.
- Press and hold the button on the microphone while speaking or singing to amplify your voice through the boombox speakers.
- To record your voice, press the **Record/Playback Button** on the boombox. A chime will sound to indicate recording has started. Press again to stop recording.
- To listen to your recording, press the **Play/Repeat Button**.



A child enjoying the sing-along feature with the included microphone.

5.4 Turntable with Sound Effects

Spin the turntable wheel or pull the arm to activate fun scratching sound effects, adding a DJ flair to your performance.

5.5 Flashing Lights

The boombox features eye-catching flashing lights that synchronize with the music, enhancing the party atmosphere. These lights activate automatically when the unit is powered on and music is playing.

Your browser does not support the video tag.

Demonstration of the LOL Surprise OMG Remix Karaoke Machine's features, including music playback, microphone use, and turntable effects.

6. FEATURES OVERVIEW

- **Record and Sound Effects:** Sing along and record yourself or spin the turntable wheel for fun scratching sound effects.
- **Connections & Built-in Speaker:** Easily connect with compatible MP3 players or any other device that has an Aux-in. This sing-along boombox has kid-friendly, easy-to-use buttons.
- **Real Microphone:** This sing-along microphone for kids allows you to sing your heart out or make your own party. Connect your device and play your own music.
- **Flashing Lights:** Put on a real performance! Sing or connect your music and let the eye-catching flashing lights enhance your party.
- **Portable and Lightweight Design:** Take your boombox whenever and wherever you go with its lightweight and built-in handle for easy portability.



Visual representation of the karaoke machine's main features and connectivity options.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	8 x 3 x 6 inches
Item Weight	1.59 pounds
Model Number	LL-115V1OL
Recommended Age	3 years and up
Batteries	3 AA batteries (included for demo)
Color	Black with Pink/Silver accents
Special Feature	Portable, Recording, Turntable Effects, Flashing Lights, Aux-in

8. TROUBLESHOOTING

- **No Sound/Low Volume:**
 - Ensure the unit is powered on.
 - Check battery levels and replace if necessary.
 - Adjust the volume on the boombox.
 - If using an external device, ensure its volume is turned up.
- **Microphone Not Working:**
 - Ensure the microphone is securely plugged into its port.
 - Press and hold the button on the microphone firmly while speaking.
- **Recording Issues:**
 - Ensure the microphone is working correctly (see above).
 - Make sure you are pressing the Record/Playback button correctly.


9. CARE AND MAINTENANCE






- Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the unit away from water and excessive moisture.
- Store the unit in a cool, dry place when not in use.
- Remove batteries if the unit will not be used for an extended period to prevent leakage.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official eKids website. Keep your purchase receipt as proof of purchase.

Related Documents - LL-115V10L

	<p>eKids DG-556 TR-556 Bluetooth MP3 Karaoke with Microphone User Manual</p> <p>Comprehensive user manual for the eKids DG-556 TR-556 Bluetooth MP3 Karaoke machine. Includes setup, operation for USB, MP3, and Bluetooth modes, voice control, troubleshooting, FCC/IC compliance, and warranty information.</p>
---	--

	<p>Shopkins Sing-Along Boombox SN-115 User Manual and Instructions</p> <p>Official user manual and instructions for the eKids Shopkins Sing-Along Boombox (Model SN-115), covering setup, operation, troubleshooting, and warranty information.</p>
	<p>eKids DG-556 Bluetooth MP3 Karaoke with Microphone User Manual</p> <p>Official user manual for the eKids DG-556 Bluetooth MP3 Karaoke system with microphone. Learn how to set up, charge, use USB, MP3, and Bluetooth modes, voice control, troubleshooting, and warranty information.</p>
	<p>eKids 554 Series Bluetooth Karaoke with EZ Link User Manual</p> <p>This manual provides instructions for the eKids 554 Series Bluetooth Karaoke with EZ Link, covering setup, operation, maintenance, and troubleshooting. Learn how to connect via Bluetooth, use USB mode, record audio, and utilize the EZ Link app for music playlists.</p>
	<p>eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M) - User Guide</p> <p>User guide for the eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M). Learn about setup, charging, Bluetooth connection, EZ Link app usage, controls, warranty, and troubleshooting.</p>
	<p>eKids DE-072 MP3 Microphone User Manual and Instructions</p> <p>User manual for the eKids DE-072 MP3 Microphone by Disney, detailing battery installation, maintenance, FCC compliance, and how to use the Song and MP3 playback modes.</p>