

HAUSHOF HH20006AE

HAUSHOF Cordless Hot Glue Gun HH20006AE User Manual

Model: HH20006AE

Brand: HAUSHOF

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation, maintenance, and troubleshooting of your HAUSHOF Cordless Hot Glue Gun, model HH20006AE. Please read this manual thoroughly before first use and retain it for future reference.



Image: The HAUSHOF Cordless Hot Glue Gun, model HH20006AE, shown with its detachable battery base and a bundle of full-size glue sticks. The gun is white with teal accents, featuring a comfortable grip and a precision nozzle.

2. IMPORTANT SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the product.

- Keep the glue gun away from children.
- Do not touch the nozzle or melted glue, as they reach high temperatures and can cause severe burns.
- Use only recommended glue sticks.
- Do not operate the glue gun in damp or wet conditions.
- Ensure proper ventilation when using the glue gun.
- Never pull out a melting glue stick from the gun after use; allow it to cool and remain inside for the next use.
- Charge the battery in a power-off state for optimal battery life and safety.
- Do not use the glue gun while it is charging.
- Disconnect the charger once the battery is fully charged.



DIY



Paper



Glass



Fabric



Packing



Toys

Image: A close-up view highlighting the safety features of the HAUSHOF Cordless Hot Glue Gun, including the protective cover over the nozzle, the insulated nozzle itself, the anti-slip grip, the spill-proof design, and the safe trigger mechanism.

3. PRODUCT OVERVIEW

The HAUSHOF Cordless Hot Glue Gun HH20006AE is a versatile tool designed for various DIY projects, arts, crafts, quick repairs, and home use. It features a cordless design for portability and a fast preheating system.

Key Features

- Cordless design with a built-in standing base.
- Fast preheating: 2-3 minutes warm-up time.
- 60W power for efficient melting.
- Uses full-size glue sticks (0.44" x 5-1/8").
- Protective cover and insulated nozzle for safety.
- Safe trigger for controlled glue flow.
- Drip-free nozzle to prevent spills.
- Powered by a 12V Lithium-Ion battery.



Image: The HAUSHOF Cordless Hot Glue Gun with text indicating "2-3 Minutes Fast Preheat," emphasizing its quick readiness for use.



Charge the battery



Insert the glue stick



Press and hold 3s to turn on



Preheat 2-3 minutes and start to use

! ATTENTION

Do not pull out the melting glue stick from the glue gun nail after work finished, keep it inside for next use.



Image: A diagram illustrating the dimensions of the full-size glue sticks (0.44" diameter, 5-1/8" length) and highlighting their super adhesive, eco-friendly, odor-free, and impurity-free qualities.

4. SETUP

4.1. Charging the Battery

1. Ensure the glue gun is powered off.
2. Connect the charger to the battery pack.
3. Plug the charger into a power outlet.
4. Charge the 2.2Ah lithium-ion battery for approximately 1-1.5 hours. The indicator light will show charging status (refer to charger instructions for specific light indications).
5. Unplug the charger once charging is complete.

Important: The glue gun will not heat when charging. Always charge the battery in the power-off state and use it without charging for optimal performance and battery longevity.



Power Supply	12 V DC	Temperature	40°F to 104°F
Battery Type	Lithium-Ion	Battery Capacity	2.2Ah
Charging Time	1-1.5 Hours	Battery Life	50 Minutes

Image: A four-panel instructional image. Panel 1 shows the glue gun's battery being charged by connecting it to the AC adapter.

5. OPERATING INSTRUCTIONS

5.1. Inserting a Glue Stick

1. Ensure the glue gun is off and cool.
2. Insert a full-size glue stick (0.44" diameter) into the opening at the back of the glue gun. Push it firmly until it stops.

Image: A four-panel instructional image. Panel 2 shows a hand inserting a glue stick into the back of the HAUSHOF Cordless Hot Glue Gun.

5.2. Powering On and Preheating

1. Press and hold the power button for 3 seconds to turn on the glue gun. The indicator light will illuminate.
2. Allow the glue gun to preheat for 2-3 minutes. The indicator light may change color or stop blinking when ready (refer to specific model indications).

Image: A four-panel instructional image. Panel 3 shows a finger pressing and holding the power button on the base of the HAUSHOF

5.3. Applying Glue

1. Once preheated, gently squeeze the trigger to dispense melted glue.
2. Apply glue to the desired surface.
3. Release the trigger to stop the glue flow.
4. For continuous application, gently push the glue stick further into the gun as needed.

Image: A four-panel instructional image. Panel 4 shows the glue gun preheating for 2-3 minutes and then being used to apply glue, with a red 'X' indicating not to pull out the glue stick.

5.4. Powering Off

Press and hold the power button for 3 seconds to turn off the glue gun. Allow it to cool completely before storing.

Attention: Do not pull out the melting glue stick from the glue gun after finishing work. Keep it inside for next use to prevent damage and ensure proper function.

6. MAINTENANCE

- **Cleaning:** Ensure the glue gun is completely cool before cleaning. Wipe the exterior with a clean, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the glue gun in a dry, cool place, out of reach of children. Ensure no glue sticks are partially pulled out.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge when the power is low. If storing for extended periods, charge the battery to approximately 50% every 3-6 months.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Glue gun does not heat up.	Battery not charged.	Charge the battery fully.
Glue gun does not heat up.	Power button not held long enough.	Press and hold the power button for 3 seconds.
Glue gun does not heat up.	Using while charging.	Disconnect charger; use only when not charging.
Glue not dispensing.	Not preheated sufficiently.	Allow 2-3 minutes for preheating.
Glue not dispensing.	Glue stick not fully inserted.	Push glue stick firmly into the gun.
Glue drips excessively.	Nozzle not fully heated or faulty.	Ensure full preheating. If problem persists, contact support.
Battery indicator light issues.	Refer to charger/battery specific instructions.	Ensure proper charging sequence (power off, then charge).

8. SPECIFICATIONS

Feature	Detail
Model	HH20006AE
Brand	HAUSHOF
Power Supply	12V DC
Wattage	60 Watts
Battery Type	Lithium-Ion
Battery Capacity	2.2Ah
Charging Time	1-1.5 Hours
Battery Life (Operating)	Approximately 50 Minutes
Preheating Time	2-3 Minutes
Glue Stick Diameter	0.44 inches (Full Size)
Glue Stick Length	5-1/8 inches
Item Weight	916 g
Dimensions (Approx.)	7" x 6-7/8" x 2-1/2" (Gun)
Charger Cable Length	40"
Compatible Materials	DIY, Paper, Glass, Fabric, Packing, Toys



Image: A detailed infographic displaying the technical specifications of the HAUSHOF Cordless Hot Glue Gun, including power supply, battery type, capacity, charging time, battery life, wattage, and dimensions.



Image: An image showcasing various applications and compatible materials for the glue gun, such as DIY projects, paper, glass, fabric, packing, and toys.





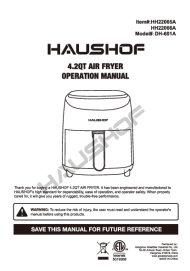

9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact HAUSHOF customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Manufacturer: HAUSHOF

Model Number: HH20006AE

Related Documents - HH20006AE

	<p>HAUSHOF HH25001A Portable Dehumidifier User Manual</p> <p>Official user manual for the HAUSHOF HH25001A portable dehumidifier. Includes safety instructions, technical specifications, operation guide, cleaning, maintenance, and troubleshooting tips.</p>
	<p>HausHof Carpet Spot Cleaner Operation Manual</p> <p>This operation manual provides detailed instructions for the HausHof Carpet Spot Cleaner, including safety precautions, parts identification, preparation, operating instructions, cleaning and maintenance, troubleshooting, and disposal information.</p>
	<p>HAUSHOF Carpet Spot Cleaner HH22050A Operation Manual</p> <p>This manual provides instructions for the HAUSHOF Carpet Spot Cleaner HH22050A, covering safety precautions, parts identification, preparation, operation, cleaning, maintenance, troubleshooting, and disposal.</p>
	<p>HAUSHOF Carpet Spot Cleaner Original Operation Manual</p> <p>This operation manual provides detailed instructions for the HAUSHOF Carpet Spot Cleaner, Model YLW6336. It covers important safety precautions, parts identification, preparation, operating instructions, handling stubborn dirt, cleaning and maintenance, consumables, fault diagnosis, and environmentally friendly disposal.</p>
	<p>HausHof 4.2QT Air Fryer Operation Manual Model DH-601A</p> <p>User manual for the HausHof 4.2QT Air Fryer (Model DH-601A). Learn about safe operation, features, cooking tips, and troubleshooting for your HausHof air fryer.</p>
	<p>HAUSHOF HH24079A Pump Sprayer: Operating and Safety Manual</p> <p>This manual provides comprehensive instructions for operating, cleaning, and troubleshooting the HAUSHOF HH24079A pump sprayer. It includes detailed safety guidelines, parts layout, and operational modes for foaming and spraying applications.</p>

