

GROWNSY T1

GROWNSY T1 2L Food Processor User Manual

Model: T1 | Brand: GROWNSY

1. INTRODUCTION

Thank you for purchasing the GROWNSY T1 2L Food Processor. This versatile kitchen appliance is designed to simplify your food preparation tasks, offering multiple functions including chopping, mixing, grinding, kneading, mashing, mincing, and pureeing. With its powerful motor, large capacity, and user-friendly design, it is an essential tool for any kitchen. Please read this manual thoroughly before first use to ensure safe and optimal operation.

2. SAFETY INSTRUCTIONS

To prevent injury or damage, always follow basic safety precautions when using electrical appliances. Read all instructions carefully.

- **Electrical Safety:** Ensure the voltage matches your power supply. Do not immerse the motor unit in water or other liquids.
- **Blade Safety:** Blades are sharp. Handle with extreme care. Always hold the blade assembly by the plastic shaft.
- **Assembly:** Ensure all parts are correctly assembled before operation. The motor will only operate when properly secured.
- **Overheat Protection:** The appliance is equipped with overheat protection. If it stops working, unplug it and let it cool down for at least 30 minutes before resuming use.
- **Children:** Keep the appliance out of reach of children. Close supervision is necessary when any appliance is used by or near children.

- **Usage:** Do not use the appliance for purposes other than its intended use. Avoid processing extremely hard ingredients like whole coffee beans or hard spices, as this may damage the blades or motor.
- **Cleaning:** Always unplug the appliance before cleaning. Refer to the 'Maintenance and Cleaning' section for detailed instructions.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your GROWNSY T1 Food Processor:

- Motor Unit (Main Body)
- Lid
- 4-Blade Assembly (Knife)
- 2L Glass Bowl (Container)
- Anti-slip Silicone Mat (Coaster)
- Garlic Peeler Attachment



Figure 3.1: Exploded view of the food processor components, showing the motor unit, lid, 4-blade assembly, 2L

glass bowl, anti-slip mat, and garlic peeler.

4. SETUP

1. Place the anti-slip silicone mat on a stable, flat surface.
2. Place the 2L glass bowl onto the silicone mat.
3. Carefully place the 4-blade assembly onto the central shaft inside the bowl. Ensure it is securely seated.
4. Add your desired ingredients into the bowl. Do not exceed the MAX fill line.
5. Place the lid onto the glass bowl, ensuring it is properly aligned and sealed.
6. Position the motor unit onto the lid. The motor unit must be correctly engaged with the blade shaft for the appliance to operate.
7. Plug the power cord into a suitable electrical outlet.

簡単操作&使いやすい



1 カップをコースター
に置く,取り付ける



2 食物を入れる



3 押すだけ口拌する



4 完成を作ります

Figure 4.1: Visual guide for assembling the food processor, showing the bowl, blade, ingredients, lid, and motor unit.

5. OPERATING INSTRUCTIONS

The GROWNSY T1 Food Processor features two-speed settings for various ingredients.

1. **Power On:** After assembly, press down on the top of the motor unit to start processing.
2. **Speed Settings:** The food processor has two speed levels. Use Speed I for softer ingredients and Speed II for harder ingredients. The buttons are located on top of the motor unit.
3. **Processing:** Press and hold the desired speed button for short bursts (pulsing) to achieve optimal results and prevent over-processing. Release the button to stop.
4. **Overheat Protection:** If the motor overheats during prolonged use, the appliance will automatically shut off. Unplug it and allow it to cool down for approximately 30 minutes before restarting.
5. **Garlic Peeling:** To use the garlic peeler attachment, replace the 4-blade assembly with the garlic peeler. Add garlic cloves to the bowl, secure the lid and motor unit, then press the power button.



Figure 5.1: The 300W motor efficiently processes ingredients like meat, demonstrating its power.



Figure 5.2: The garlic peeler attachment efficiently removes garlic skins. For best results, remove the root end of the garlic before processing.

Demonstration Videos:

Your browser does not support the video tag.

Video 5.1: This video demonstrates the food processor's ability to blend and puree berries into a smooth consistency, suitable for desserts or baby food.

Your browser does not support the video tag.

Video 5.2: This video showcases the food processor's versatility, demonstrating how to whip egg whites and grate daikon radish using different attachments.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your food processor.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Disassemble:** Carefully disassemble all removable parts: the motor unit, lid, blade assembly,

and glass bowl.

3. **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
4. **Removable Parts:** The glass bowl, lid, and blade assembly are dishwasher safe or can be hand-washed with warm, soapy water. Handle the blades with extreme caution.
5. **Drying:** Ensure all parts are thoroughly dry before reassembling or storing.



Figure 6.1: All removable parts of the food processor can be easily detached for thorough cleaning.

Cleaning Demonstration Video:

Your browser does not support the video tag.

Video 6.1: This video demonstrates the easy disassembly and cleaning process for the food processor's components under running water.

7. TROUBLESHOOTING

If you encounter any issues with your food processor, refer to the following table:

Problem	Possible Cause	Solution
Appliance does not start	Not plugged in; Motor unit not properly seated; Overheat protection activated	Check power connection; Re-seat motor unit on lid; Unplug and let cool for 30 minutes
Blades are not rotating	Ingredients are too large or too much; Blade assembly not properly installed	Reduce ingredient size/quantity; Re-install blade assembly correctly
Unusual noise or odor	Overloaded motor; Foreign object in bowl	Reduce load; Unplug and check for obstructions; If problem persists, contact support

8. SPECIFICATIONS

Feature	Detail
Brand	GROWNSY
Model	T1
Capacity	2 Liters
Power	300 W
Speed Settings	2 (for soft and hard ingredients)
Blade Material	Stainless Steel (4 blades)
Bowl Material	Glass
Dimensions (D x W x H)	17.6 cm x 17.6 cm x 22 cm
Weight	2.47 kg
Safety Features	Overheat Protection, BPA-free materials, Anti-slip base
Care Instructions	Hand wash, Dishwasher safe (removable parts)

9. WARRANTY AND SUPPORT

The GROWNSY T1 Food Processor comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical

support, troubleshooting assistance, or warranty claims, please contact GROWNSY customer service through the retailer where you purchased the product or visit the official GROWNSY website. Keep your purchase receipt as proof of purchase for any warranty-related inquiries.

© 2026 GROWNSY. All rights reserved.