

[Manuals.plus](#) /

› [Lukasa](#) /

› Lukasa Rechargeable Portable Bluetooth CD Player Model 004 Instruction Manual

Lukasa 004

Lukasa Rechargeable Portable Bluetooth CD Player Model 004 Instruction Manual

Model: 004 | Brand: Lukasa

1. INTRODUCTION

Thank you for purchasing the Lukasa Rechargeable Portable Bluetooth CD Player. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and keep it for future reference.

2. WHAT'S IN THE BOX

- 1 x Lukasa Portable Bluetooth CD Player
- 1 x Earphone
- 1 x USB Cable (for charging)
- 1 x Aux Cable
- 1 x User Manual

3. PRODUCT OVERVIEW AND CONTROLS

Familiarize yourself with the player's components and control buttons for optimal use.



Image: Front view of the Lukasa CD Player with all control buttons labeled.

1. **Function Button (FUN):** Press to switch between CD, USB, AUX, and Bluetooth modes.
2. **Programming Button (PROG):** Used to program the playback order of tracks.
3. **Anti-shock Button (ASP):** Activates or deactivates anti-shock protection.
4. **Repeat Button (REP):** Cycles through repeat modes (single track, all tracks, random).
5. **Display Screen:** Shows track number, time, mode, and other status indicators.
6. **Stop Button (■):** Stops playback.
7. **Speed+:** Increases playback speed (for specific audio types).
8. **Speed-:** Decreases playback speed (for specific audio types).
9. **Previous Fast Rewind Button (K<):** Skips to the previous track or fast rewinds.
10. **Next Fast Forward Button (>|):** Skips to the next track or fast forwards.
11. **Volume- (-):** Decreases volume.
12. **Volume+ (+):** Increases volume.
13. **Play/Pause Button (▶/||):** Starts or pauses playback.
14. **Audio Input Port (AUX IN):** 3.5mm jack for external audio input.
15. **USB Disk Port (USB):** For USB drive playback.
16. **Earphone Port:** 3.5mm jack for headphones.
17. **Power Switch (ON/OFF):** Slide switch to turn the device on or off.

4. SETUP

4.1. Charging the CD Player

The Lukasa CD Player features a built-in rechargeable battery. To charge the device:

- Connect the provided USB cable to the USB charging port on the player.

- Plug the other end of the USB cable into a USB power adapter (not included), a power bank, or a computer's USB port.
- The battery indicator on the display will show charging status. A full charge typically provides up to 12 hours of playback.



Image: The CD player being charged via various USB sources like a power bank, laptop, or USB wall plug.

4.2. Inserting a CD

1. Slide the power switch to the "ON" position.
2. Locate the open button on the side of the player and slide it to open the CD compartment lid.
3. Carefully place a CD (CD, CD-R, CD-RW, MP3, WMA format supported) onto the central spindle, ensuring it clicks into place.
4. Close the CD compartment lid firmly until it clicks.

Your browser does not support the video tag.

Video: Demonstrates how to open the CD compartment, insert a CD, and close the lid.

5. OPERATING INSTRUCTIONS

5.1. Basic CD Playback

1. After inserting a CD and closing the lid, the player will automatically start reading the disc. The display will show "CD" and the total number of tracks.
2. Press the **Play/Pause** (▶/||) button to start playback. Press again to pause.
3. Use the **Previous** (K<) or **Next** (>|) buttons to skip between tracks.
4. Press and hold **Previous** (K<) or **Next** (>|) to fast rewind or fast forward within a track.
5. Adjust the volume using the **Volume+** (+) and **Volume-** (-) buttons.
6. Press the **Stop** (■) button to stop playback.

5.2. Repeat and Program Functions

- **Repeat (REP)**: Press the REP button repeatedly to cycle through repeat modes: repeat one track, repeat all tracks, or random play.
- **Program (PROG)**: To program tracks, first press the **Stop** (■) button. Then press **PROG**. Use the **Previous** (K<) or **Next** (>|) buttons to select a track, then press **PROG** to confirm. Repeat for up to 20 tracks. Press **Play** (▶) to start programmed playback.

Your browser does not support the video tag.

Video: Demonstrates various playback controls including fast forward, slow playback, A-B repeat, and programming songs.

5.3. Anti-Shock Protection (ASP)

The ASP feature helps prevent audio interruptions caused by vibrations or bumps. It is recommended to keep ASP enabled, especially during portable use or in a moving vehicle.

- Press the **ASP** button to toggle anti-shock protection on or off. The display will indicate its status.

5.4. USB Playback

1. Insert a USB flash drive into the USB Disk Port.
2. Press the **Function (FUN)** button repeatedly until "USB" appears on the display.
3. Playback controls (Play/Pause, Skip, Volume) are similar to CD playback.

5.5. Bluetooth Connection (Transmitter Mode)

The CD player can transmit audio to Bluetooth speakers or headphones.

1. Ensure your Bluetooth receiving device (headphones, speaker) is in pairing mode.
2. On the CD player, long press the **Function (FUN)** button to activate Bluetooth transmitter mode. A Bluetooth icon will flash on the display.
3. The CD player will automatically search for and connect to nearby Bluetooth devices. Once connected, the Bluetooth icon will stop flashing.
4. You can now play audio from the CD player through your connected Bluetooth device.

Your browser does not support the video tag.

Video: Demonstrates the operation of the player connected to a Bluetooth device, showing the pairing process and audio transmission.

5.6. AUX Connection

Use the provided Aux cable to connect the CD player to external audio systems, such as car audio or home stereos.

1. Connect one end of the Aux cable to the **AUX IN** port on the CD player.

2. Connect the other end of the Aux cable to the AUX input of your external audio system.
3. Press the **Function (FUN)** button repeatedly until "AUX" appears on the display.
4. Control playback and volume through your external audio system.

Connect to Car Audio via AUX Cable



Image: The portable CD player connected to a car's audio system using an AUX cable.

6. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents.
- Store the CD player in a cool, dry place away from direct sunlight and extreme temperatures.
- Handle CDs by their edges to prevent scratches and smudges. Clean CDs with a soft, lint-free cloth from the center outwards.

7. TROUBLESHOOTING

Problem	Solution
Player does not turn on.	Ensure the power switch is in the "ON" position. Check battery level and charge if necessary.
CD does not play or skips.	Check if the CD is inserted correctly and the lid is closed. Clean the CD for smudges or scratches. Ensure Anti-Shock Protection (ASP) is enabled.
No sound from headphones/speakers.	Check headphone/AUX cable connection. Adjust volume on the player and connected device. Ensure correct mode (CD, USB, AUX, Bluetooth) is selected.
Bluetooth connection fails.	Ensure the Bluetooth receiving device is in pairing mode and within range. Long press the FUN button on the CD player to re-enter Bluetooth pairing mode.
USB drive not recognized.	Ensure the USB drive is properly inserted. Check that the USB mode is selected via the FUN button. Ensure the USB drive contains supported audio formats (MP3, WMA).

8. SPECIFICATIONS

Feature	Detail
Brand	Lukasa
Model Number	004
Connectivity Technology	Auxiliary, Bluetooth, USB
Supported Audio Formats	MP3, CD, CD-R, CD-RW, WMA
Number of Discs	1
Headphones Jack	3.5mm Jack
Battery	1 x 12V battery (included)
Item Dimensions (L x W x H)	5.6"L x 5.6"W x 0.8"H

9. WARRANTY AND SUPPORT

This Lukasa CD Player comes with a **6-month warranty** from the date of purchase. For warranty claims, technical support, or any inquiries, please refer to the contact information provided in your purchase documentation or visit the official Lukasa website.

