

[Manuals.plus](#) /

› [Paladone](#) /

› Paladone Minecraft Grass Block Digital Alarm Clock User Manual

Paladone PP6733MCF

Paladone Minecraft Grass Block Digital Alarm Clock User Manual

Model: PP6733MCF

PRODUCT OVERVIEW

The Paladone Minecraft Grass Block Digital Alarm Clock is designed to bring the iconic Minecraft aesthetic to your bedside. This digital alarm clock features a light-up function and plays official Minecraft in-game music for its alarm. It displays the time, month, and day, making it a functional and decorative item for any Minecraft enthusiast.



Image: The Minecraft Grass Block Digital Alarm Clock, showing its digital display with time, month, and day.



Image: The Minecraft alarm clock illuminated, highlighting its light-up functionality and pixelated design.

SETUP

1. Unboxing:

Carefully remove the alarm clock from its packaging. Ensure all components, including the Micro USB cable, are present.



Image: The Minecraft alarm clock shown within its retail packaging, indicating it comes in a gift box.

2. Power Connection:

Connect the provided Micro USB cable to the port on the back of the alarm clock. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port on a computer or wall outlet. The clock requires a stable power source for continuous operation.

MICRO USB TO USB POWER CORD

(ADAPTER NOT INCLUDED)



150 CM
59 IN

Image: A Micro USB to USB power cord, approximately 150 cm (59 inches) long, shown next to the Minecraft alarm clock, indicating the power connection method.

Important Note:

This alarm clock does not have a battery backup. If the power supply is interrupted, the time and alarm settings may reset. It is recommended to use a reliable power source.

OPERATING INSTRUCTIONS

The alarm clock features several buttons on its top surface for setting and controlling its functions. These buttons are typically marked with symbols or slight indentations resembling Minecraft pixels.

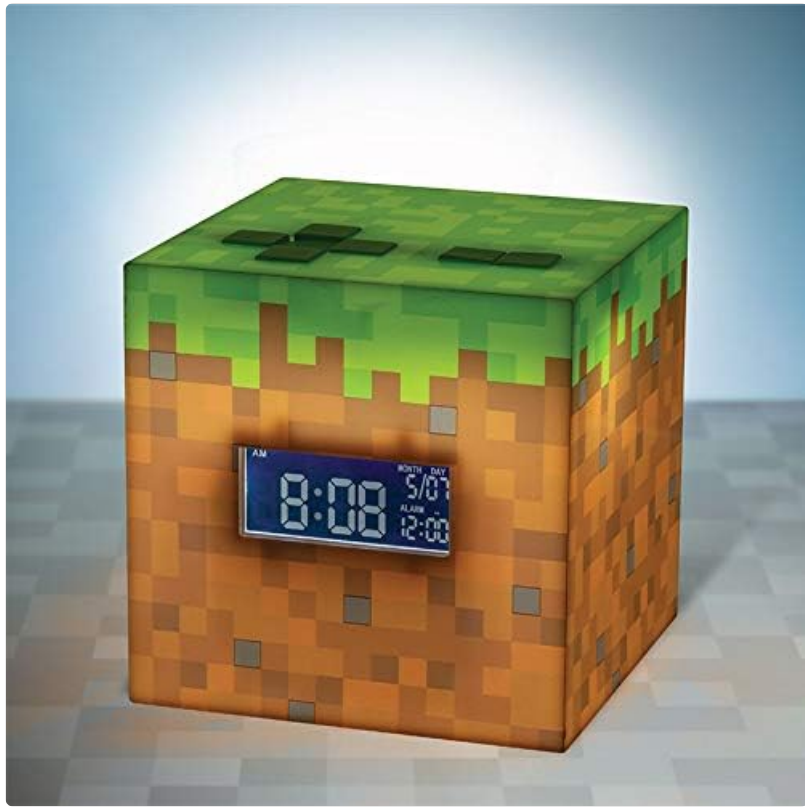


Image: A top-down view of the Minecraft alarm clock, highlighting the control buttons on its upper surface.

Setting Time and Date

1. Locate the "SET" button (often indicated by a gear or similar icon). Press and hold this button until the time display begins to flash.
2. Use the "+" and "-" buttons (often resembling directional arrows or plus/minus signs) to adjust the hours. Press "SET" again to confirm and move to minutes.
3. Adjust minutes using "+" and "-" buttons. Press "SET" to confirm and proceed to setting the year, month, and day in a similar manner.
4. Once all settings are confirmed, the display will stop flashing.

Setting the Alarm

1. Locate the "ALARM" button (often indicated by a bell icon). Press and hold this button until the alarm time display begins to flash.
2. Use the "+" and "-" buttons to set the desired alarm hour and then minutes.
3. Press "ALARM" again to confirm the alarm time. An alarm icon (e.g., a small bell) will appear on the display, indicating the alarm is active.
4. To deactivate the alarm, press the "ALARM" button once. The alarm icon will disappear.

ALARM CLOCK

PLAYS OFFICIAL MINECRAFT MUSIC



Image: The Minecraft alarm clock with musical notes floating around it, signifying that it plays official Minecraft music as its alarm sound.

Using the Light Feature

The alarm clock functions as a light-up lamp. To activate or deactivate the light, press the designated "LIGHT" or "MODE" button (refer to the specific button layout on your device). The light will illuminate the entire grass block structure.



Image: The Minecraft alarm clock glowing from within, demonstrating its light-up feature, which can serve as a night light.

Snooze Function

When the alarm sounds, press the large button on the top of the clock (often the "SET" or a dedicated "SNOOZE" button) to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes (typically 5-10 minutes, depending on the model).

Turning Off the Alarm

To completely turn off the alarm after it sounds, press any button other than the snooze button, or press the "ALARM" button to deactivate it for the next day.

MAINTENANCE

- **Cleaning:**

Wipe the surface of the alarm clock with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

- **Storage:**
Store the alarm clock in a cool, dry place when not in use for extended periods.
- **Power Cable:**
Ensure the Micro USB cable is not bent or damaged. Always unplug the cable by holding the plug, not by pulling the cord.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank or not working.	No power or loose connection.	Ensure the Micro USB cable is securely plugged into the clock and a working power source. Try a different USB adapter or port.
Alarm does not sound.	Alarm not set or deactivated. Volume too low (if adjustable).	Verify the alarm time is set correctly and the alarm icon is visible on the display. Ensure the clock is powered. The alarm sound is fixed and plays official Minecraft music.
Time/Date resets frequently.	Power interruption.	This clock does not have a battery backup. Ensure a continuous and stable power supply. Avoid unplugging the device.
Light feature not working.	Light function not activated.	Press the "LIGHT" or "MODE" button to activate the light. Ensure the clock is powered.

SPECIFICATIONS

- Brand:** Paladone
- Model:** PP6733MCF
- Color:** Green
- Display Type:** Digital
- Special Feature:** Alarm, Light-Up
- Product Dimensions:** 4.33"W x 4.33"H (approximately 11 cm x 11 cm)
- Power Source:** Corded Electric (Micro USB cable included, adapter not included)
- Material:** Plastic
- Item Weight:** 280 Grams (approx. 9.9 ounces)
- Batteries Required:** No (operates via USB power)
- Alarm Clock:** Yes
- Theme:** Video Game (Minecraft)

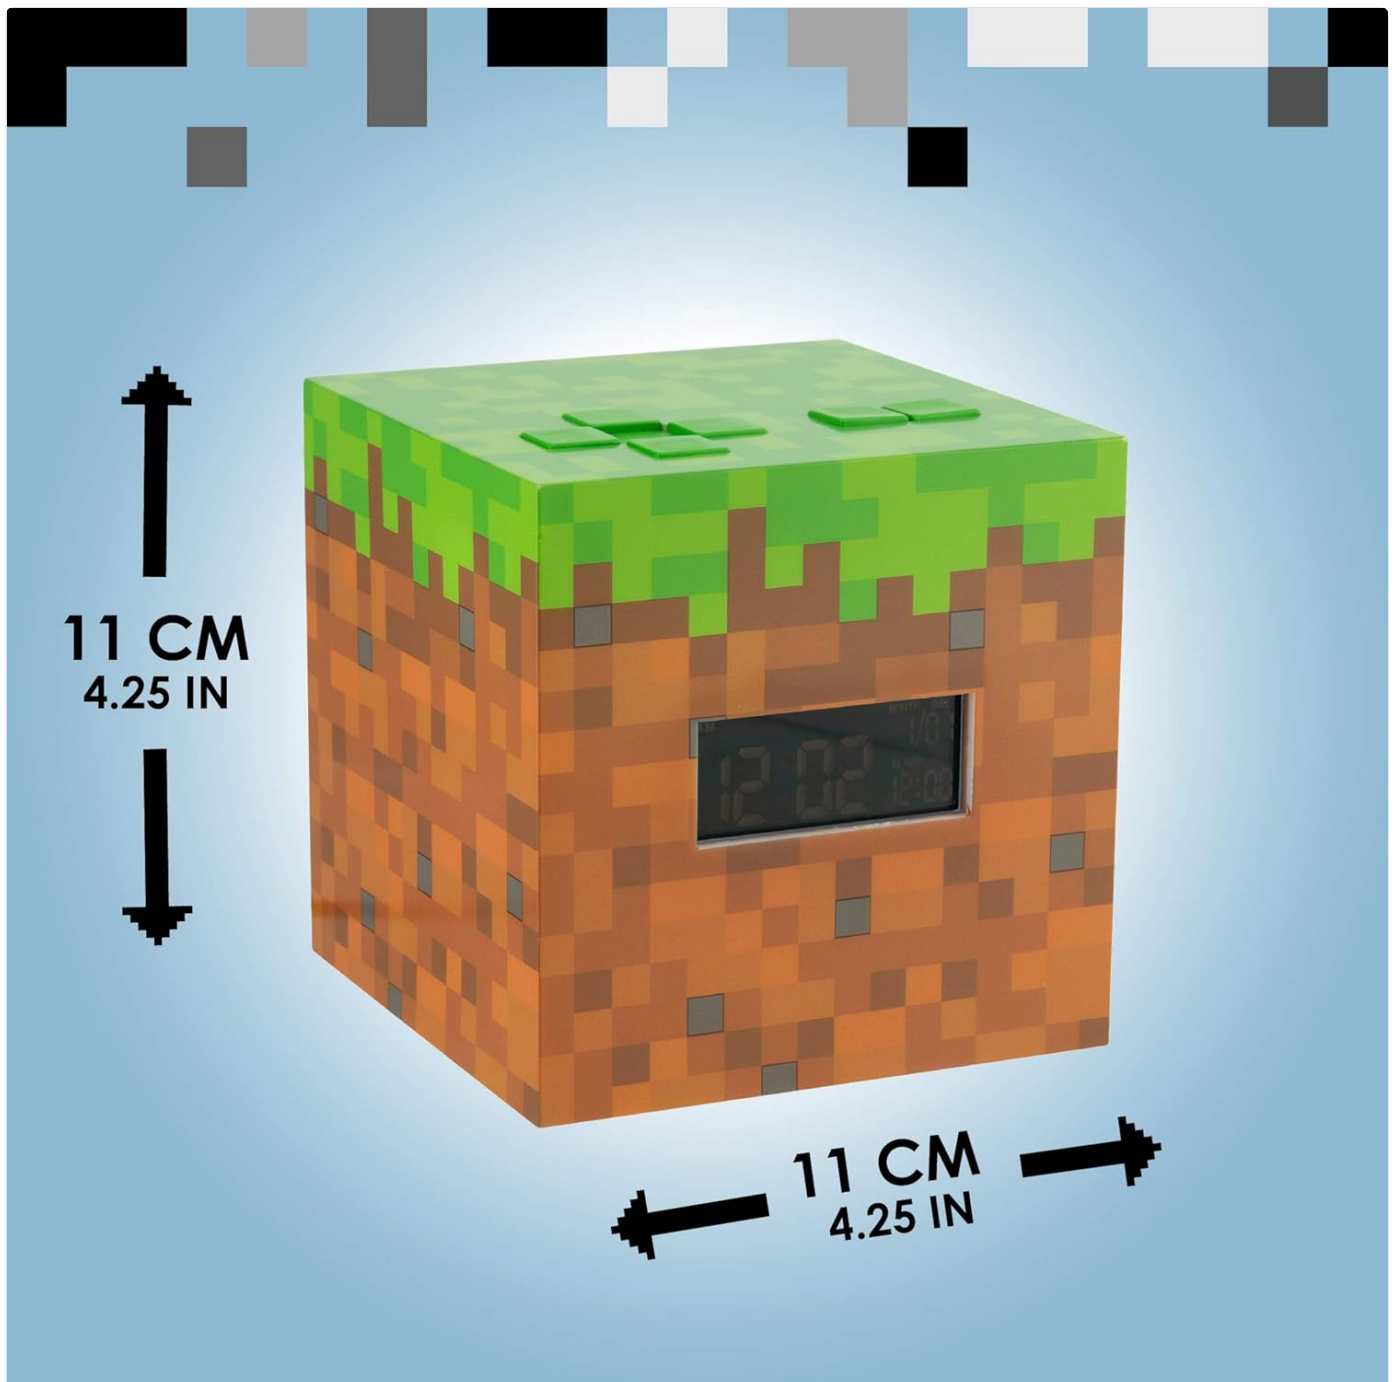


Image: The Minecraft alarm clock with arrows indicating its dimensions: 11 cm (4.25 inches) in width and 11 cm (4.25 inches) in height, showcasing its compact, cube-like form.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: A 360-degree view of the Paladone Minecraft Alarm Clock, demonstrating its design and features from all angles.

WARRANTY AND SUPPORT

The Paladone Minecraft Grass Block Digital Alarm Clock comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and claims, please refer to the warranty information provided with your product packaging or contact Paladone customer support directly.

For further assistance, troubleshooting, or product inquiries, please visit the official Paladone website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

[Visit the Paladone Store on Amazon](#)

