

[Manuals.plus](#) /

› [iRUNTEK](#) /

› iRUNTEK Mini 1.3 Quart Air Fryer User Manual

iRUNTEK B08HHZJ7FZ

iRUNTEK Mini 1.3 Quart Air Fryer User Manual

Model: B08HHZJ7FZ

INTRODUCTION

Thank you for choosing the iRUNTEK Mini 1.3 Quart Air Fryer. This compact appliance is designed for healthy cooking, allowing you to enjoy your favorite foods with up to 85% less fat compared to traditional frying methods. Its small size makes it ideal for individuals, couples, dorm rooms, or small kitchens. Please read this manual thoroughly before use to ensure safe and optimal operation.



Image: The iRUNTEK Mini Air Fryer shown with a variety of air-fried dishes, demonstrating its cooking capabilities.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Ensure the appliance is placed on a stable, heat-resistant surface.
15. Do not block any ventilation openings.

PRODUCT OVERVIEW

The iRUNTEK Mini Air Fryer is designed for convenience and efficiency. It features a compact design, a non-stick basket, and an integrated timer for ease of use.

Key Features:

- **Compact Size:** 1.3 Quart capacity, ideal for 1-2 persons.
- **Healthier Cooking:** Uses 85% less fat than traditional frying.
- **Integrated Timer:** Manual 30-minute timer with auto-shutoff.
- **Easy to Clean:** Detachable non-stick basket and pan rack are dishwasher safe.
- **Safety Features:** ETL approved 800-Watt, overheat protection, cool-touch housing and handle.



Image: The iRUNTEK Mini Air Fryer with its dimensions (6.7"D x 6.7"W x 11.4"H) and 1.3 Quart capacity clearly indicated, alongside a soda can for scale.




Image: Visual representation of the air fryer's features including compact design, 80% less oil, 360-degree fast air heat circulation, easy-to-clean basket, and integrated timer with auto-off function.

SETUP

Before using your iRUNTEK Mini Air Fryer for the first time, please follow these steps:

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the appliance.
2. **Clean:** Wash the detachable non-stick basket and pan rack with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 4 inches (10 cm) of free space on the back and sides of the appliance, and 4 inches (10 cm) above it, to allow for proper air circulation.
4. **Power:** Plug the power cord into a grounded wall outlet.

What's Included

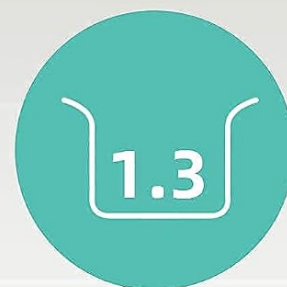

1.3 quart Air Fryer



User manual



Giveaway

Image: The contents of the iRUNTEK Mini Air Fryer package, including the 1.3 quart air fryer unit, user manual, and a pack of steaming paper.

OPERATING INSTRUCTIONS

Operating your iRUNTEK Mini Air Fryer is straightforward. This model features a manual timer control and operates at a fixed temperature of approximately 500°F (260°C).

1. **Prepare Food:** Prepare your ingredients as desired. For best results, ensure food items are not overcrowded in the basket.
2. **Load Basket:** Pull out the air fryer basket using the handle. Place your food into the basket. Do not fill the basket beyond the MAX line.
3. **Insert Basket:** Carefully slide the basket back into the air fryer until it clicks into place.
4. **Set Timer:** Turn the timer knob clockwise to your desired cooking time (up to 30 minutes). The air fryer will automatically begin heating once the timer is set. The appliance does not have a separate temperature control; it operates at a preset temperature.
5. **Cooking Process:** The indicator light will illuminate, signifying that the air fryer is heating. During cooking, you may

pull out the basket to shake or flip food for even cooking. The air fryer will pause when the basket is removed and resume when reinserted.

6. **Completion:** When the timer reaches zero, a bell will ring, and the air fryer will automatically shut off. Carefully pull out the basket and remove the cooked food.
7. **Manual Shut-off:** To stop cooking before the timer finishes, simply turn the timer knob counter-clockwise to the '0' position.

EASY TO USE!

① Pull out the basket



② Food in the basket



③ Put in the fryer



④ Power on



⑤ Spin button



Timer control
No temperature control

⑥ Shut down



When the button is rotated to 0,
it will turn off

Image: A visual guide demonstrating the six steps to use the air fryer: 1) Pull out the basket, 2) Place food in the basket, 3) Put the basket into the fryer, 4) Power on, 5) Spin the timer button, 6) The unit shuts down when the timer reaches 0.

Official Product Video:

Your browser does not support the video tag.

Video: An official iRUNTEK video demonstrating the compact size and basic operation of the 1.3 Quart Air Fryer, including loading food and setting the timer.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer. Always unplug the appliance

and allow it to cool completely before cleaning.

1. **Basket and Pan Rack:** The detachable non-stick basket and pan rack are dishwasher safe. Alternatively, they can be washed by hand with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak the basket in warm, soapy water for about 10 minutes before cleaning.
2. **Interior:** Wipe the interior of the air fryer with a damp cloth. Do not use abrasive cleaners or steel wool.
3. **Exterior:** Clean the exterior of the appliance with a damp cloth.
4. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.



Image: The detachable non-stick basket of the iRUNTEK Mini Air Fryer being rinsed under a faucet, illustrating its ease of cleaning.



Image: A sequence showing how to place a paper filter liner in the air fryer basket before adding food, which can help simplify cleaning after use.

TROUBLESHOOTING

If you encounter any issues with your iRUNTEK Mini Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	The appliance is not plugged in. The timer is not set.	Ensure the power cord is securely plugged into a grounded outlet. Turn the timer knob to the desired cooking time.
Food is not cooked evenly.	Basket is overcrowded. Food items are not shaken or flipped.	Cook food in smaller batches. Shake or flip food halfway through the cooking time.
White smoke comes from the appliance.	Greasy residue from previous use. Excess oil on food.	Clean the basket and pan rack thoroughly after each use. Pat excess oil from food before air frying.
Food is not crispy.	Too much moisture in food. Basket overcrowded.	Pat food dry before cooking. Cook in smaller batches to allow for better air circulation.

If the problem persists after checking these solutions, please contact customer support.

SPECIFICATIONS

- **Model Name:** iRUNTEK Mini Small
- **ASIN:** B08HHZJ7FZ
- **Capacity:** 1.3 Quarts
- **Output Wattage:** 800 Watts
- **Product Dimensions:** 6.7"D x 6.7"W x 11.4"H
- **Material:** Plastic (Outer), Plastic (Inner)
- **Color:** Aqua
- **Control Method:** Manual Timer Knob
- **Special Features:** Automatic Shut-Off, Overheat Protection, Non-Stick Basket
- **Dishwasher Safe:** Yes (Basket and Pan Rack)

WARRANTY AND SUPPORT

iRUNTEK products are manufactured to high-quality standards. For any questions, concerns, or warranty claims, please refer to the contact information provided with your purchase or visit the official iRUNTEK website for customer support. Please have your model number (B08HHZJ7FZ) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question