

## Delixike W11307244

# Delixike Washer Lid Lock Switch Instruction Manual

Models: W10682535, W11307244

## 1. PRODUCT OVERVIEW

---

This manual provides instructions for the Delixike Washer Lid Lock Switch, designed as a replacement part for various Whirlpool washing machine models. This component is crucial for the safe and proper operation of your washing machine, ensuring the lid remains locked during cycles.

**Included Components:**

- 1x Lid Switch
- 1x Wiring Harness

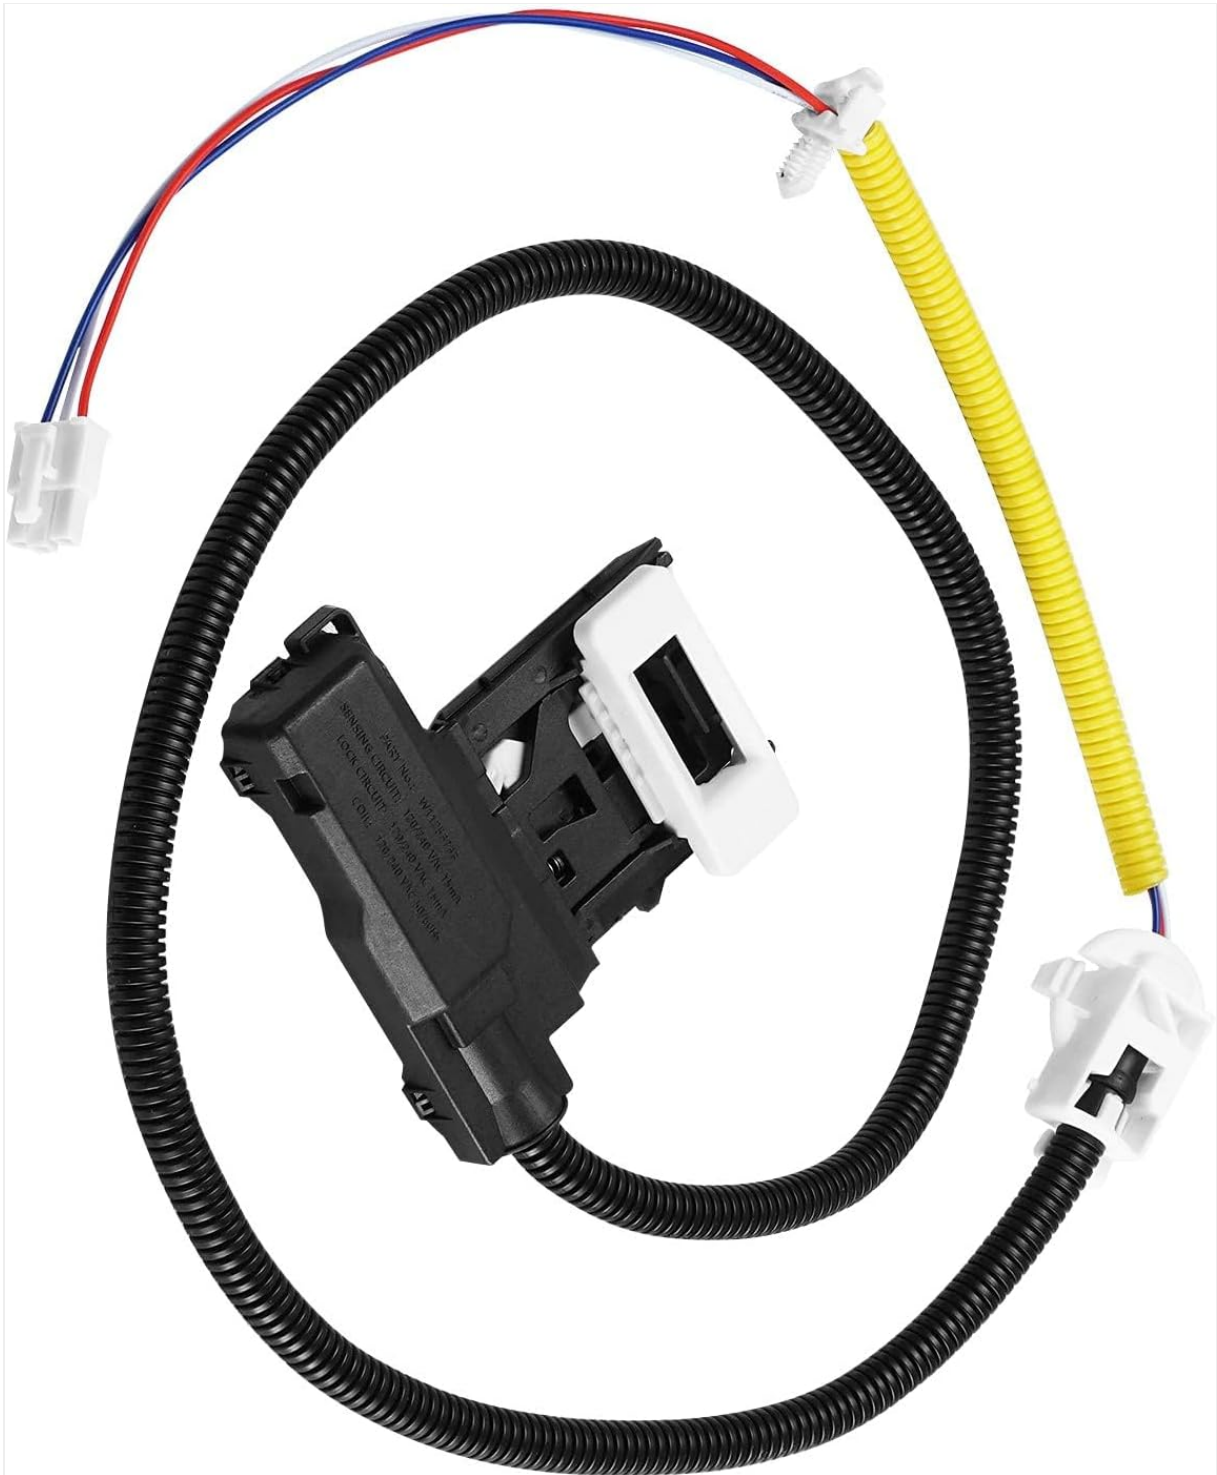


Figure 1: Delixike Washer Lid Lock Switch (W11307244) with integrated wiring harness. This image displays the main lock mechanism, the attached electrical wiring, and the yellow conduit for protection.

## 2. SAFETY INFORMATION

Before attempting any repair or installation, please read and understand all safety precautions. Failure to follow these instructions may result in personal injury or property damage.

- **Disconnect Power:** Always unplug the washing machine from the electrical outlet before beginning any service or installation.
- **Water Supply:** Turn off the water supply to the washing machine.
- **Professional Assistance:** If you are unsure about any step, consult a qualified appliance repair technician.
- **Wear Protective Gear:** Use appropriate personal protective equipment, such as gloves, to prevent injury.
- **Original Parts:** Use only genuine or approved replacement parts.

### 3. INSTALLATION INSTRUCTIONS

---

This section provides general guidance for replacing a washer lid lock switch. Specific steps may vary depending on your washing machine model. Refer to your appliance's service manual for detailed instructions.

#### 1. Prepare the Appliance:

- Unplug the washing machine from the power outlet.
- Turn off the water supply to the washer.
- Move the washer away from the wall to access the rear panel if necessary.

#### 2. Access the Lid Lock:

- Depending on your model, you may need to remove the top panel of the washer or access the lid lock from the front or rear. This typically involves removing screws or clips.

#### 3. Disconnect the Old Lid Lock:

- Carefully disconnect the electrical connectors from the old lid lock switch. Note their positions for reinstallation.
- Remove any mounting screws or clips securing the old lid lock in place.
- Gently remove the old lid lock assembly.

#### 4. Install the New Lid Lock:

- Position the new Delixike lid lock switch (W11307244) in the same location as the old one.
- Secure it with the appropriate mounting screws or clips.
- Connect the electrical wiring harness to the new lid lock switch. Ensure all connections are secure.
- *Note: The part might arrive in a locked position. Install the lid lock and power up the washing machine to reset the lock to the open position.*

#### 5. Reassemble and Test:

- Reattach any panels or covers that were removed.
- Plug the washing machine back into the power outlet.
- Turn on the water supply.
- Perform a test cycle to ensure the lid lock functions correctly and the washer operates as expected.



Figure 2: Close-up view of the Delixike Washer Lid Lock Switch, highlighting the electrical connectors and the flexible wiring. This image provides a clearer perspective on the connection points for installation.

## 4. OPERATION

The Delixike Washer Lid Lock Switch operates automatically as part of your washing machine's safety system. Once a wash cycle begins, the lid lock mechanism engages to prevent the lid from being opened during operation, especially during high-speed spin cycles.

- **Lid Locking:** The lid will automatically lock when a wash cycle is initiated.
- **Lid Unlocking:** The lid will automatically unlock at the end of the wash cycle or if the cycle is paused or cancelled, provided it is safe to do so (e.g., water level is low).
- **Manual Reset:** If the part arrived in a locked position, powering up the washing machine after installation will reset the lock to the open position.

## 5. MAINTENANCE

The Delixike Washer Lid Lock Switch is designed for durability and typically requires no routine maintenance. However, proper care of your washing machine can extend the life of all its components.

- **Avoid Force:** Do not attempt to force the washer lid open when it is locked. This can damage the lid lock mechanism.
- **Keep Clean:** Ensure the area around the lid lock mechanism is free from debris or detergent residue that could impede its function.
- **Regular Inspection:** Periodically inspect the lid lock for any visible signs of wear or damage.

## 6. TROUBLESHOOTING

If you experience issues with your washing machine's lid lock, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Washer lid does not lock.	Lid not fully closed; faulty lid lock switch; wiring issue.	Ensure lid is fully closed. Check for obstructions. Verify electrical connections to the lid lock. If recently installed, ensure the part reset after power-up.
Washer does not start cycle.	Lid lock not engaging; control board issue.	The washer will not start if the lid lock does not signal "locked." Check lid closure and lid lock function. Consult a technician if the issue persists.
Lid remains locked after cycle.	Faulty lid lock switch; control board issue.	Unplug the washer for 5 minutes, then plug it back in to reset. If the issue continues, the lid lock switch may need replacement or further diagnosis by a technician.

For persistent issues, it is recommended to consult a qualified appliance repair technician or refer to your washing machine's specific service manual.

## 7. SPECIFICATIONS

- **Brand:** Delixike
- **Model Numbers:** W10682535, W11307244 (Replaces W10838613, W11253733)
- **Material:** Acrylonitrile Butadiene Styrene
- **Included Components:** Lid Switch, Wiring Harness
- **Item Weight:** Approximately 5 ounces
- **Product Dimensions:** Approximately 2 x 2 x 2 inches
- **Compatibility:** Designed for specific Whirlpool washing machine models. Verify compatibility with your appliance's model number.

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your Delixike Washer Lid Lock Switch, please contact the seller or manufacturer directly. Keep your purchase receipt as proof of purchase.

You may also visit the [Delixike Store on Amazon](#) for additional product information or to contact their support.