

[Manuals.plus](#) /

› [RESUXI](#) /

› RESUXI Hair Clippers Instruction Manual

RESUXI Gold Knight Close-Cutting Hair Machine Bronze

RESUXI Hair Clippers Instruction Manual

Professional Cordless T Blade Trimmer, Beard Edger Liners

1. INTRODUCTION

Thank you for choosing the RESUXI Hair Clippers. This professional cordless T-blade trimmer is designed for smooth, quick, and precise clipping performance on all types of hair. Its high-quality, long-lasting, high-carbon enhanced, self-sharpening precision stainless steel blades ensure a superior grooming experience. The compact and exquisite design provides a comfortable grip, making it suitable for various hair cutting and beard trimming needs, including oil head styles, trimming, and carving hair shapes.

This manual provides essential information for the safe and effective operation, maintenance, and care of your new hair clipper. Please read it thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

[GENERAL WARNING] Always exercise caution when using electrical appliances. Keep the device away from water. Do not attempt to disassemble or repair the unit yourself. Ensure the device is fully charged before use to maintain optimal performance and prevent pulling hair.

For detailed safety guidelines, please refer to the full safety warnings provided with the product packaging.

3. PRODUCT OVERVIEW



Figure 1: RESUXI Hair Clipper with included accessories, including the charging cable and cleaning brush.



Figure 2: Close-up of the hair clipper highlighting key features: Stainless Steel Blades, Sharp Teeth, 10W Powerful Motor, USB Port, and LED Display.



Figure 3: The hair clipper shown alongside its three attachment guide combs (1mm, 2mm, 3mm) and cleaning brush.

Key Features:

- **Cordless Design:** Offers freedom of movement during use.
- **High-Quality Blades:** Long-lasting, high-carbon enhanced, self-sharpening precision stainless steel blades for smooth and precise cuts.
- **Attachment Guide Combs:** Includes 1mm, 2mm, and 3mm combs for versatile styling.
- **Ergonomic Design:** Exquisite and compact for comfortable grip and easy handling.
- **Quiet Operation:** Low DB working sound, suitable for use around children or pets.
- **Powerful Motor:** Precision motor ensures efficient cutting without snagging or pulling hair.
- **Long Battery Life:** Rechargeable premium battery provides over 180 minutes of nonstop run time on a 2-hour charge.
- **LCD Display:** High-definition LCD display shows remaining power, indicating when to recharge.

4. SETUP

1. **Unboxing:** Carefully remove all components from the packaging. Verify that all items listed in the package contents are present.
2. **Initial Charge:** Before first use, fully charge the hair clipper. Connect the USB charging cable to the clipper's USB port and plug the other end into a USB adapter, computer/PC, power bank, or car charger. The LCD display will indicate charging status. A full charge takes approximately 2 hours.
3. **Attaching Guide Combs:** Select the desired attachment guide comb (1mm, 2mm, or 3mm) based on your preferred hair length. Align the comb with the clipper head and gently push until it clicks securely into place.



Figure 4: Illustration of different charging options for the RESUXI Hair Clipper, including USB adapter, PC, power bank, and car charger.

5. OPERATING INSTRUCTIONS

The RESUXI Hair Clipper is designed for ease of use, whether you are trimming hair or shaping your beard. Its T-blade design allows for precise lines and close cuts.

1. **Power On:** Press the power button to turn on the hair clipper. The LCD display will illuminate, showing the battery

level.

2. **Select Length (Optional):** If using a guide comb, ensure it is securely attached. For close cuts or intricate designs, the clipper can be used without a guide comb.
3. **Trimming Hair:** Gently move the clipper along your hair in the desired direction. For best results, move against the direction of hair growth. The sharp blades ensure a clean cut without pulling.
4. **Shaping Beard/Edging:** The T-blade is ideal for precise edging and shaping beards. Use the clipper without a guard for sharp lines around the neckline, sideburns, and beard edges.
5. **Creating Fades:** Utilize the different guide combs (1mm, 2mm, 3mm) to create gradual fades. Start with a longer comb and progressively switch to shorter combs to blend hair lengths seamlessly.
6. **Power Off:** Press the power button again to turn off the clipper after use.



Figure 5: Demonstrating the use of the hair clipper for various hairstyles and designs, highlighting its precision.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your RESUXI Hair Clipper.

- **Cleaning Blades:** After each use, turn off the clipper and use the included cleaning brush to remove any trapped hair from the blades. For a more thorough clean, the blades can be carefully detached and rinsed under running water (ensure the main body of the clipper does not get wet). Allow blades to air dry completely before reattaching.
- **Oiling Blades:** Periodically apply a small drop of clipper oil (not included) to the blades to keep them lubricated and sharp. Turn on the clipper for a few seconds to distribute the oil evenly.
- **Storage:** Store the clipper in a cool, dry place, away from direct sunlight and moisture. Keep it out of reach of children.

7. TROUBLESHOOTING

If you encounter any issues with your RESUXI Hair Clipper, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Clipper not turning on.	Low battery; Power button not pressed correctly.	Charge the clipper fully; Ensure the power button is pressed firmly.
Blades pulling hair or cutting poorly.	Blades are dull or clogged with hair; Insufficient lubrication.	Clean the blades thoroughly; Apply clipper oil to the blades.
Clipper making unusual noise.	Blades need lubrication; Internal component issue.	Oil the blades; If noise persists, contact customer support.

If the problem persists after attempting these solutions, please contact RESUXI customer support for further assistance.

8. SPECIFICATIONS

- **Brand:** RESUXI
- **Model:** Professional Cordless T Blade Trimmer (Bronze)
- **Product Dimensions:** 2 x 3.7 x 7.6 inches
- **Item Weight:** 14.11 ounces (0.4 Kilograms)
- **Battery:** 1 Lithium Ion battery (included), 1500mAh Eco Li-ion
- **Charging Time:** Approximately 2 hours
- **Run Time:** Over 180 minutes (3 hours)
- **Blade Material:** High-carbon enhanced self-sharpening precision stainless steel
- **Included Guide Combs:** 1mm, 2mm, 3mm
- **Display:** High-definition LCD
- **Recommended Uses:** Clipping, professional use, shaving, trimming

9. WARRANTY AND SUPPORT

RESUXI provides friendly customer service. If you encounter any problems with your product, please do not hesitate to contact us. We are committed to providing a satisfactory solution.

For warranty claims or technical support, please visit the official RESUXI website or contact the seller directly through your purchase platform.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is a personal grooming tool and not a dietary supplement.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08HK49ZLT>

More documents and user manuals: <https://manuals.plus/>