

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [ROMOSS](#) /

› ROMOSS Sense 8+ 30000mAh Power Bank User Manual

ROMOSS Sense 8+

ROMOSS Sense 8+ 30000mAh Power Bank User Manual

Model: Sense 8+

1. INTRODUCTION

Thank you for choosing the ROMOSS Sense 8+ 30000mAh Power Bank. This portable charger is designed to provide reliable power for your mobile devices on the go. Please read this manual carefully before use to ensure proper operation and to maximize the lifespan of your device.

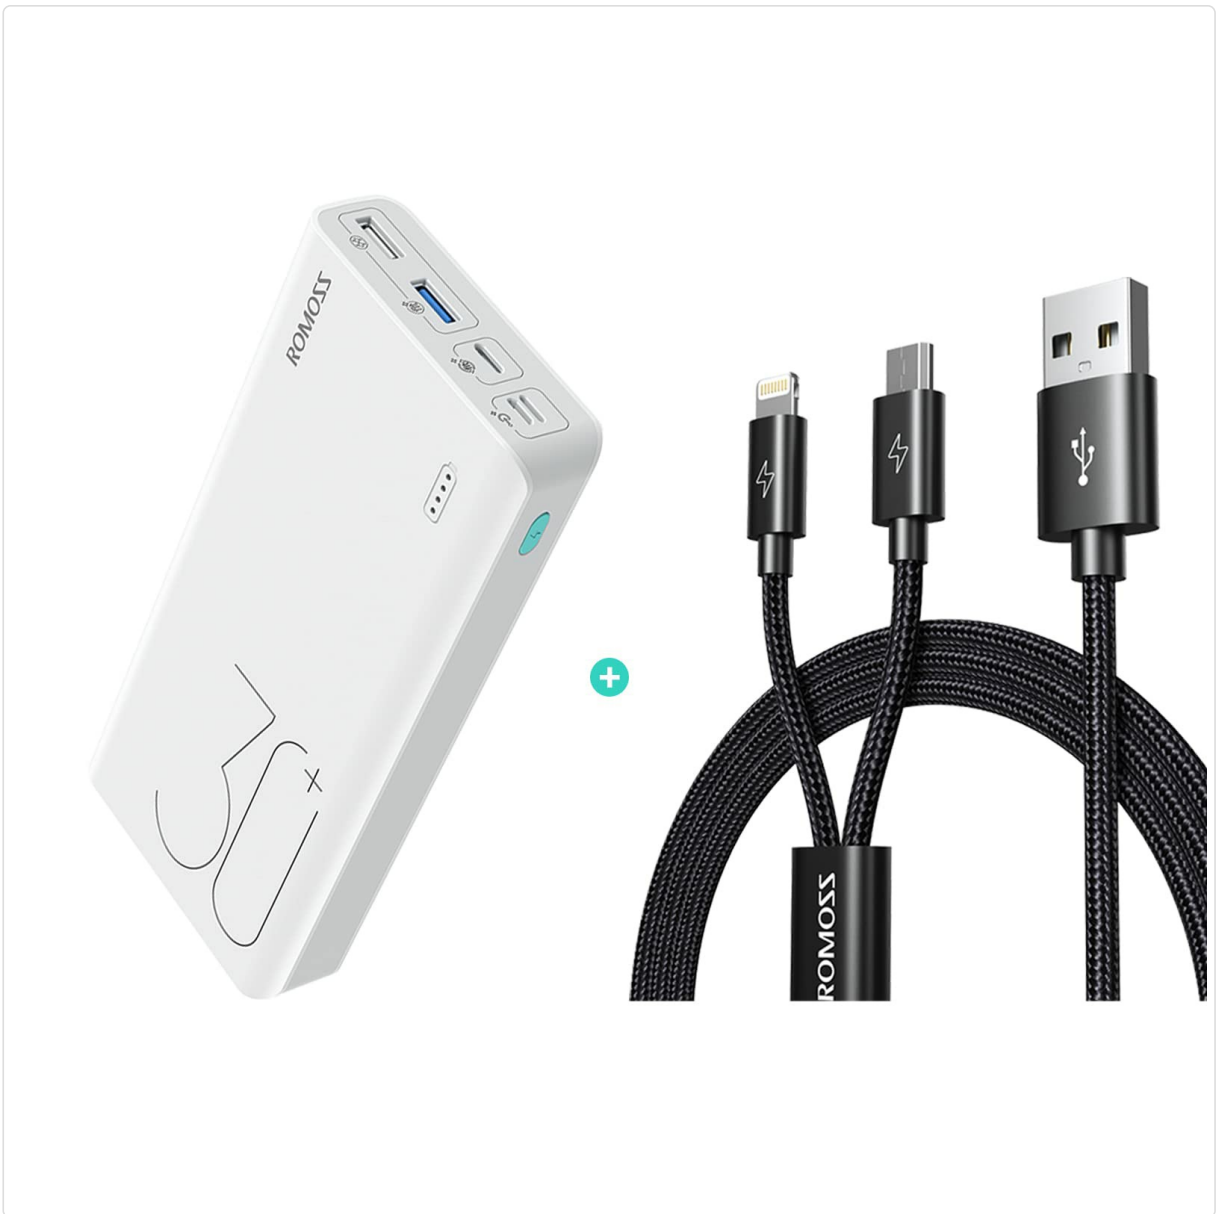


Image 1.1: The ROMOSS Sense 8+ 3000mAh Power Bank, a white portable charger with multiple ports and a battery indicator.

2. PACKAGE CONTENTS

Please check the package for the following items:

- ROMOSS Sense 8+ 3000mAh Power Bank
- Multi USB Charging Cable (Lightning, Micro USB, USB Type-C)
- User Manual (this document)



Image 2.1: The included multi-USB charging cable featuring Lightning, Micro USB, and USB Type-C connectors.

3. IMPORTANT SAFETY INSTRUCTIONS

To prevent injury or damage to your device, please observe the following safety precautions:

- Do not expose the power bank to extreme temperatures (above 60°C/140°F or below 0°C/32°F).
- Do not disassemble, modify, or repair the device yourself.
- Keep the power bank away from water, moisture, and flammable materials.
- Avoid dropping or subjecting the power bank to strong impacts.
- Use only certified charging cables and adapters.
- Keep out of reach of children.
- Dispose of the power bank responsibly according to local regulations.

4. SETUP

4.1 Initial Charging of the Power Bank

Before first use, fully charge your ROMOSS Sense 8+ power bank. This ensures optimal battery performance.

1. Connect a compatible 18W PD (Power Delivery) wall adapter (not included) to one of the power bank's input ports (Micro-USB, Lightning, or USB Type-C).
2. Connect the other end of the cable to a power outlet.
3. The LED indicators on the power bank will illuminate to show the charging status. A full charge is indicated when all LEDs are solid.

Note: It takes approximately 11 hours to fully recharge the 30,000mAh power bank with an 18W PD adapter.

5. OPERATING INSTRUCTIONS

5.1 Charging Your Devices

The ROMOSS Sense 8+ features three USB output ports for charging multiple devices simultaneously.

1. Connect your device's charging cable to one of the power bank's USB output ports.
2. Connect the other end of the cable to your device.
3. The power bank will automatically begin charging your device. The LED indicators will show the remaining battery level of the power bank.

Tip: The power bank supports fast charging for QC-compatible devices, charging up to 80% in approximately 35 minutes.

Stay Powered up for Next Challenge

Never let your gaming down



Image 5.1: The power bank actively charging a smartphone and a Nintendo Switch, demonstrating its multi-device charging capability.

The image features a white ROMOSS Fit+ portable charger with a smartphone connected to it. A white charging cable is plugged into the bottom of the charger. In the foreground, there is a graphic comparison. At the top of the graphic is a green clock icon with the time '00:35' below it. Below the clock are two smartphone icons. The left icon is labeled 'ROMOSS Fit+' and shows a battery level of 80%. The right icon is labeled 'Conventional' and shows a battery level of 18%. The background of the graphic is a light gray gradient.

Charges 4X Faster than Conventional Portable Charger

Image 5.2: A visual comparison showing the ROMOSS Fit+ charging a device to 80% in 35 minutes, significantly faster than a conventional charger reaching 18% in the same time.

Reasonable Cable Length let you Charge while Gaming without trouble



Image 5.3: An illustration demonstrating the practical length of the charging cable, allowing comfortable use of a smartphone while charging.

1 Cable Charges 2 Devices



Image 5.4: A setup showing how one multi-USB cable can charge two different devices simultaneously from the power bank. Note: A 2A charger is required to charge 2 devices together.

5.5 Checking Battery Level

Press the power button once to check the remaining battery level. The LED indicators will light up to show the current charge:

- **One LED:** 0-25%
- **Two LEDs:** 25-50%
- **Three LEDs:** 50-75%
- **Four LEDs:** 75-100%

30,000mAh Capacity

Just 1 day of charging allows for 1 week of use

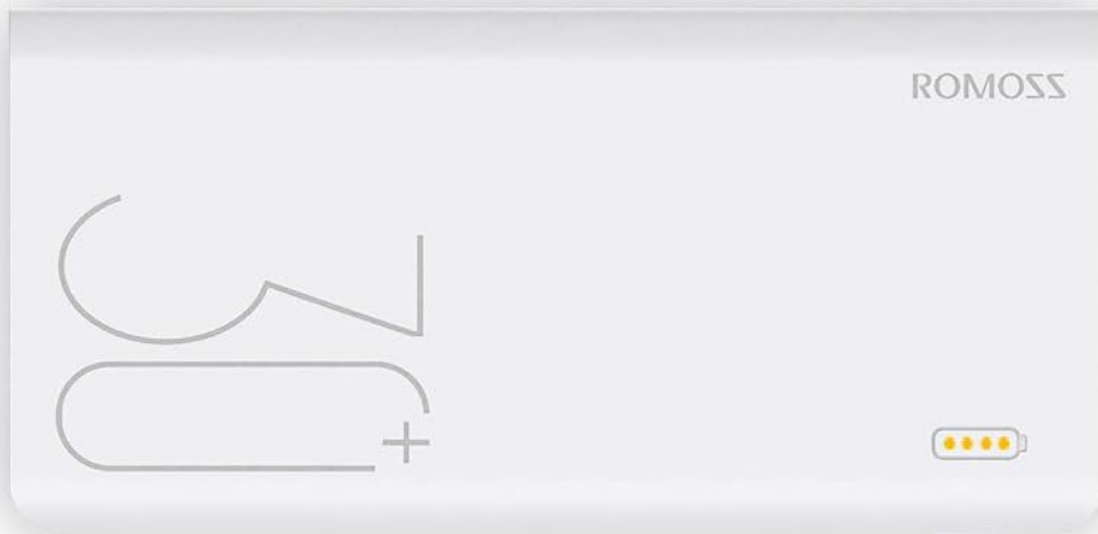


Image 5.5: An illustration of the 30,000mAh capacity, showing it can provide approximately 4 charges for a Nintendo Switch, 12.6 for an iPhone 8, 7.2 for a Samsung S9, and 4 for an iPad Pro.

6. MAINTENANCE

6.1 Cleaning

Wipe the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.

6.2 Storage

Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, charge the power bank to approximately 50% every three months to maintain battery health.

7. TROUBLESHOOTING

Power bank not charging:

- Ensure the charging cable and wall adapter are properly connected and functional.
- Verify that the wall adapter meets the recommended 18W PD specification.
- Try a different charging cable or adapter.

Devices not charging from power bank:

- Check if the power bank has sufficient charge.
- Ensure the charging cable connecting the power bank to your device is securely connected and not damaged.
- Try a different USB output port on the power bank.
- Try a different charging cable for your device.

Slow charging:

- Ensure your device and cable support fast charging if you expect rapid charging speeds.
- Using multiple output ports simultaneously may distribute power, potentially slowing down individual device charging.

8. SPECIFICATIONS

Feature	Specification
Model	Sense 8+
Battery Capacity	30000 Milliamp Hours (mAh)
Battery Cell Composition	Lithium Ion
Input Ports	Micro USB, Lightning, USB Type-C (18W PD)
Output Ports	3 x USB (up to 3A, QC-support)
Recharge Time	Approx. 11 hours (with 18W PD adapter)
Compatible Devices	Smartphones, Tablets, and other USB-powered devices
ASIN	B08HLMP5WC

9. WARRANTY AND SUPPORT

ROMOSS products come with a standard warranty. For detailed warranty information, please refer to the warranty card included with your purchase or visit the official ROMOSS website.

If you encounter any issues or have questions regarding your ROMOSS Sense 8+ Power Bank, please contact ROMOSS customer support through their official website or the retailer where you purchased the product.

Official ROMOSS Website: www.romoss.com