

[Manuals.plus](#) /

› [Philips Norelco](#) /

› Philips Norelco OneBlade Pro Kit User Manual

Philips Norelco QP6550

Philips Norelco OneBlade Pro Kit User Manual

Model: QP6550 / QP610

Brand: Philips Norelco

INTRODUCTION


The Philips Norelco OneBlade Pro Kit is a revolutionary hybrid electric trimmer and shaver designed for facial styling and body grooming. Its unique OneBlade technology allows you to trim, edge, and shave any length of hair with ease and comfort. The integrated LED digital display provides real-time battery status and indicates travel lock activation, ensuring your device is always ready for use, whether at home or on the go.

IMPORTANT SAFETY INFORMATION


WARNING:

- Always unplug the trimmer before cleaning or maintenance.
- Do not use the device while it is charging.
- Keep blades away from eyes and face to avoid injury.
- This product is not intended for use on infants or children.
- Always follow recommended cleaning and maintenance procedures to ensure optimal performance and hygiene.
- Use with caution to avoid skin irritation or nicks.

PRODUCT COMPONENTS

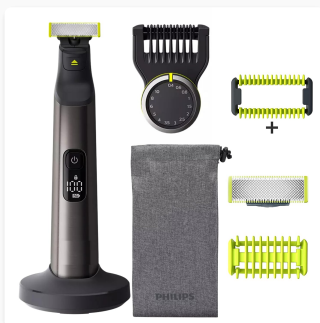

Philips Norelco OneBlade Pro Trimmer: The main device featuring a durable blade, power button, and LED digital display for battery status and travel lock. Includes a charging stand.

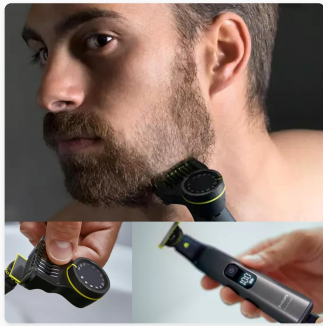

Adjustable Precision Comb: Offers 14 lock-in length settings (0.4 to 10mm) for precise trimming of beards and stubble. Easily attaches and detaches from the OneBlade handle.



OneBlade Body Kit (QP610): Includes additional blades and guards specifically designed for body grooming, ensuring comfortable and efficient hair removal across different body areas.

SETUP

Initial Charging

Before first use, fully charge your Philips Norelco OneBlade Pro. Place the trimmer on the charging stand and connect the stand to a power outlet. The LED digital display will indicate charging progress. A full charge typically takes 1 hour and provides up to 120 minutes of cordless use.

Attaching/Detaching Blades and Combs

- To attach a blade: Align the blade with the handle and push until it clicks into place.
- To detach a blade: Press the release button on the back of the blade and pull it away from the handle.
- To attach the precision comb: Slide the comb onto the blade until it clicks. Ensure it is securely fastened.
- To detach the precision comb: Gently pull the comb away from the blade.

OPERATING INSTRUCTIONS

Trimming

Attach the adjustable precision comb. Rotate the dial to select your desired hair length (0.4mm to 10mm). Turn on the device and move the OneBlade against the grain of your hair, using long, even strokes. The dual-sided blade allows for trimming in either direction.

Edging

Remove the precision comb. Use the dual-sided blade to create sharp lines and perfect edges. Hold the OneBlade perpendicular to your skin and move it along the desired line. The blade's design provides excellent visibility for precise styling.

Shaving

For a close shave, remove any combs. Hold the OneBlade flat against your skin and move it against the grain of your hair. The dual protection system (glide coating and rounded tips) ensures a comfortable shave without irritation, even on longer hairs.

Travel Lock

To activate the travel lock, press and hold the power button for 3 seconds. The lock icon will appear on the LED display. To deactivate, press and hold the power button again for 3 seconds.

MAINTENANCE

Cleaning

The Philips Norelco OneBlade Pro is fully waterproof. After each use, rinse the blade and comb under running water. For a more thorough cleaning, detach the blade and rinse both the blade and the handle separately. Allow all parts to air dry completely before reassembling or storing.

Blade Replacement

For optimal performance, it is recommended to replace each OneBlade blade every 4 months, or when the green indicator on the blade wears off. Replacement is easy and hassle-free. New blades can be purchased from authorized Philips Norelco retailers.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is charged. Check the LED display for battery level. If the travel lock is activated (lock icon displayed), press and hold the power button for 3 seconds to deactivate.
- **Poor trimming/shaving performance:** The blade might be dull. Replace the blade if it has been used for more than 4 months or if the green indicator is worn. Ensure the comb is clean and free of hair buildup.
- **Skin irritation:** Ensure you are using the OneBlade flat against your skin and moving it against the grain. If irritation persists, consult a dermatologist.

SPECIFICATIONS

Feature	Detail
Brand	Philips Norelco
Model Number	QP6550 (Pro Kit), QP610 (Body Kit)
Power Source	Battery Powered
Battery Life	Up to 120 minutes (after 1 hour charge)
Charging Time	1 hour for full charge
Comb Settings	14 length settings (0.4mm - 10mm)
Waterproof	Yes, fully washable
Color	Black / Grey

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question