

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Secura](#) /
- › [Secura Electric Milk Frother User Manual](#)

## Secura MMF-809

# Secura Electric Milk Frother User Manual

Model: MMF-809

## INTRODUCTION

---

Thank you for choosing the Secura Electric Milk Frother. This 4-in-1 automatic milk steamer is designed to create perfect hot and cold foam for your favorite coffee beverages, including lattes, cappuccinos, and macchiatos. Its intuitive one-touch control and ergonomic design make it easy to use and clean, enhancing your home coffee experience.



Image: The Secura Electric Milk Frother in black, accompanied by a silicone spatula and a cup of frothed coffee, showcasing its sleek design and accessories.

## IMPORTANT SAFEGUARDS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before use.
- Do not immerse the base unit in water or other liquids.
- Ensure the power cord is not damaged.
- Keep hands and utensils out of the frother during operation.
- Do not operate the appliance if it has a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only.
- Always ensure the frother is placed on a stable, flat, heat-resistant surface.

- The frother is equipped with Strix temperature control and an auto shut-off feature for safety.

## COMPONENTS

---

The Secura Electric Milk Frother comes with the following components:

- Automatic Milk Frother Unit
- Cleaning Brush
- Power Cable
- Silicone Scraper
- Whisk (x2)

## SETUP

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, clean the inside of the frother jug and the whisk with warm soapy water. Rinse thoroughly and dry completely. *Ensure the base unit and power button remain dry.*
3. **Place Whisk:** Insert the appropriate whisk into the bottom of the frother jug. The frothing whisk is for creating foam, while the heating whisk (without the spring) is for heating milk without frothing.
4. **Connect Power:** Place the frother unit on a stable, flat surface and plug the power cable into a suitable electrical outlet.

## OPERATING INSTRUCTIONS

---

The Secura Milk Frother offers four distinct modes for various milk preparations:

# One-Touch Control for 4 Modes



Image: The frother displaying its four modes: Hot Milk, Cold Foam, Hot Dense Foam, and Hot Airy Foam, each with an example beverage.

## Milk Level Indicators

The frother jug has clear internal markings for minimum and maximum milk levels to ensure optimal performance and prevent overflow.

- **MIN (2.5oz/75ml):** Minimum level for heating or frothing milk.
- **MAX (3.9oz/115ml):** Maximum level for frothing milk.
- **MAX (8.1oz/240ml):** Maximum level for heating milk (without frothing).

# No-Guesswork Level Display



Image: An internal view of the frother jug, clearly showing the minimum (MIN) and maximum (MAX) fill lines for both frothing and heating milk.

## Using the One-Touch Control

The frother features a single button for easy operation. The LED indicator light changes color to show the selected mode.

1. **Add Milk:** Pour milk into the frother jug, ensuring it is between the MIN and appropriate MAX lines for your desired function.
2. **Select Mode:**
  - Press the button once for **Hot Dense Foam** (Red light, solid).
  - Press the button twice for **Hot Airy Foam** (Red light, blinking).
  - Press the button three times for **Cold Foam** (Blue light, solid).
  - Press the button four times for **Hot Milk** (Blue light, blinking).
3. **Start:** The frother will begin operation automatically after mode selection. It operates quietly (approx. 45dB).
4. **Auto Shut-Off:** The frother will automatically shut off once the milk or foam is ready, indicated by the light turning off.

This prevents burning or overflow.

5. **Serve:** Carefully pour the frothed or heated milk into your beverage.

For best frothing results, it is recommended to use whole milk with a fat content greater than 3%.

## Smooth & Thick Milk Foam

Transform bitter  
coffee into velvety  
indulgence



Image: A close-up of smooth, thick milk foam being poured from the frother into a glass, demonstrating the quality of the foam produced.

## MAINTENANCE & CLEANING

---

Proper cleaning ensures the longevity and performance of your Secura Milk Frother.

# Easy to Clean



304  
Stainless Steel



Non-Stick  
Coating



Scratch-Resistant  
Exterior



Image: The frother jug being rinsed under running water in a sink, illustrating its easy-to-clean non-stick interior and scratch-resistant exterior.

1. **Unplug:** Always unplug the frother from the power outlet before cleaning.
2. **Clean Jug:** The frother jug features a scratch-resistant, non-stick coating. Rinse the inside of the jug with warm water immediately after use. Use the included cleaning brush or a soft cloth to remove any milk residue. *Do not use abrasive cleaners or scouring pads.*
3. **Clean Whisk:** Remove the whisk and rinse it under warm water. Use the cleaning brush to clean any milk residue from the whisk spring.
4. **Dry:** Dry all parts thoroughly before reassembling or storing. *Ensure the electrical base and power button are kept dry at all times.*
5. **Storage:** Store the frother in a clean, dry place.

**Product Care Instructions:** Hand Wash Only.

## TRUBLESHOOTING

---

Problem	Possible Cause	Solution
Frother does not turn on.	Not plugged in; power outage; unit malfunction.	Check power connection; test outlet; contact customer support if unit is damaged.
Milk is not frothing or heating properly.	Incorrect milk level; wrong whisk used; type of milk; whisk not properly installed.	Ensure milk is between MIN and MAX lines; use frothing whisk for foam; use whole milk (fat content >3%); ensure whisk is securely placed.
Milk overflows.	Too much milk added.	Do not exceed the MAX fill line for frothing (3.9oz/115ml) or heating (8.1oz/240ml).
Burnt smell or residue.	Milk residue left from previous use; frother not cleaned properly.	Clean the frother thoroughly after each use, especially the bottom of the jug.

## SPECIFICATIONS

Feature	Detail
Brand	Secura
Model Name	MMF-809
Color	Black
Material	Stainless Steel
Product Dimensions	3.95"W x 7.5"H
Item Weight	1.98 pounds (898 Grams)
Capacity	8.1oz / 240ml (heating), 3.9oz / 115ml (frothing)
Power Source	Electric
Wattage	400 watts
Special Features	Auto Shut-Off, Indicator Light, Non-Stick, Overheat Protection, ETL Certified, Strix Temperature Control, Quiet Operation (45dB)
Included Components	Automatic Milk Frother, Cleaning Brush, Power Cable, Silicone Scraper, Whisk (x2)

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Secura website or contact their customer service directly. You can also find additional resources, including a PDF user guide and manual, via the following links:

- [User Guide \(PDF\)](#)
- [User Manual \(PDF\)](#)

