



Manuals.plus /

› Aucma /

› Aucma Stainless Steel Whisk Attachment User Manual for 6.2L Stand Mixers SM-1518Z & SM-1518N

Aucma SM-1518Z, SM-1518N

Aucma Stainless Steel Whisk Attachment User Manual

For Aucma 6.2L Stand Mixers Models SM-1518Z & SM-1518N

1. INTRODUCTION

Thank you for choosing the Aucma Stainless Steel Whisk Attachment. This accessory is designed to enhance the functionality of your Aucma 6.2L Stand Mixer, specifically models SM-1518Z and SM-1518N. This manual provides essential information for the safe and effective use, installation, and maintenance of your new whisk attachment.

2. SAFETY INSTRUCTIONS

- Always ensure your stand mixer is unplugged from the power outlet before attaching, removing, or cleaning the whisk.
- Never operate the mixer with loose clothing, hair, or utensils near the whisk attachment.
- Keep hands clear of the whisk and mixing bowl during operation.
- This whisk is designed for use with Aucma 6.2L Stand Mixers SM-1518Z and SM-1518N only. Using it with incompatible mixers may cause damage or injury.
- Do not immerse the mixer base in water or other liquids.
- Supervise children when the mixer and its attachments are in use.

3. PRODUCT OVERVIEW

The Aucma Stainless Steel Whisk Attachment is crafted from durable stainless steel, designed for efficient aeration and mixing of ingredients such as egg whites, cream, and light batters. Its robust construction ensures longevity and consistent performance.



Figure 1: Aucma Stainless Steel Whisk Attachment. This image shows a detailed view of the whisk, highlighting its stainless steel construction and bayonet-style fitting at the top.

4. SETUP AND INSTALLATION

Follow these steps to correctly attach the whisk to your Aucma stand mixer:

1. **Ensure Safety:** Before beginning, make sure your Aucma stand mixer is turned off and unplugged from the power outlet.
2. **Tilt Mixer Head:** If your mixer has a tilt-head design, release the locking mechanism and tilt the motor head back.
3. **Attach Whisk:** Align the bayonet fitting at the top of the whisk with the attachment shaft on the mixer. Push the whisk upwards and twist it clockwise until it locks securely into place. Ensure the whisk is firmly seated and does not wobble.
4. **Lower Mixer Head:** Carefully lower the mixer head and lock it into position.



Figure 2: Whisk Attachment on Stand Mixer. This image displays the whisk correctly installed on an Aucma stand mixer, ready for use with a mixing bowl.

5. OPERATING INSTRUCTIONS

Once the whisk is securely attached and the mixer head is locked, you can begin mixing:

1. **Add Ingredients:** Place your ingredients into the mixing bowl.
2. **Select Speed:** Plug in the mixer and select the appropriate speed setting for your recipe. Start at a low speed to prevent splashing, then gradually increase as needed.
3. **Monitor Mixing:** Allow the whisk to operate until your ingredients reach the desired consistency.
4. **Finish:** Once mixing is complete, turn the mixer off and unplug it from the power outlet before removing the whisk or bowl.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your whisk attachment:

- **Dishwasher Safe:** The stainless steel whisk attachment is dishwasher safe for convenient cleaning. Place it on the top rack of your dishwasher.

- **Hand Washing:** For hand washing, use warm, soapy water and a soft brush or sponge to remove any food residue. Rinse thoroughly and dry immediately to prevent water spots.
- **Storage:** Store the whisk in a dry place when not in use.

7. TROUBLESHOOTING

- **Whisk does not fit or attach securely:**
 - Ensure your mixer is an Aucma 6.2L Stand Mixer, model SM-1518Z or SM-1518N. This whisk is specifically designed for these models.
 - Verify that the bayonet fitting is correctly aligned with the mixer's attachment shaft and twisted clockwise until it locks.
- **Whisk does not reach the bottom of the mixing bowl:**
 - This whisk is designed for Aucma 6.2L mixing bowls. If you are using a different size bowl or a mixer model other than SM-1518Z or SM-1518N, the whisk may not make proper contact with the bottom of the bowl.
 - Check your mixer's manual for instructions on adjusting the beater-to-bowl clearance, if applicable.

8. SPECIFICATIONS

Brand	Aucma
Compatible Mixer Models	Aucma 6.2L Stand Mixers SM-1518Z & SM-1518N
Material	Stainless Steel
Item Weight	186 grams
Package Dimensions	15.4 x 13.7 x 13.6 cm
Dishwasher Safe	Yes
ASIN	B08HMLLP39

9. WARRANTY AND SUPPORT

Specific warranty information for this whisk attachment is not available in the provided product data. For any questions regarding product support, warranty claims, or replacement parts, please refer to the documentation included with your Aucma stand mixer or contact Aucma customer service directly through their official website or the retailer where the product was purchased.