

Manuals.plus /

› MusiBaby /

› MusiBaby M71 Portable Bluetooth Speaker User Manual

MusiBaby M71

MusiBaby M71 Portable Bluetooth Speaker User Manual

Model: M71

INTRODUCTION

Thank you for choosing the MusiBaby M71 Portable Bluetooth Speaker. This manual provides detailed instructions for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. The M71 speaker offers true 360° stereo sound with rich bass, Bluetooth 5.0 connectivity, and an IPX5 waterproof rating, making it suitable for various indoor and outdoor activities.



Image: The MusiBaby M71 Portable Bluetooth Speaker, black with a mesh grille and control buttons on top.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1x MusiBaby M71 Bluetooth Speaker
- 1x Type-C Charging Cable
- 1x 3.5mm Audio Cable
- 1x M71 Speaker Quick Start Guide

PRODUCT OVERVIEW

The MusiBaby M71 speaker is designed for portability and high-quality audio. Key features include:

- **True 360° Stereo Sound & Booming Bass:** Equipped with two powerful loud speakers and a built-in subwoofer for dynamic sound.
- **Extended Playtime:** Enjoy up to 24 hours of continuous music playback on a single charge.
- **IPX5 Waterproof Rating:** Protected against water splashes and gentle spray, making it suitable for outdoor use.
- **Bluetooth 5.0 Connectivity:** Provides a stable connection up to 100 feet (30 meters) with various Bluetooth-enabled devices.
- **Dual Pairing Function:** Connect two M71 speakers wirelessly for an enhanced stereo sound experience.
- **Versatile Connectivity:** Supports Bluetooth, 3.5mm AUX input, and includes a microphone for call handling.

Two Loud Speakers SUBWOOFER BUILT-IN



Image: Diagram showing the internal dual speakers and subwoofer for enhanced sound.



Image: The speaker highlighting its 24-hour playtime capability.

IPX5 CERTIFIED

RAINPROOF AND SPLASHPROOF



Image: The speaker demonstrating its IPX5 rainproof and splashproof certification.

TRUE 360° SOUND



Image: The speaker providing true 360-degree sound in a social setting.

Bluetooth 5.0

It can connect normally under difficult conditions
and the signal is not disturbed.



Image: The speaker maintaining a stable Bluetooth 5.0 connection in challenging conditions.

Portable & Stylish



Image: A hand holding the speaker, emphasizing its portable and stylish design.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status and turn off once fully charged.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (**M** button on some models) for approximately 3 seconds until you hear an audible prompt and the indicator light flashes.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds until you hear an audible prompt and the indicator light turns off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode (indicator light will flash rapidly).

2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "MusiBaby M71" from the list of devices.
4. Once connected, you will hear a confirmation sound, and the indicator light will remain solid.

4. Dual Pairing (True Wireless Stereo - TWS)

To achieve a true stereo sound experience, you can pair two MusiBaby M71 speakers together:

1. Ensure both M71 speakers are powered off.
2. Power on both speakers. They will automatically attempt to connect to each other.
3. Once successfully paired with each other, you will hear a confirmation sound. One speaker will act as the master (left channel) and the other as the slave (right channel).
4. Now, connect your device to the master speaker via Bluetooth as described in step 3.

5. Auxiliary (AUX) Connection

For devices without Bluetooth, use the provided 3.5mm audio cable:

1. Connect one end of the 3.5mm audio cable to the AUX-in port on the speaker.
2. Connect the other end to the audio output jack of your device.
3. The speaker will automatically switch to AUX mode.

OPERATING INSTRUCTIONS

Button Functions

Button	Function (Short Press)	Function (Long Press)
M (Mode/Power)	Switch between Bluetooth/AUX/FM modes (if applicable). Answer/End Call.	Power On/Off. Reject Call.
- (Volume Down)	Decrease Volume.	Previous Track.
+ (Volume Up)	Increase Volume.	Next Track.
▶ (Play/Pause)	Play/Pause Music.	Activate Voice Assistant (if supported by device).

Call Handling

When connected via Bluetooth, the speaker's built-in microphone allows for hands-free calling:

- **Answer Call:** Short press the **M** button.
- **End Call:** Short press the **M** button during a call.
- **Reject Call:** Long press the **M** button when a call comes in.

MAINTENANCE

Water Resistance (IPX5)

The MusiBaby M71 speaker is IPX5 rated, meaning it is protected against low-pressure water jets from any direction. This makes it suitable for use in environments where it might encounter splashes or light rain. **However, it is not designed to be submerged in water. Do not drop the speaker directly into water.** Ensure the charging port cover is securely closed when exposed to

water.

Cleaning

To clean the speaker, use a soft, dry, or slightly damp cloth. Avoid using abrasive cleaners, solvents, or chemicals that could damage the surface or internal components.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery periodically to maintain its health.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	Ensure the speaker is fully charged. Press and hold the Power button for 3-5 seconds.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing indicator). Turn off and on Bluetooth on your device. Move speaker closer to your device. Forget previous pairings on your device and try again.
No sound or low volume.	Increase volume on both the speaker and your connected device. Ensure the speaker is not muted. Check AUX cable connection if using wired mode.
Sound distortion.	Reduce the volume on both the speaker and your device. Ensure the speaker is not too far from the Bluetooth source.
Dual pairing fails.	Ensure both speakers are M71 models. Power off both speakers, then power them on simultaneously and allow them to connect to each other before connecting to your device.

SPECIFICATIONS

Feature	Detail
Model Name	MusiBaby M71
Connectivity Technology	Bluetooth 5.0
Wireless Range	Up to 100 feet (30 meters)
Speaker Type	Portable Speaker
Audio Output Mode	Stereo
Speaker Maximum Output Power	8 Watts
Water Resistance Level	IPX5 (Rainproof & Splashproof)
Battery Life	Up to 24 Hours
Charging Port	Type-C
Product Dimensions	7.1"L x 2.4"W x 2.2"H (18cm x 6.1cm x 5.6cm)
Item Weight	0.43 Kilograms (15.1 ounces)
Input Voltage	3.7 Volts
Audio Driver Size	40 Millimeters
Compatible Devices	Smartphones, Laptops, Personal Computers, MP3 Players, TVs



Image: The MusiBaby M71 speaker with its dimensions clearly marked.

MusiBaby provides a 12-month hassle-free warranty for your purchase. Additionally, lifetime customer service is available, with 24-hour online support for any questions or concerns you may have. Please contact our customer service team if you encounter any issues or require assistance.

You can also use the Amazon shopping app to scan the Transparency barcode on the product's packaging to verify authenticity and learn more about your product.