

Vax CDCW-CSXS

Vax SpotWash Spot Cleaner User Manual

Model: CDCW-CSXS

1. INTRODUCTION

Thank you for choosing the Vax SpotWash Spot Cleaner. This portable and compact cleaning machine is engineered to provide powerful and efficient cleaning for unexpected spills and stains on various surfaces, including carpets, upholstery, and sealed hard floors. Its innovative design ensures ease of use and convenient storage, making it an essential tool for maintaining a clean home environment. Please read this manual thoroughly before first use to ensure safe and optimal operation of your appliance.



Figure 1.1: The Vax SpotWash Spot Cleaner, a compact and portable device designed for effective spot cleaning.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is for household use only.

- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

- Use only Vax cleaning solutions intended for use with this appliance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Always turn off this appliance before connecting or disconnecting hose.
- Store the appliance indoors in a cool, dry place.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main parts of your Vax SpotWash Spot Cleaner:

- **Main Unit:** Houses the motor, clean water tank, and dirty water tank.
- **Clean Water Tank:** For holding clean water and cleaning solution.
- **Dirty Water Tank:** Collects dirty water and debris during cleaning.
- **Hose:** Flexible hose connecting the main unit to the cleaning attachments.
- **Multi-purpose Attachment:** Ideal for cleaning carpets, rugs, sofas, and upholstery.
- **Hard Floor Scrub Attachment:** Designed for cleaning tiles and sealed wooden floors.
- **250ml Spot Washer Solution:** Initial cleaning solution provided.

Multi-purpose attachment for
carpets, upholstery and more



Figure 3.1: The Multi-purpose Attachment, suitable for carpets and upholstery.

Hard Floor Scrub attachment



Figure 3.2: The Hard Floor Scrub Attachment, designed for hard surfaces.

4. SETUP

1. **Unpack the Unit:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Fill the Clean Water Tank:**
 - Remove the clean water tank from the main unit.
 - Unscrew the cap and fill the tank with warm tap water up to the 'MAX FILL' line.
 - Add the recommended amount of Vax cleaning solution as per the solution bottle instructions.
 - Securely replace the cap and reinsert the tank into the main unit until it clicks into place.

Removable water tanks make it easier to fill, empty and clean your water tanks



Figure 4.1: Removing the clean water tank for filling.

3. **Attach the Desired Cleaning Tool:** Connect either the Multi-purpose Attachment or the Hard Floor Scrub Attachment to the end of the hose, ensuring it is securely fastened.
4. **Plug In:** Plug the power cord into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

Follow these steps for effective spot cleaning:

1. **Pre-treat (Optional):** For tough stains, pre-treat the area with a suitable spot cleaning solution according to the solution manufacturer's instructions.
2. **Power On:** Turn on the Vax SpotWash by pressing the power button.
3. **Spray and Scrub:**
 - Hold the cleaning attachment over the stained area.
 - Press the trigger on the attachment to spray cleaning solution onto the stain.
 - Gently scrub the stain with the brush on the attachment.

Effectively removes spills and stains



Figure 5.1: Effectively removing spills and stains from carpet.

4. **Suction:** Release the trigger and slowly pull the attachment over the treated area to suction up the dirty water. Repeat this step until the water being extracted appears clean.
5. **Drying:** Allow the cleaned area to air dry completely. Avoid walking on or using the area until it is dry.

Sprays, scrubs and removes everyday marks and mess from around your home



Figure 5.2: The Vax SpotWash sprays, scrubs, and removes everyday marks and mess from various surfaces around your home.

Portable and compact design



Figure 5.3: The portable and compact design allows for easy cleaning of car interiors.

Long reach hose allows you to easily clean further



Figure 5.4: The long reach hose allows you to easily clean further, including stairs.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your SpotWash cleaner.

6.1 After Each Use

1. Empty and Rinse Dirty Water Tank:

- Remove the dirty water tank from the main unit.
- Carefully empty the contents into a sink or toilet.
- Rinse the tank thoroughly with clean water to remove any debris or residue.
- Allow the tank to air dry before reassembling.

Easy empty dirty water tank enables you to empty and rinse away any remaining dirt or debris



Figure 6.1: Easy emptying of the dirty water tank.

2. **Rinse Clean Water Tank:** If any solution remains, empty and rinse the clean water tank.
3. **Self-Clean Function:** The Vax SpotWash features a self-clean function to flush dirt and debris from the hose. Follow the instructions in your quick start guide or on the unit for this process.

Self clean function helps to remove dirt & debris from the hose

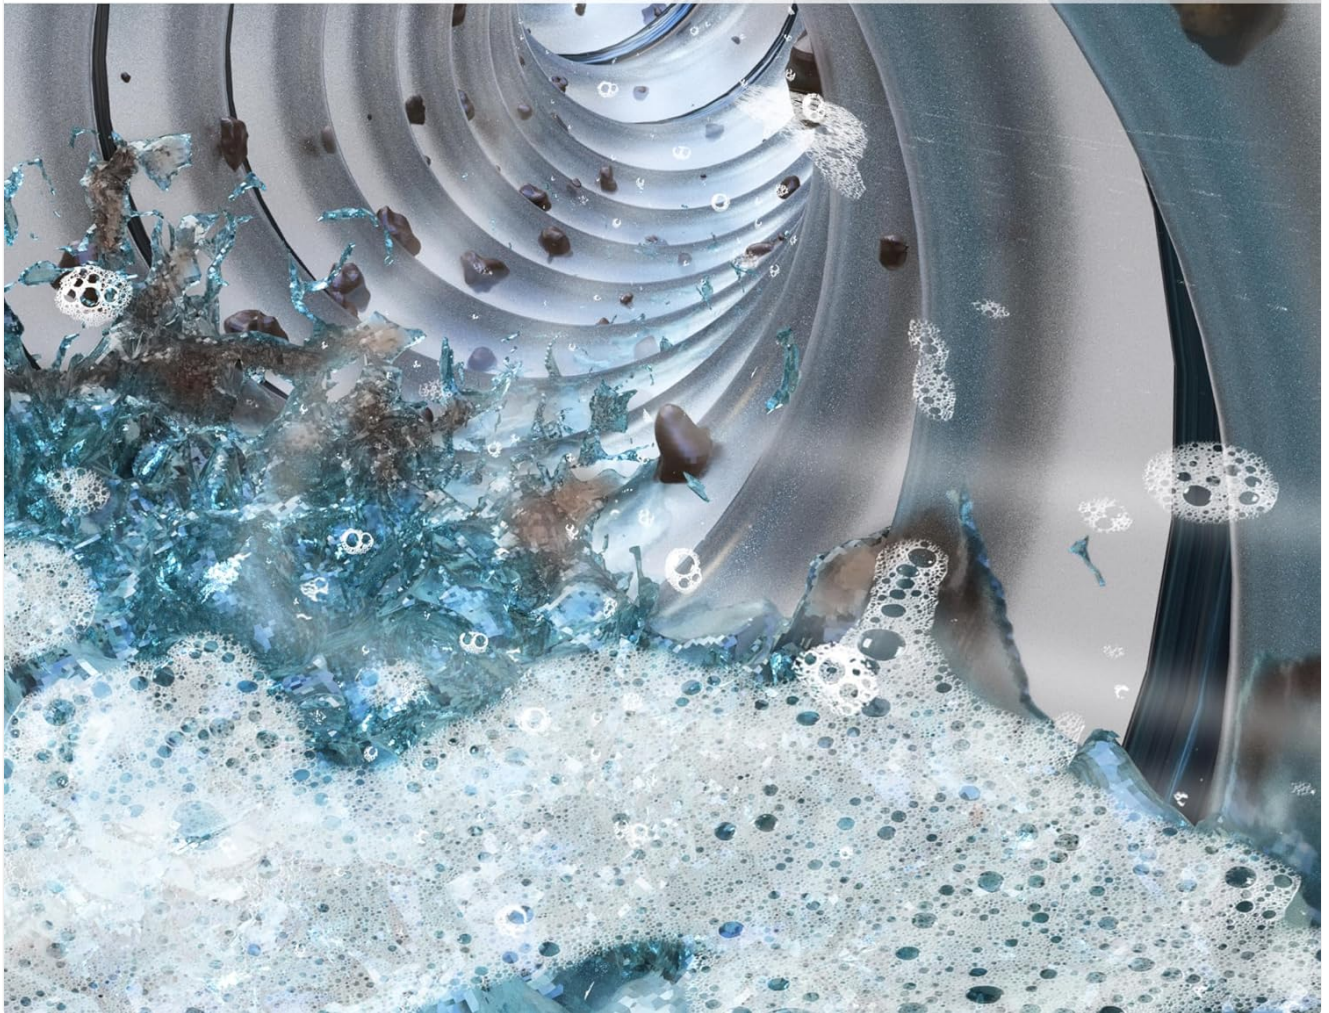


Figure 6.2: The self-clean function helps to remove dirt and debris from the hose.

4. **Clean Attachments:** Rinse the cleaning attachments under running water. Remove any hair or debris from the brushes.
5. **Wipe Down Unit:** Wipe the exterior of the main unit with a damp cloth.

6.2 Storage

Ensure the unit and all tanks are completely dry before storing. Store the Vax SpotWash in a cool, dry place, away from direct sunlight and extreme temperatures.

Slim, compact design for convenient storage



Figure 6.3: Slim, compact design for convenient storage.

7. TROUBLESHOOTING

If you encounter issues with your Vax SpotWash, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
No power	Unit not plugged in; power outlet not working; power button not pressed.	Ensure unit is securely plugged in; check power outlet with another appliance; press the power button firmly.
No spray	Clean water tank empty; tank not seated correctly; spray nozzle clogged; pump not primed.	Refill clean water tank; ensure tank is securely in place; clean spray nozzle; hold hose lower than unit and press trigger to prime pump.

Problem	Possible Cause	Solution
Poor suction	Dirty water tank full; tank not seated correctly; hose or nozzle clogged; dirty water tank lid not sealed.	Empty dirty water tank; ensure tank is securely in place; clear any blockages from hose/nozzle; ensure dirty tank lid is properly sealed.
Leaking	Tanks not seated correctly; tank caps not secure; hose connection loose.	Ensure both clean and dirty water tanks are properly seated; tighten tank caps; check hose connection for tightness.

8. SPECIFICATIONS






Feature	Detail
Model Number	CDCW-CSXS
Brand	Vax
Product Dimensions	35.8 x 24.1 x 38.3 cm
Item Weight	3.89 Kilograms
Item Volume (Clean Water Tank)	1.6 Litres
Form Factor	Upright
Batteries Required	No
Included Components	250ml Spot Washer Solution, Hard Floor Scrub Attachment, Multi-purpose Attachment
Colour	Red and Grey

9. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the documentation included with your product packaging or visit the official Vax website. The warranty period and terms may vary by region and product. Keep your proof of purchase for warranty claims.

For technical assistance, spare parts, or to register your product, please visit the Vax support page or contact their customer service directly. Contact details are typically available on the manufacturer's website.

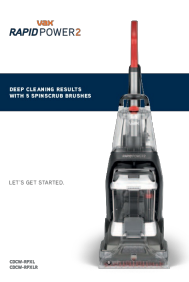

 <p>VAX SpotWash Home Series Spot Washer</p> <p>USER GUIDE</p>	<p>VAX SpotWash Home Series User Guide - CDSW-MPXP, CDSW-MPXA</p> <p>Comprehensive user guide for the VAX SpotWash Home Series (models CDSW-MPXP, CDSW-MPXA). Includes safety instructions, setup, operation, cleaning, maintenance, and troubleshooting tips for effective spot cleaning.</p>
 <p>VAX PLATINUM POWERMAX PET-DESIGN</p> <p>PROVEN TO CLEAN BETTER THAN THE LEADING RENTALS</p> <p>LET'S GET STARTED</p> <p>CDSW-MPXP</p>	<p>Vax Platinum Power Max Pet-Design Carpet Washer User Guide</p> <p>Comprehensive user guide for the Vax Platinum Power Max Pet-Design carpet washer, covering safety, assembly, operation, maintenance, and troubleshooting.</p>
 <p>VAX RAPIDPOWER2</p> <p>DEEP CLEANING RESULTS WITH 5 SPINSCRUB BRUSHES</p> <p>LET'S GET STARTED</p> <p>CDSW-MPXL CDSW-MPXL</p>	<p>Vax Rapid Power 2 Carpet Cleaner User Manual and Guide</p> <p>Comprehensive user manual for the Vax Rapid Power 2 carpet cleaner, covering safety precautions, operation, maintenance, troubleshooting, and accessories. Learn how to effectively clean carpets with its 5 SpinScrub brushes.</p>
 <p>VAX COMPACT POWER</p> <p>SMALL, COMPACT AND LIGHT</p> <p>LET'S GET STARTED</p> <p>CDSW-MPXL CDSW-MPXL</p>	<p>Vax Compact Power Carpet Cleaner User Guide</p> <p>A comprehensive guide to using, maintaining, and troubleshooting your Vax Compact Power carpet cleaner, including safety precautions and warranty information.</p>
 <p>VAX DualPower PET ADVANCE</p> <p>REPRODUCES CARPETS AND IS PERFECT FOR HEAVY DUTY PET</p> <p>LET'S GET STARTED</p> <p>BCD200P</p>	<p>Vax Dual Power Pet Advance Carpet Cleaner User Guide and Operating Instructions</p> <p>This user guide provides comprehensive instructions for operating, maintaining, and troubleshooting the Vax Dual Power Pet Advance carpet cleaner. It includes safety precautions, assembly steps, usage tips for the carpet washer, pre-treatment wand, and wash tool, as well as information on accessories and support.</p>

vax

VAX SpotWash
Home Series
Spot Cleaner



User Guide CDSW-MPXP CDSW-MPXA CDSW-MPDP CDSW-MPDC

[VAX SpotWash Home Series Spot Cleaner User Guide - Operation, Safety, Maintenance](#)

Official user guide for the VAX SpotWash Home Series Spot Cleaner (models CDSW-MPXP, CDSW-MPXA, CDSW-MPDP, CDSW-MPDC). Learn about safe operation, cleaning tips, maintenance, troubleshooting, and guarantee information.