

Eureka NEN110B

Eureka Whirlwind NEN110B Bagless Canister Vacuum Cleaner User Manual

Model: NEN110B

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** To reduce the risk of electric shock, do not use outdoors or on wet surfaces. Always unplug the vacuum cleaner from the electrical outlet before servicing or cleaning. Do not handle the plug or appliance with wet hands.
- **General Use:** Do not leave the vacuum cleaner unattended when plugged in. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- **Maintenance Warning:** When using the vacuum cleaner, the floor brush may become clogged by hairs and dirt. We recommend cleaning the roller brush and the belt every 2 weeks. Long-term failure to clean may cause malfunction, or even risk of smoke and belt breakage.
- **Damage Prevention:** Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- **Filter Care:** Ensure all filters are properly installed before operation.

PRODUCT OVERVIEW

The Eureka Whirlwind NEN110B is a lightweight, bagless canister vacuum cleaner designed for multi-surface cleaning. It features powerful suction, a washable filter, and an automatic cord rewind function.

Components Included:

- Vacuum Cleaner Unit
- Floor Brush
- Telescoping Metal Wand
- Hose
- Filter (pre-installed and an extra replacement)
- 2-in-1 Crevice Tool/Dusting Brush (integrated into hose handle)




Image: Eureka Whirlwind NEN110B Canister Vacuum Cleaner with its main components, including the vacuum body, hose, wand, floor brush, and a separate filter.

ASSEMBLY INSTRUCTIONS

1. **Connect the Hose:** Insert the hose end into the suction inlet on the main vacuum unit until it clicks securely

into place.

 2. **Attach the Telescoping Wand:** Connect the other end of the hose to the telescoping metal wand. Ensure a firm connection.
3. **Attach the Floor Brush:** Securely attach the floor brush to the end of the telescoping wand.
4. **Integrated Crevice Tool:** The 2-in-1 crevice tool and dusting brush is integrated into the hose handle. To use, simply disconnect the handle from the hose and slide the desired tool into position.

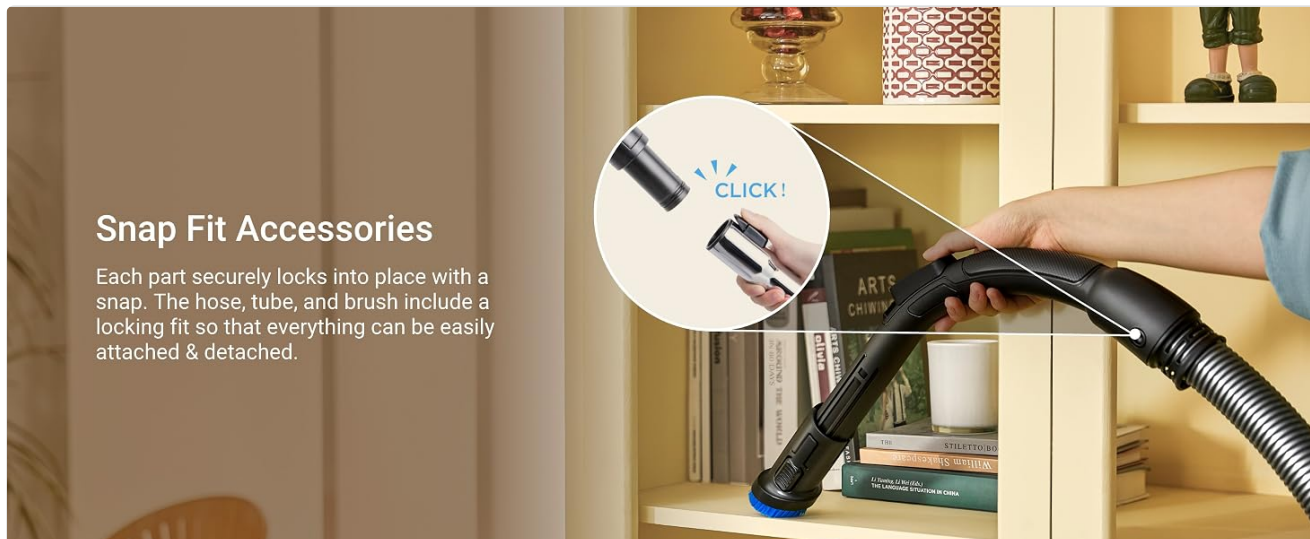

Snap Fit Accessories

Each part securely locks into place with a snap. The hose, tube, and brush include a locking fit so that everything can be easily attached & detached.

Image: Illustration demonstrating the snap-fit mechanism for connecting the hose, wand, and accessories, ensuring a secure attachment.

OPERATING INSTRUCTIONS

Powering On and Off

Plug the power cord into a suitable electrical outlet. Press the power button located on the main unit to turn the vacuum cleaner on or off.



Quick Dust Release

Simply press the release button
and watch the dust
fall right out.

Image: Close-up of the vacuum cleaner's automatic cord rewind button, indicating its function for convenient storage.

Automatic Cord Rewind

To retract the power cord, gently press the cord rewind pedal located on the main unit. The cord will automatically retract into the vacuum.

Multi-Surface Cleaning and Suction Control

The vacuum features an integrated airflow control on the handle, allowing you to easily switch between different surfaces. This provides maximum suction power for carpets and gentle cleaning for hard floors.

- **For Carpets:** Adjust the control for higher suction.
- **For Hard Floors/Delicate Surfaces:** Adjust the control for reduced suction.
- **For Upholstery:** Use the appropriate setting for gentle cleaning.

Multi-surface Suction

Effortlessly transition between surfaces with the press of a switch.



Carpet




Hard Floor



Image: The vacuum cleaner's floor head positioned on a carpet, with an icon indicating its suitability for both carpet and hard floor surfaces.

Multi-Surface Suction Control

Easily adjust the suction at your fingertips for the best cleaning performance on every surface type.

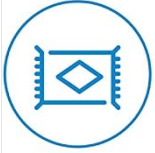

Carpet



Upholstery



Hard Floor



Image: Close-up of the vacuum's handle showing the multi-surface suction control, with icons for carpet, upholstery, and hard floor settings.

MAINTENANCE

Emptying the Dust Cup

The 2.5-liter dust cup should be emptied regularly to maintain optimal suction performance.

1. Ensure the vacuum is unplugged.
2. Press the one-button release to detach the dust cup from the main unit.
3. Position the dust cup over a trash receptacle and open the bottom flap to release collected debris.
4. Close the flap and reattach the dust cup to the vacuum unit until it clicks securely.



8 Lbs



Lightweight Design

Easy to carry throughout
your whole home.

Image: A person demonstrating the quick dust release feature, holding the dust cup over a trash bin as debris falls out.

Cleaning the Filters

The vacuum uses washable filters. Rinse the filters as needed to ensure consistent performance.

1. Unplug the vacuum cleaner.
2. Remove the dust cup and locate the filters.
3. Gently tap off any loose dirt.
4. Rinse the filters under cool running water until the water runs clear.
5. Allow the filters to air dry completely for at least 24 hours before reinserting them into the vacuum. Do not use a dryer or other heating methods.

Cyclone Filtration System

With the cyclone filtration system of this Eureka vacuum, you will enjoy high performance of air filtration.

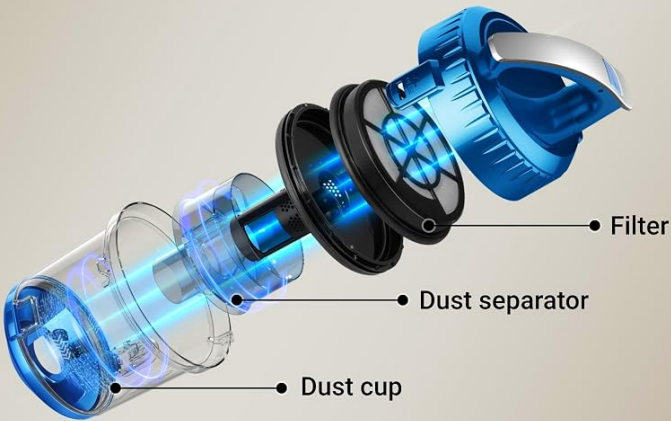 


Image: A two-panel image illustrating the process of rinsing both the vacuum filter and the dust cup under running water for cleaning.

Cleaning the Floor Brush

Regularly inspect the floor brush for tangled hair or debris. Clean as needed to prevent clogging and maintain effective cleaning.

TROUBLESHOOTING

If you encounter issues with your Eureka Whirlwind NEN110B, please refer to the following common solutions:

Problem	Possible Cause	Solution
No Power	Not plugged in; power outlet issue; tripped circuit breaker.	Ensure plug is fully inserted. Check power outlet with another appliance. Reset circuit breaker if necessary.
Loss of Suction	Full dust cup; clogged filter; hose or attachment blockage.	Empty dust cup. Clean or replace filters. Check hose and attachments for obstructions.
Unusual Noise	Blockage in hose/brush; foreign object in fan.	Turn off and unplug. Inspect hose, wand, and brush for blockages. Remove any foreign objects.
Floor Brush Not Rotating (if applicable)	Tangled debris; worn belt.	Clean hair and debris from brush roll. Inspect belt for damage.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Eureka
Model Name	Bagless Canister Vacuum Cleaner
Model Number	NEN110B
Special Features	Automatic Cord Rewind, Bagless, Lightweight, Washable Filter
Filter Type	Foam
Included Components	Brush, Canister, Crevice Tool
Cordless?	No (Wired)
Capacity	2.5 Liters
Wattage	960 watts
Hose Length	1.3 Feet
Recommended Uses	Bare Floor, Hardwood, Tile Floor, Carpet
Form Factor	Canister
Color	Blue
Product Dimensions	14"L x 12.1"W x 21.46"H
Noise Level	82 dB
Amperage	8 Amps
Item Weight	8.15 pounds
Controller Type	Push Button
Motor Horsepower	1.28 horsepower
Control Method	Touch
Connectivity Technology	Wired (Power Cord)
Cleaning Path Width	10 Inches
Portable	Yes
Indoor/Outdoor Usage	Indoor

WARRANTY AND CUSTOMER SUPPORT

Warranty Information

This Eureka product comes with a one-year limited warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, assistance, or warranty inquiries, please contact our customer service team:

- **Phone:** 1-800-282-2886
- **Online:** Visit the official Eureka website for support resources and contact options.

© 2025 Eureka. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question