
[Manuals.plus](#) /

› [Bosch](#) /

› Bosch Truemixx Radiance Mixer Grinder MGM4334RIN User Manual

Bosch MGM4334RIN

Bosch Truemixx Radiance Mixer Grinder MGM4334RIN User Manual

Model: MGM4334RIN

INTRODUCTION

Thank you for choosing the Bosch Truemixx Radiance Mixer Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and care of your appliance. Please read these instructions carefully before first use and keep them for future reference.



Image: The Bosch Truemixx Radiance Mixer Grinder main unit with its three accompanying stainless steel jars (wet grinding, dry grinding, and chutney) and accessories.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is switched off and unplugged from the power outlet before assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the jar during operation to prevent injury and damage to the appliance.
- Ensure the jar lid is securely locked in place before operating the mixer grinder.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- The appliance features an Overload Protector for safe operations. If the motor stops due to overload, switch off the appliance, unplug it, and allow it to cool down before restarting.

PRODUCT COMPONENTS

The Bosch Truemixx Radiance Mixer Grinder comes with the following components:

- Main Motor Unit (600 Watt)
- 1 x Wet Grinding Jar (1500 ml capacity)

- 1 x Dry Grinding Jar (1000 ml capacity)
- 1 x Chutney Grinding Jar (400 ml capacity)
- Pounding Blade
- Spatula



Image: All components of the Bosch Truemixx Radiance Mixer Grinder, including the motor unit, three jars with lids, a spatula, and a pounding blade, displayed separately.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Cleaning:** Before first use, wash all jars, lids, and blades with warm soapy water. Rinse thoroughly and dry. Wipe the main motor unit with a damp cloth.

3. **Placement:** Place the mixer grinder on a stable, flat, and dry surface. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Ensure the power switch is in the "Off" position before plugging the appliance into a 220-240V AC power outlet.



Image: The main motor unit of the Bosch Truemixx Radiance Mixer Grinder, showcasing its compact design and control knob.

OPERATING INSTRUCTIONS

This mixer grinder is designed for various tasks including wet grinding, dry grinding, chutney making, blending, and pounding.

General Operation

1. Select the appropriate jar and blade for your task.
2. Place the ingredients into the jar. Do not overfill.
3. Secure the lid onto the jar. Ensure it is properly locked.
4. Place the jar onto the motor unit and twist clockwise until it locks securely. The appliance features a safety lock mechanism.
5. Plug in the appliance.
6. Turn the control knob to the desired speed setting (1, 2, or 3) or use the "Pulse" function for short bursts.
7. After use, turn the knob to "Off" and unplug the appliance.
8. Wait for the blades to stop completely before removing the jar.

Using the Pounding Blade

The unique Pounding Blade replicates traditional dry grinding, providing an authentic taste for spices.



Image: A close-up view of the specialized Pounding Blade, designed to mimic traditional grinding methods for spices, shown next to a bowl of ground spices and dried chilies.

Using the Dry Grinding Blade

Ideal for grinding dry ingredients like spices, grains, and nuts.



Dry Grinding Blade

Image: A close-up view of the Dry Grinding Blade, suitable for processing dry ingredients, displayed alongside turmeric powder and whole turmeric roots.

Using the Chutney Blade

Perfect for preparing small quantities of chutneys and pastes.



Chutney Blade (Fix in Jar)

Image: A close-up view of the Chutney Blade, designed for fine grinding of small quantities, shown next to a bowl of chutney ingredients.



BOSCH
Invented for life

Know Your TrueMixx Mixer Grinder

LESS THAN 750W

MORE THAN 750W

CHOOSE
< 750
WATTS FOR
REGULAR
GRINDING



Dips & Chutneys



Purees & Soups



Smoothies
& Milkshakes



CHOOSE
> 750
WATTS FOR
TOUGH
GRINDING



Dry Masala



Ginger, Coconut
& Turmeric Paste



Rice & Lentils
Dosa/Idli Batter



BURNING SMELL DURING FIRST
few runs due to evaporating varnish



80-90dB OPERATING NOISE
levels similar to that of a hair dryer

DECIBEL LEVEL COMPARISON CHART



*Mixer grinder model for representative purpose only.

Image: An illustrative guide showing recommended uses for mixer grinders based on wattage, including examples like dips, chutneys, purees, smoothies, ginger/coconut/turmeric paste, dry masala, and dosa/idli batter. It also provides information on typical operating noise levels.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your mixer grinder.

1. **Before Cleaning:** Always switch off the appliance and unplug it from the power outlet.
2. **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse it in water.
3. **Jars and Lids:** Wash jars, lids, and blades immediately after use with warm soapy water. Use a brush for hard-to-reach areas. Rinse thoroughly and dry completely before storing.
4. **Blades:** Handle blades with extreme care as they are sharp.
5. **Storage:** Store the mixer grinder and its accessories in a clean, dry place.



Concealed Bush

Image: A cutaway diagram illustrating the concealed bush mechanism within the mixer grinder, designed to prevent contamination during mixing and grinding.

TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not start.	Not plugged in, power switch off, jar not locked, or overload protector activated.	Check power connection, ensure switch is on, lock jar securely. If overload protector is tripped, switch off, unplug, wait 2-3 minutes, then restart.

Problem	Possible Cause	Solution
Motor stops during operation.	Overload due to too many ingredients or thick consistency.	Switch off, unplug, remove some ingredients, add liquid if necessary, wait for motor to cool, then restart.
Leakage from jar.	Lid not properly secured, rubber gasket missing or damaged, or jar overfilled.	Ensure lid is tightly closed. Check and properly seat the rubber gasket. Do not overfill the jar beyond the maximum fill line.
Burning smell during initial use.	Normal for new motors due to evaporating varnish.	This is normal for the first few uses. Ensure good ventilation. If the smell persists after several uses, contact customer service.

SPECIFICATIONS

Brand	Bosch
Model Number	MGM4334RIN
Power	600 Watts
Operating Voltage	220 - 240 Volts
Number of Speeds	3 + Pulse
Wet Grinding Jar Capacity	1500 ml
Dry Grinding Jar Capacity	1000 ml
Chutney Grinding Jar Capacity	400 ml
Material	Plastic (body), Stainless Steel (jars, blades)
Product Dimensions (D x W x H)	28D x 55W x 21H Centimeters
Item Weight	6100 Grams
Special Features	Safety Lock, Overload Protector, Concealed Bush

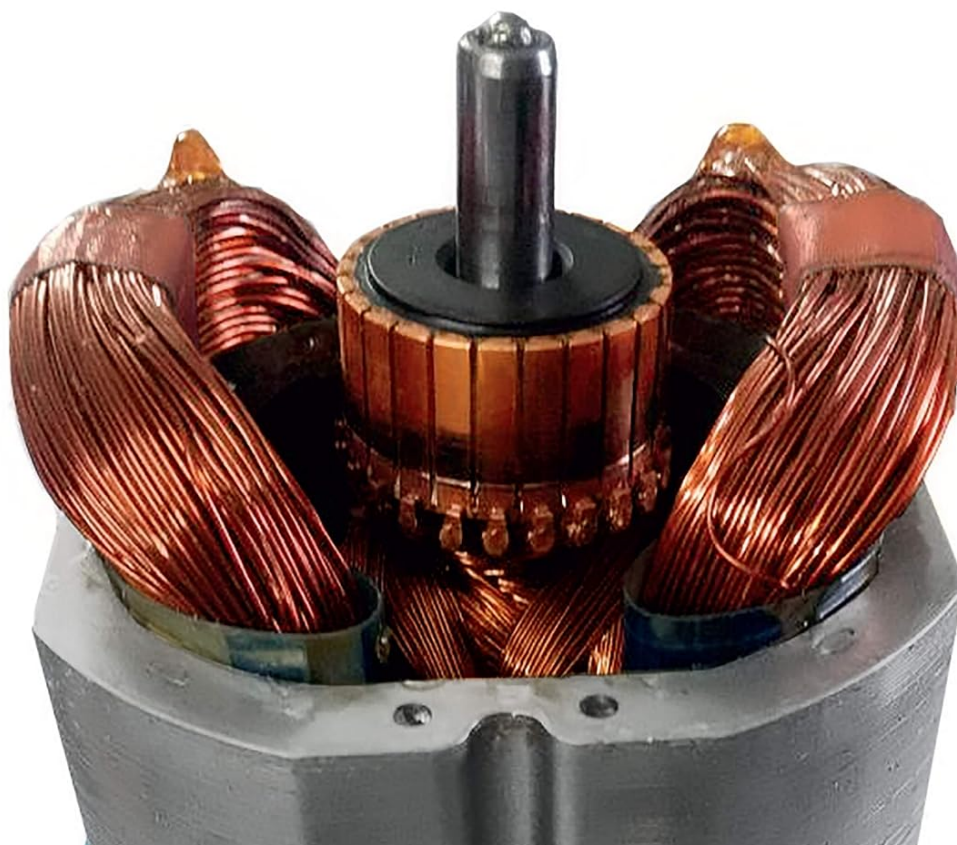


Image: A detailed view of the copper-wound motor assembly inside the Bosch Mixer Grinder, highlighting its robust construction.

WARRANTY AND SUPPORT

Your Bosch Truemixx Radiance Mixer Grinder MGM4334RIN comes with a **2-year warranty on the product** from the date of purchase.

For warranty claims, service, or technical support, please contact Bosch Customer Service:

Customer Service Number: 1800 266 1880

Manufacturer: BSH Household Appliances Manufacturing Pvt Ltd

Please retain your purchase receipt as proof of purchase for warranty purposes.

