

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Vinsetto](#) /

› [Vinsetto 7-Point Vibrating Massage Office Chair \(Model 921-342V81WT\) User Manual](#)

Vinsetto 921-342V81WT

Vinsetto 7-Point Vibrating Massage Office Chair (Model 921-342V81WT) User Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Vinsetto 7-Point Vibrating Massage Office Chair, Model 921-342V81WT. Please read this manual thoroughly before use to ensure safe and efficient operation of your chair.



Image: The Vinsetto 7-Point Vibrating Massage Office Chair in white, positioned in an office setting.

SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight recommendation of 265 pounds.
- Keep hands and feet clear of moving parts during adjustment.
- Use only on stable, level surfaces.
- Keep electrical cords away from water and heat sources.
- Unplug the chair from the power source when not in use or before cleaning.
- This product is intended for indoor use only.

PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer

service.

- Backrest
- Seat Cushion with Footrest mechanism
- Armrests (2)
- Gas Lift Cylinder
- Star Base
- Casters (5)
- Massage Remote Control
- Hardware Pack (screws, washers, Allen wrench)
- User Manual

ASSEMBLY INSTRUCTIONS

Assembly is required. Please follow the included assembly instructions carefully. A general overview of the steps is provided below:

1. **Attach Casters to Base:** Insert the five casters into the holes at the end of each leg of the star base until they click into place.
2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the star base.
3. **Attach Mechanism to Seat:** Secure the seat plate mechanism to the underside of the seat cushion using the provided screws. Ensure the front of the mechanism faces the front of the seat.
4. **Attach Armrests:** Fasten the armrests to both the seat cushion and the backrest using the designated screws. Do not overtighten until all screws are in place.
5. **Connect Seat to Gas Lift:** Carefully place the assembled seat and backrest onto the gas lift cylinder, ensuring it is centered and stable.
6. **Attach Footrest:** Slide the retractable footrest into its designated slots under the seat.
7. **Connect Massage Unit:** Plug the massage unit's power cord into a suitable power outlet. Store the remote in the side pocket.

OPERATING INSTRUCTIONS

1. Massage Function

Your chair is equipped with a 7-point vibrating massage system designed to relax your back and upper legs. Use the wired remote control to operate the massage functions.

- **Power:** Press the 'POWER' button to turn the massage function on/off.
- **Intensity:** Select 'HIGH' or 'LOW' for vibration intensity.
- **Modes:** Choose from 5 massage modes: Pulse, Press, Wave, Auto, and Normal. Press the 'MODE' button to cycle through these options.
- **Massage Points:** Individual buttons allow you to target specific areas: Neck, Back, Lumbar, and Thigh.
- **Timer:** Set the massage duration for 15, 30, or 60 minutes. The unit will automatically shut off after the selected time.

VIBRATION MASSAGE



Image: Visual representation of the 7 vibration points within the chair and the remote control interface for selecting modes and intensity.

Your browser does not support the video tag.

Video: Demonstration of the Vinsetto Point Vibrating Massage Office Chair's features, including the massage function and remote control operation.

2. Reclining Function

The chair features a reclining backrest, allowing you to adjust the angle up to 155 degrees for various activities such as working, watching, or relaxing.

- To recline, pull the lever located on the right side of the chair upwards and lean back to your desired angle.
- Release the lever to lock the backrest in position.
- To return to an upright position, pull the lever upwards and lean forward.

RECLINING FUNCTION

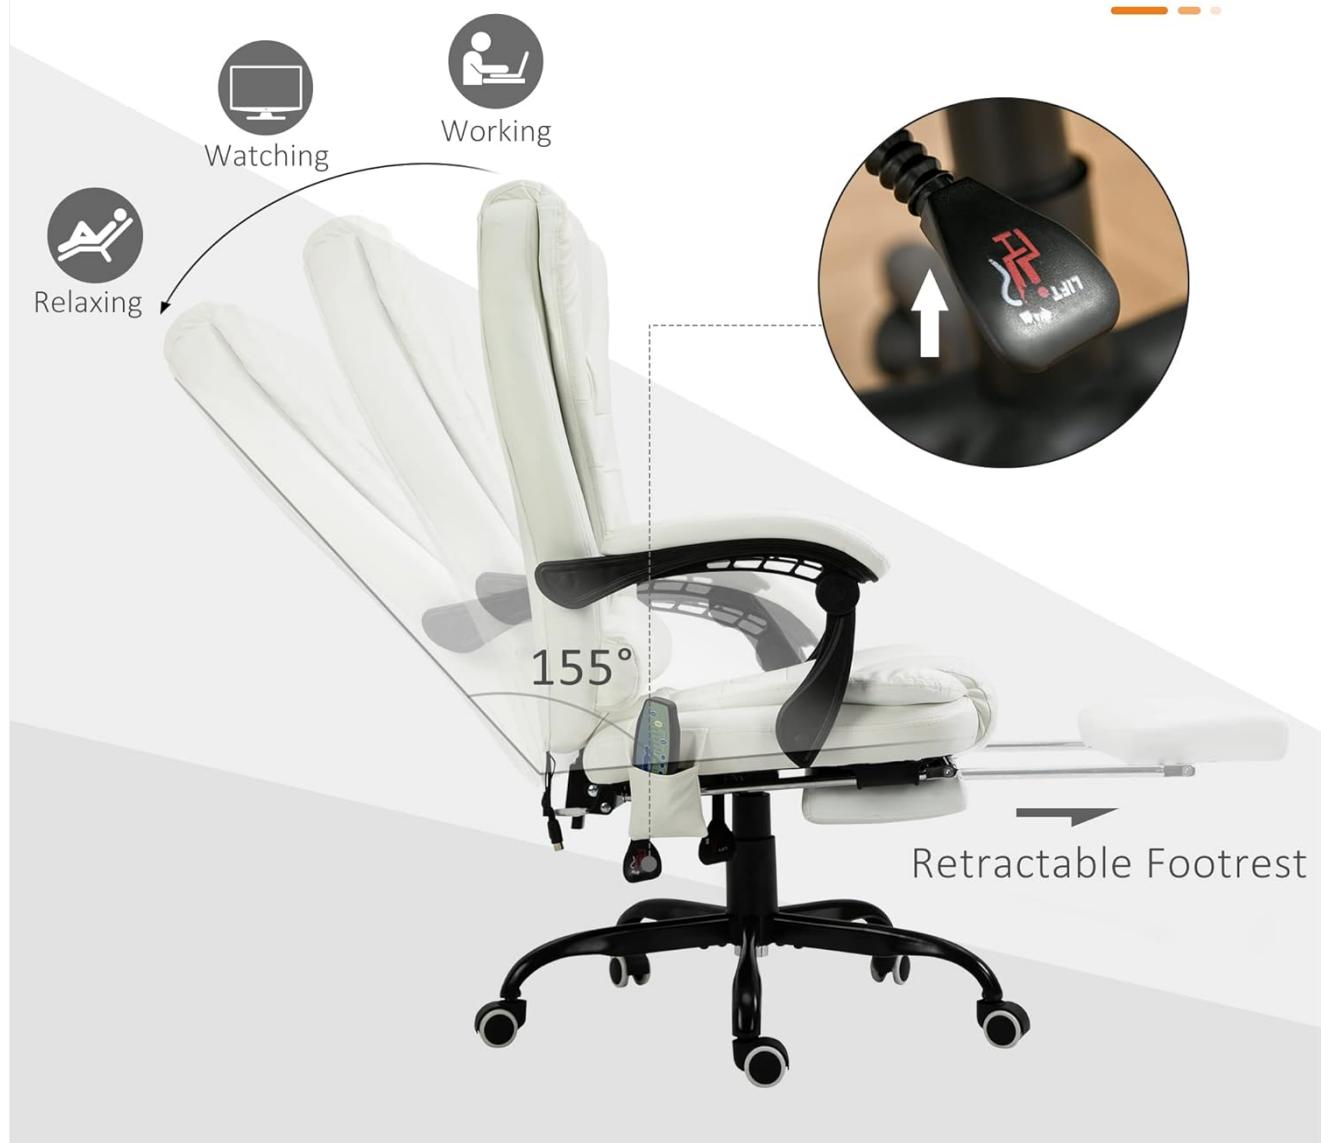


Image: Illustration demonstrating the chair's reclining capability up to 155 degrees, with a detail of the recline adjustment lever.

3. Adjustable Height

Adjust the chair's height to match your desk and sitting preference.

- To raise the chair, lift the lever on the right side (under the seat) while taking your weight off the seat.
- To lower the chair, lift the same lever while remaining seated.

HEIGHT ADJUSTABLE

Match your desk sitting style



Lift up and down to adjust height

Image: Visual guide for adjusting the chair's height, showing the lever and the adjustable range.

4. Retractable Footrest

The integrated footrest provides additional comfort, especially when reclining.

- To extend the footrest, pull it outwards from under the seat.
- To retract, push it back under the seat until it is fully stored.

MAINTENANCE AND CARE

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the faux leather.
- **Inspection:** Periodically check all screws and bolts to ensure they are tight. Retighten if necessary.
- **Casters:** Keep casters free of debris to ensure smooth mobility.
- **Storage:** Store the massage remote control in the designated side pocket when not in use to prevent damage or loss.



- Side Pocket



- Remote Control



- Full Swivel Caster



- Durable PU leather

Image: Detailed views of key chair features: the remote control, its storage pocket, the full swivel casters, and the texture of the durable PU leather upholstery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not adjust height.	Gas lift cylinder malfunction or lever not engaged correctly.	Ensure the height adjustment lever is fully engaged. If the issue persists, the gas lift may need replacement.
Massage function not working.	Power cord unplugged, remote control malfunction, or power button not pressed.	Check if the power cord is securely plugged into an outlet. Ensure the 'POWER' button on the remote is pressed. Verify the remote is not damaged.

Problem	Possible Cause	Solution
Chair feels unstable or wobbly.	Loose screws or improper assembly.	Check and tighten all assembly screws, especially those connecting the armrests to the seat and backrest, and the seat plate to the gas lift. Ensure casters are fully inserted.
Footrest is difficult to extend/retract or feels flimsy.	Mechanism obstruction or damage.	Ensure no objects are obstructing the footrest mechanism. Inspect for any visible damage to the sliding rails.

SPECIFICATIONS

- **Model Name:** Massage Office Chair
- **Model Number:** 921-342V81WT
- **Brand:** Vinsetto
- **Color:** White
- **Material:** Faux Leather, Foam Fill
- **Product Dimensions (Overall):** 31.1"D x 26.5"W x 47.75"H
- **Adjustable Height Range:** 43.75" to 47.75"
- **Seat Height:** 18" - 22" (adjustable)
- **Seat Depth:** 20.75 inches
- **Seat Length:** 21.25 Inches
- **Backrest Width:** 20.25 Inches
- **Reclining Angle:** Up to 155 degrees
- **Maximum Weight Recommendation:** 265 Pounds
- **Item Weight:** 44 Pounds
- **Special Features:** 7-Point Vibrating Massage, Lumbar Support, Retractable Footrest, Adjustable Height, Reclining Back, Swivel Base, Padded Armrests.



Image: Technical drawing illustrating the key dimensions of the office chair, including height, width, and depth measurements.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or replacement parts, please contact Vinsetto customer service through their official website or the retailer where the product was purchased.