

LEGO 43179

LEGO Disney Mickey Mouse & Minnie Mouse Buildable Characters (43179) Instruction Manual

Model: 43179

INTRODUCTION

This instruction manual provides detailed guidance for assembling, maintaining, and displaying your LEGO Disney Mickey Mouse & Minnie Mouse Buildable Characters (Set 43179). This set allows you to construct large-scale, detailed figures of Mickey Mouse and Minnie Mouse, complete with various buildable accessories. Designed for adult builders, this set offers an engaging and rewarding construction experience.

The completed models are intended for display and feature dynamic poses, capturing the classic charm of these iconic Disney characters.



Image: The complete LEGO Disney Mickey Mouse and Minnie Mouse Buildable Characters set, including the product box and the two assembled figures with their accessories (camera, guitar, flowers, photo album).

SETUP AND ASSEMBLY

The LEGO Disney Mickey Mouse & Minnie Mouse Buildable Characters set (43179) contains 1,739 pieces. Assembly is recommended for individuals aged 18 years and up. Follow the included step-by-step building instructions provided in the physical manual within the box.

Unpacking

Carefully open the product packaging and sort the LEGO building elements. It is recommended to organize pieces by color or type to facilitate the building process.



Image: An overhead view of the LEGO building elements, including instruction manuals and partially assembled Mickey and Minnie figures, spread out on a table during the building process.

Building Process

The set is designed for a satisfying, hands-on build. Pay close attention to the instructions for proper piece placement, especially for the internal Technic structures that provide stability and allow for dynamic posing. The figures feature Mickey Mouse and Minnie Mouse in dynamic poses, with several buildable accessories including a guitar, vintage camera, tripod, and a photo album with photos of their adventures.



Image: A close-up of a person's hands carefully attaching a LEGO piece to the head of the Minnie Mouse figure, demonstrating the detailed assembly process.

Video Guide: Assembly Overview

Your browser does not support the video tag.

Video: An official overview of the LEGO Disney Mickey Mouse & Minnie Mouse (43179) set, showcasing the assembly process and key features of the finished models.

OPERATING AND DISPLAY

Once assembled, the Mickey Mouse and Minnie Mouse figures are designed for display. They can be posed dynamically to recreate iconic scenes or to suit your personal preference.

Posing the Figures

The figures incorporate articulation points that allow for various poses. Handle the figures gently when adjusting their positions to avoid dislodging pieces.



Image: The fully assembled LEGO Mickey Mouse and Minnie Mouse figures, along with their camera accessory, displayed on a shelf, showcasing their detailed design and display potential.

Displaying Accessories

The included accessories, such as the guitar, vintage camera with tripod, and photo album, can be placed with the figures to enhance your display. The photo album can be opened to reveal printed tiles depicting classic Mickey and Minnie moments.



Image: A front view of the assembled LEGO Mickey Mouse and Minnie Mouse figures, standing on their display bases, accompanied by their detailed accessories.

Video Guide: Minnie Mouse 360 View

Your browser does not support the video tag.

Video: A 360-degree preview of the LEGO Minnie Mouse buildable figure, highlighting its design and details from all angles.

MAINTENANCE

To ensure the longevity and appearance of your LEGO models, follow these maintenance guidelines:

- **Cleaning:** Dust regularly with a soft, dry cloth or a soft-bristled brush. For deeper cleaning, use a mild soap solution and a soft cloth, then rinse with clean water and air dry. Avoid harsh chemicals or abrasive materials.
- **Storage:** If disassembling for storage, keep all pieces in a sealed container away from direct sunlight and extreme temperatures to prevent discoloration or warping.
- **Handling:** Always handle the models by their base or sturdy sections to prevent accidental detachment of smaller pieces.

TROUBLESHOOTING

Should you encounter any issues during or after assembly, consider the following common solutions:

- **Missing Pieces:** If you find a piece missing, please refer to the official LEGO customer service website for replacement parts.

- **Loose Connections:** Ensure all pieces are firmly pressed together. Some connections, especially those involving Technic pins or clips, require a firm push.
- **Stability Issues:** Double-check the internal structure, particularly the Technic elements, as these are crucial for the figures' stability. Refer to the instruction manual for correct placement.
- **Discoloration:** Prolonged exposure to direct sunlight can cause LEGO bricks to discolor. Display your models in a location away from direct sunlight.

SPECIFICATIONS

Feature	Detail
Product Name	LEGO Disney Mickey Mouse & Minnie Mouse Buildable Characters
Model Number	43179 (Item model number: 6294176)
Brand	LEGO
Number of Pieces	1,739
Product Dimensions	22.91 x 14.88 x 4.65 inches
Item Weight	5.68 pounds
Recommended Age	18 years and up
Release Date	January 1, 2021
Contents	LEGO Building Elements

WARRANTY AND SUPPORT

For information regarding product warranty, missing parts, or general support, please visit the official LEGO Customer Service website. You can find detailed information and contact options there.

Official LEGO Website: www.lego.com/service

Please retain your proof of purchase for any warranty claims.