

## JBL JBLCLIP4

# JBL CLIP 4 Portable Bluetooth Speaker User Manual

Model: JBLCLIP4 | Brand: JBL

## INTRODUCTION

---

The JBL CLIP 4 is a portable and lightweight Bluetooth speaker designed for on-the-go music enjoyment. It features a modern design, compact size, and JBL Original Pro Sound with dynamic bass. With an integrated carabiner, it's ideal for attaching to your bag or belt, making it perfect for outdoor adventures. The CLIP 4 is also waterproof and dustproof (IP67 rated), ensuring durability in various environments.



Image: Front view of the JBL CLIP 4 Portable Bluetooth Speaker in black, showcasing its compact design and integrated carabiner.

## WHAT'S IN THE BOX

---

Please check that all items are present in the package:

- 1 x JBL CLIP 4 Portable Bluetooth Speaker
- 1 x USB Type-C Cable
- 1 x Quick Start Guide
- 1 x Safety Sheet



Image: The JBL CLIP 4 speaker in its retail packaging, indicating the included accessories.

## SETUP

### 1. Powering On/Off

- To power on the speaker, press the **Power button** located on the side.
- To power off the speaker, press and hold the **Power button** until the indicator light turns off.

### 2. Bluetooth Pairing

1. Ensure the speaker is powered on.
2. Press the **Bluetooth button** on the speaker. The LED indicator will flash, indicating it's in pairing mode.
3. On your mobile device (smartphone, tablet, etc.), go to the Bluetooth settings.

4. Select "JBL CLIP 4" from the list of available devices.
5. Once connected, the Bluetooth indicator light on the speaker will turn solid.



Image: Close-up of the JBL CLIP 4 showing the power and Bluetooth buttons on the side.

## OPERATING INSTRUCTIONS

---

### Volume Control

- Press the **+** button to increase volume.
- Press the **-** button to decrease volume.

### Music Playback

- Press the **Play/Pause button** (triangle icon) once to play or pause music.
- Press the **Play/Pause button** twice to skip to the next track.

### Using the Integrated Carabiner

The JBL CLIP 4 features a redesigned integrated carabiner. Open the carabiner by pressing the spring-loaded gate and attach it securely to your backpack, belt loop, or other suitable loops. Ensure it is firmly

closed before use.



## ULTRA-PORTABLE DESIGN AND INTEGRATED CARABINER

Image: A JBL CLIP 4 speaker in red, clipped to the strap of a beige backpack, demonstrating its portability.

## CHARGING

The JBL CLIP 4 is equipped with a built-in rechargeable lithium-ion polymer battery.

- Connect the supplied USB Type-C cable to the charging port on the speaker and to a USB power adapter (not included).
- The charging indicator light will illuminate during charging and turn off once fully charged.
- A full charge takes approximately 3 hours (using a 5V/500mA power source).
- The speaker provides up to 10 hours of playback time, depending on volume level and audio content.




Image: Side view of the JBL CLIP 4 speaker, highlighting the USB-C charging port and the "CLIP4" branding.

## **WATERPROOF AND DUSTPROOF (IP67)**

---

The JBL CLIP 4 is rated IP67, meaning it is fully waterproof and dustproof.

- It can be immersed in water up to 1 meter (3.3 feet) for up to 30 minutes.
- It is protected against dust ingress.
- Ensure the charging port cover is securely closed before exposing the speaker to water or dust.

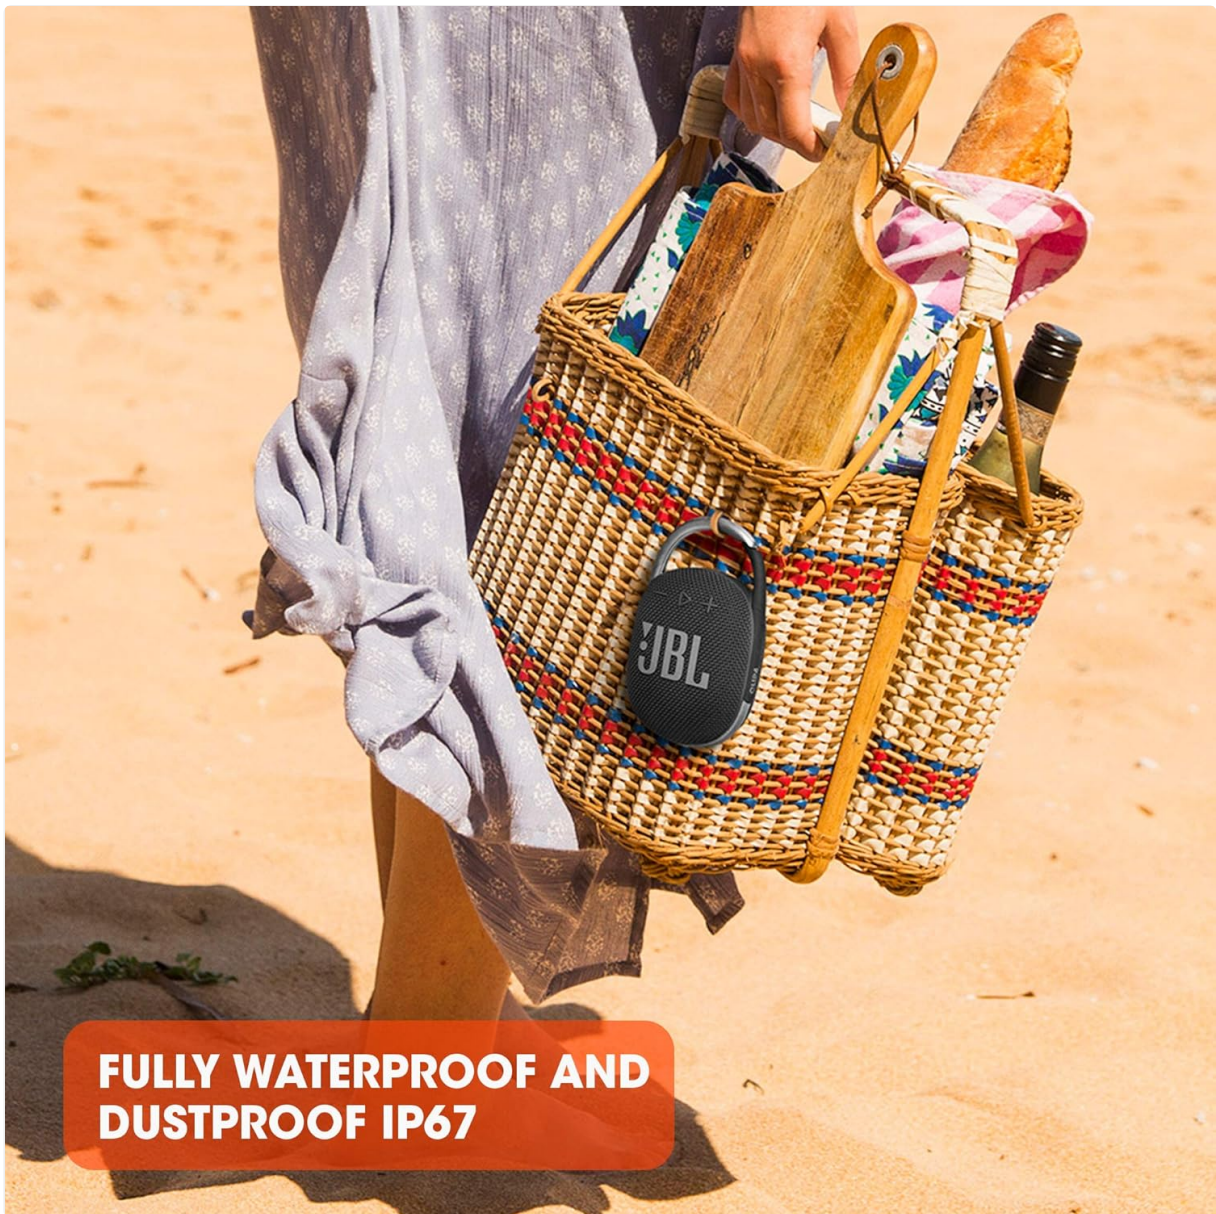

**FULLY WATERPROOF AND  
DUSTPROOF IP67**

Image: A JBL CLIP 4 speaker in black, clipped to a picnic basket on a sandy surface, demonstrating its outdoor use near water.

## SPECIFICATIONS

<b>Output Power</b>	5 W RMS
<b>Frequency Response</b>	100 Hz – 20 kHz
<b>Signal-to-Noise Ratio</b>	> 85 dB
<b>Battery Type</b>	Lithium-ion polymer 3.885 Wh
<b>Battery Charge Time</b>	3 hours (5V/500mA)
<b>Music Playtime</b>	Up to 10 hours (varies by volume level and audio content)
<b>Bluetooth Version</b>	5.1
<b>Bluetooth Profiles</b>	A2DP 1.3, AVRCP 1.6
<b>Bluetooth Transmitter Power</b>	≤ 10 dBm (EIRP)
<b>Dimensions (W x H x D)</b>	86.3 mm x 134.5 mm x 46 mm

<b>Weight</b>	0.239 kg (8.43 ounces)
<b>Waterproof Rating</b>	IP67

## TROUBLESHOOTING

---

### No Power

- Ensure the battery is charged. Connect the speaker to a power source using the USB Type-C cable.
- Press and hold the Power button for a few seconds to ensure it's not just in standby.

### Cannot Connect via Bluetooth

- Make sure the speaker is in Bluetooth pairing mode (flashing LED).
- Ensure Bluetooth is enabled on your source device.
- Move the speaker closer to your source device.
- Try unpairing and re-pairing the speaker from your device's Bluetooth settings.
- If multiple devices are connected, disconnect others or try pairing in a less congested area.

### Poor Sound Quality

- Ensure the speaker and your device are within Bluetooth range (up to 10 meters).
- Check for obstructions between the speaker and your device.
- Adjust the volume on both the speaker and your source device.
- Ensure the speaker is not covered or placed in a way that obstructs the sound output.

## WARRANTY AND SUPPORT

---

The JBL CLIP 4 comes with a limited warranty of 12 months. For detailed warranty information, product support, or service inquiries, please visit the official JBL website or contact your local authorized dealer.

**Online Support:** Visit [JBL Support](#) for FAQs, troubleshooting guides, and contact information.